

Automation upgrade

LTR-7 ECC -> eWind

NOTE!

Fan rotation guards must be disabled in the new eAir settings.

Warning!

According to regulations, an ordinary electricity consumer is only allowed to perform some minor service tasks.

**According to Finnish regulations,
a list of the allowed tasks can be found at the Tukes home page (www.tukes.fi).**

Always make sure that the power supply is turned off before opening the service door.

Wait two minutes before beginning the maintenance work. The fans rotate for some time by themselves, and the heating element may be hot even if the power supply of the ventilation unit is switched off. Electrical housing may be opened only by a trained electrician.

Electrical installations must comply with local regulations.

**Continuously check and compare the electrical diagrams at the end
of this instruction as the upgrade progresses!**

Table of contents

Upgrade.....3


Electrical diagrams ECC35

Electrical diagrams eWind37


Parts list eWind E41

Notes42

Remove **the service door (1)** by releasing the locks.

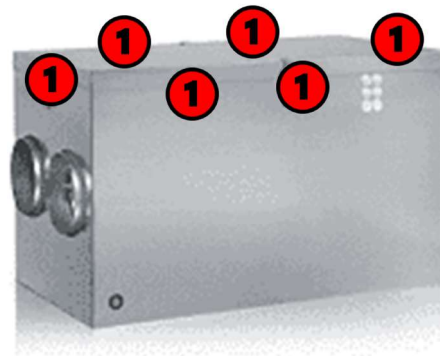

Cut **the power to the unit (2)** (and other power supplies if available).

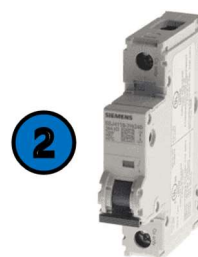

Remove **the cover to the electrical box (3)**.

NOTE! Ensure that no voltage is occurring in the electrical box before proceeding!






Remove **the filters (1)** by pulling.

Disconnect **the fan connectors (2)**.


Disconnect **the HRW connector (3)**.

Remove **the HRW (4)** by pulling.

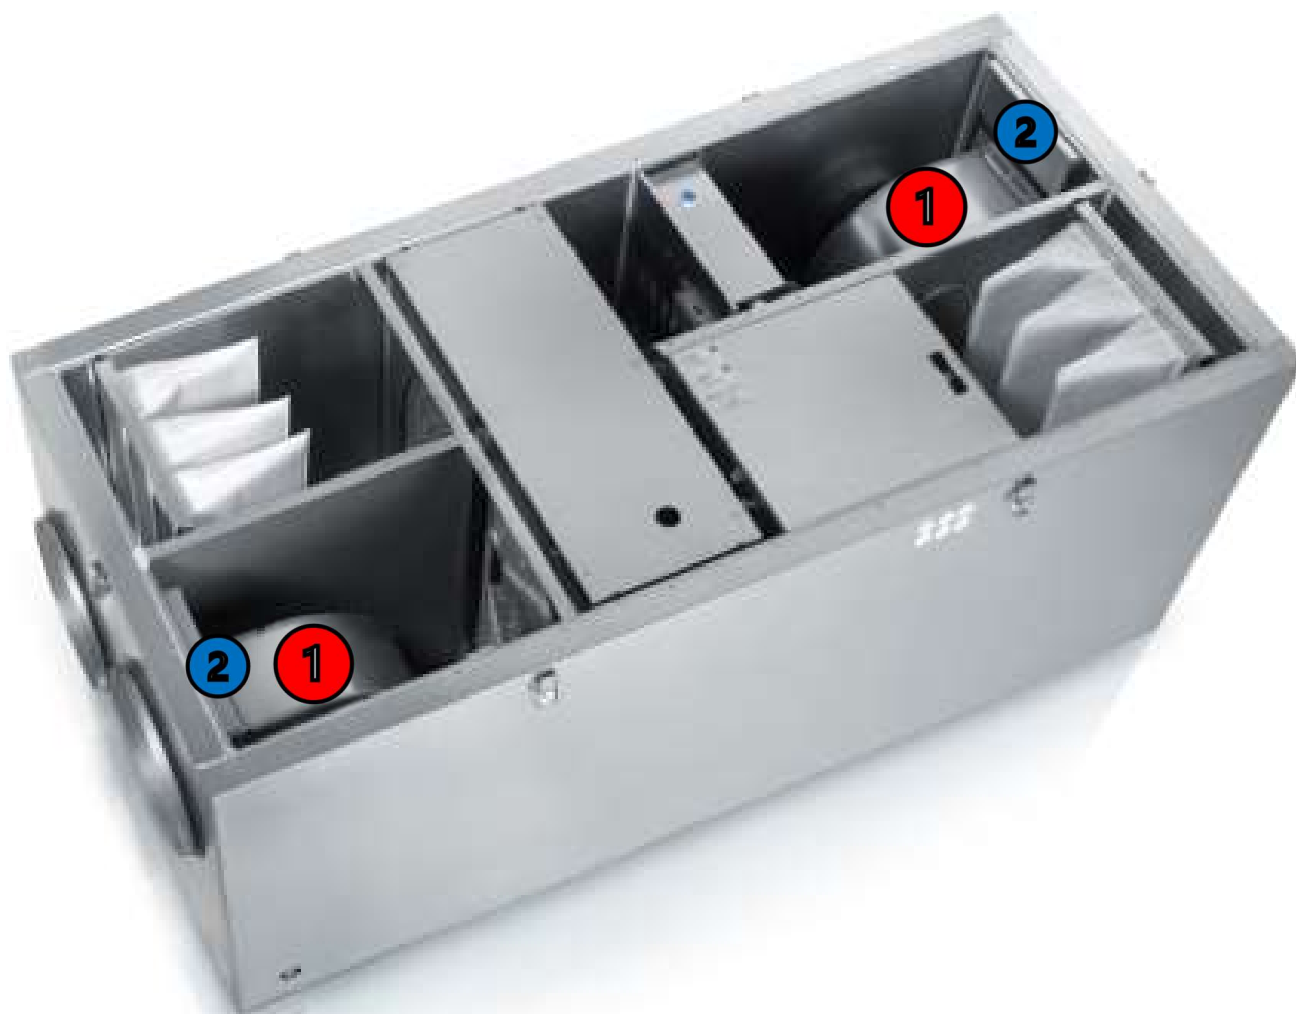


Remove **the fans (1)** by releasing **the fan rail locking parts (2)**.


Remove **the main switches (1)** by pressing **the clips (2)**.
Disconnect **the wires (3)** from the switches.

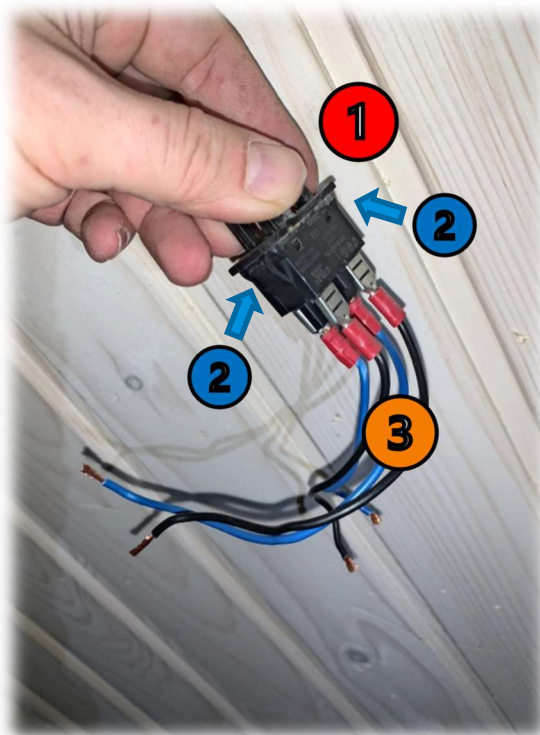


Disconnect **the power wires (4)**.
Disconnect and remove **the main switch wires (5)**.

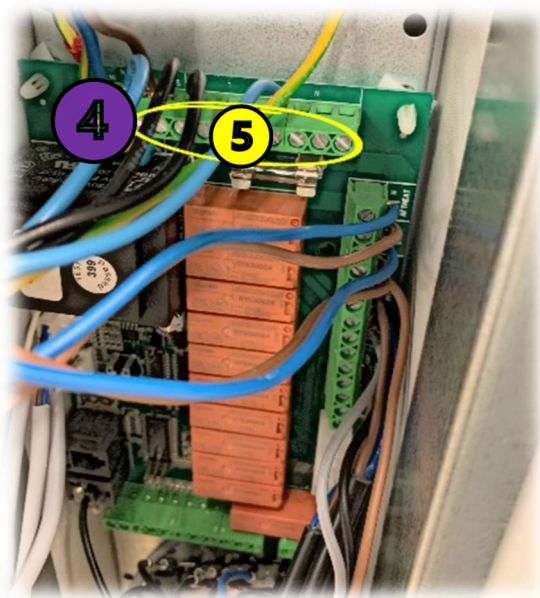

Disconnect the main power supply wires from **the terminals (1)**.

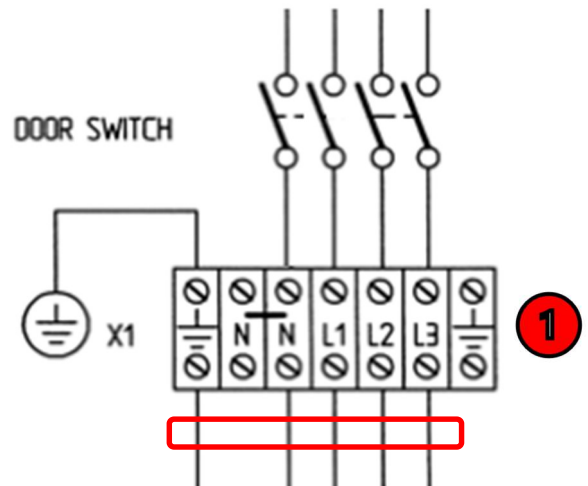


Disconnect **all ground wires (2)** from the ground point.

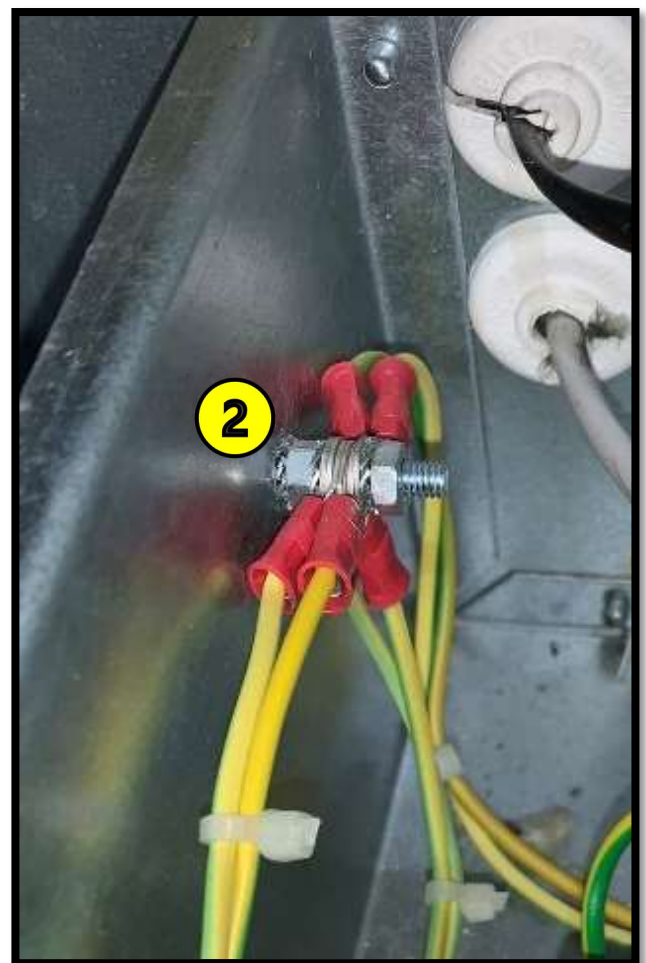

Disconnect **the wires (1)**.


Disconnect **the connector (2)**.

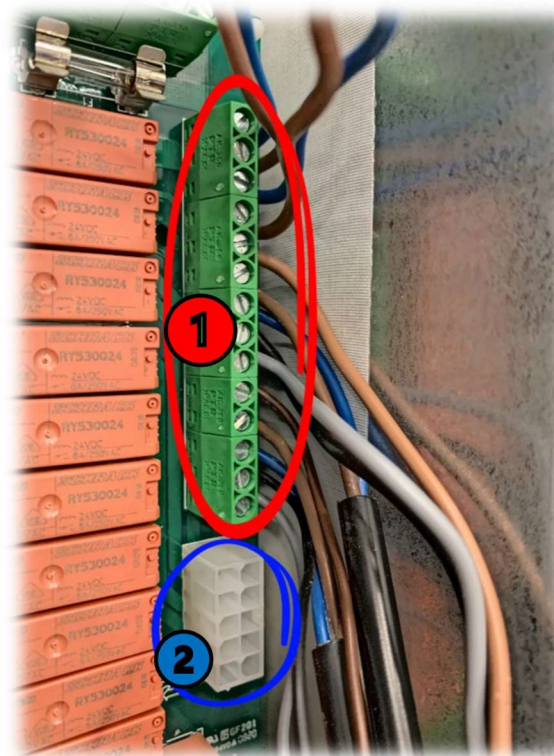

Disconnect **the sensors (3)**.


Disconnect **the connector (4)**.

Disconnect **the display cable (5)**.

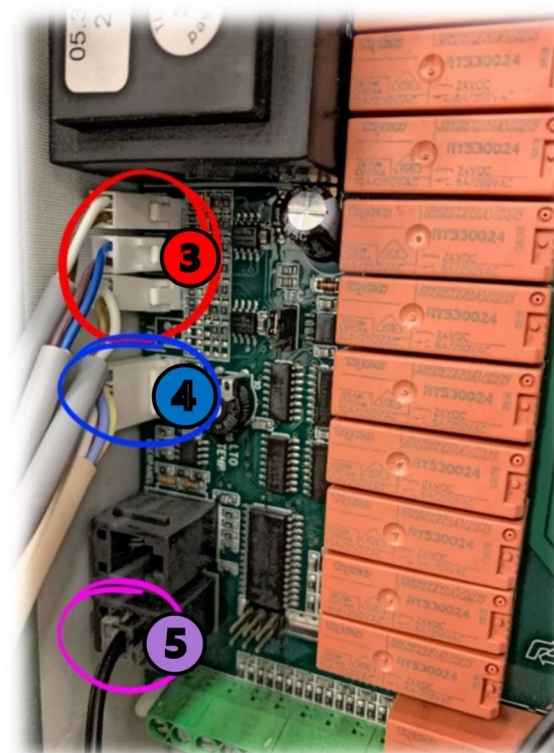

If there are wires connected **here (1)**, mark them according to the reading on the main board and disconnect.

Remove the screws and the automation base incl. terminals, main board and **transformer (2)**.

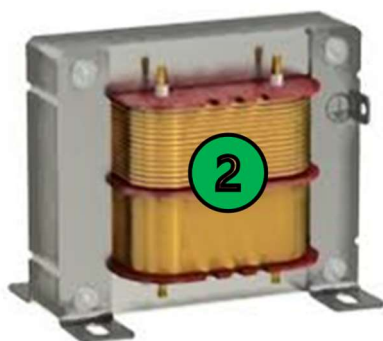

Remove **the supply air sensor (3)**.
Ignore if no after heater installed.

Remove **the supply air fan cable (4)**.




Remove *the HRW supply air sensor (1)*.



Remove *the electrical after heater and the cables (2)* by pulling.
Ignore if no after heater installed.




If the unit has an electrical after heater installed;
Disconnect and remove
the pressure difference switch (1).
Disconnect but **don't uninstall** **the pressure hoses (2).**
Ignore if no after heater installed.

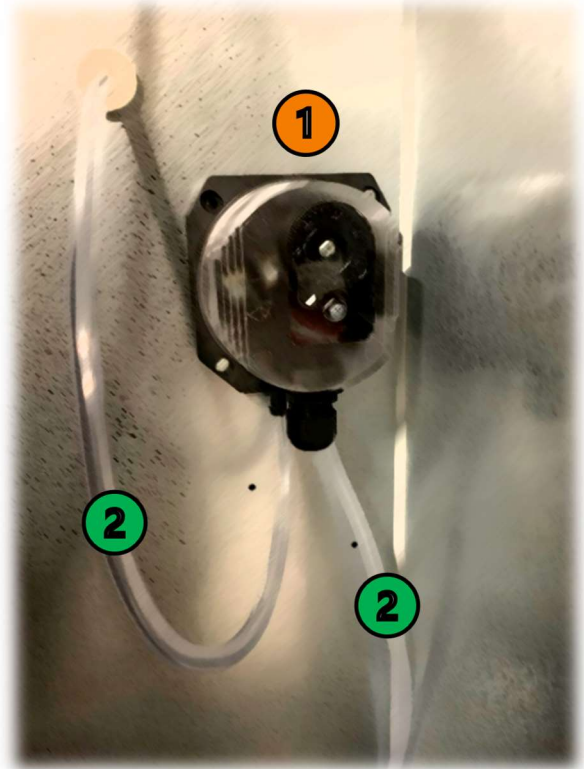

Release **the outside air sensor (4).**

Remove **the cable sealings (3).**

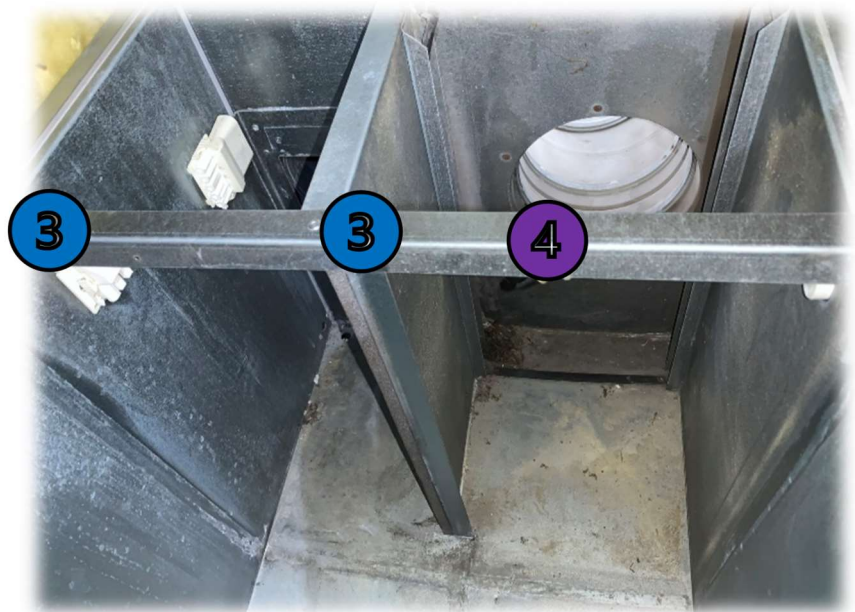



Attach **the new sensors (2400mm, 1700mm)**
(1) (40029170, 40029167)
to **the old sensor (2)** with strong tape.

Mark the new sensors in both ends:


"TE01" (outside air) (40029170)

"TE32" (waste air) (40029167)



Remove **the cable sealings (1)**.

Install **the new sensor connectors**
(40029170, 40029167) **into the electrical box (2)**.

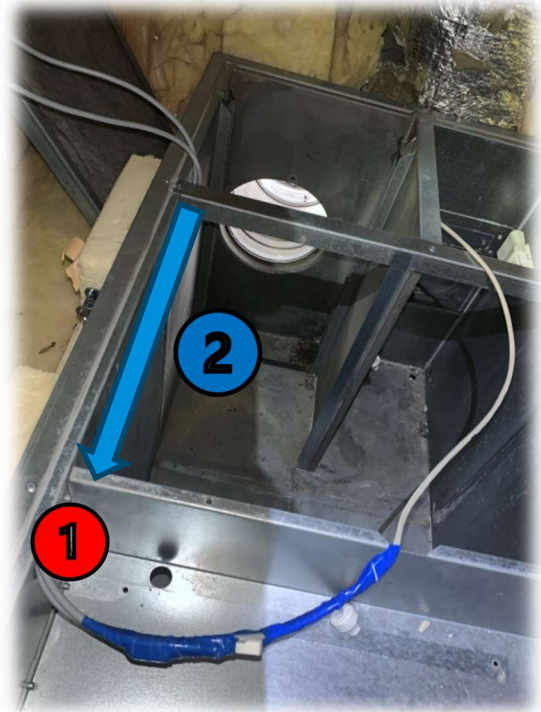

Install **new cable sealings (3)** (40030100).




Install **new cable sealings (3)** (40030100).

Attach the sensors to **the frame (4)** with cable ties (40030997).



Install **the new HRW supply air sensor (850mm) (5)** (40029165).

Mark the sensor:
"TE05" (HRW supply air)

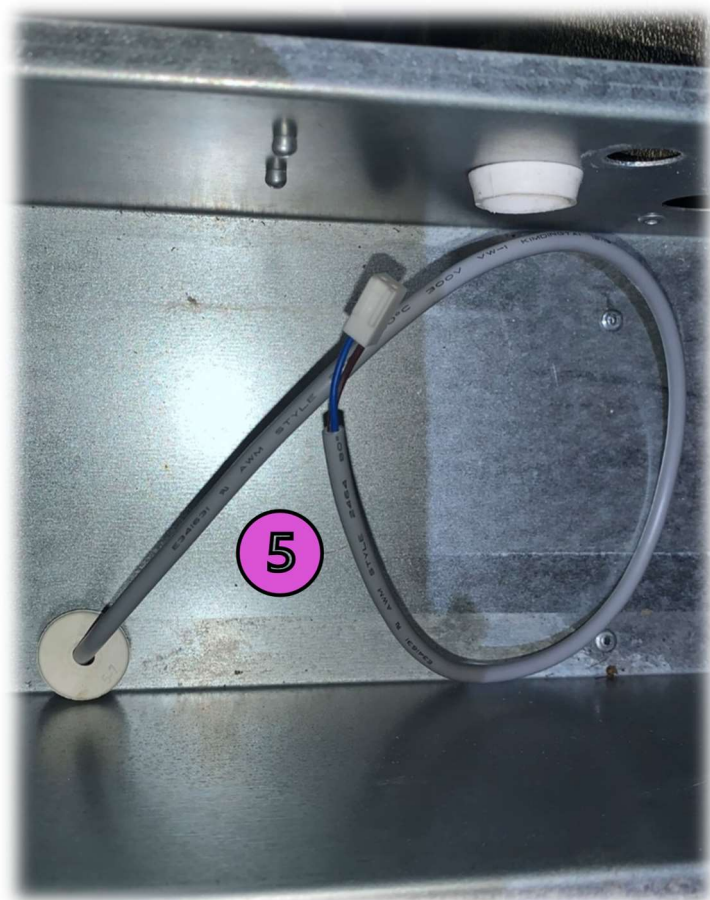

Install **the new supply air sensor (2400mm) (4)** (40029170).

Mark the sensor:
"TE10" (supply air)





Remove **the cable sealing (1)**.

Cut **the old HRW cable (3)**.

Install **a new cable sealing (40029244)**
to the new HRW cable (2) (40028738).

Attach **the new HRW cable (2)**
(40028738) to **the old HRW cable (3)**
with strong tape.

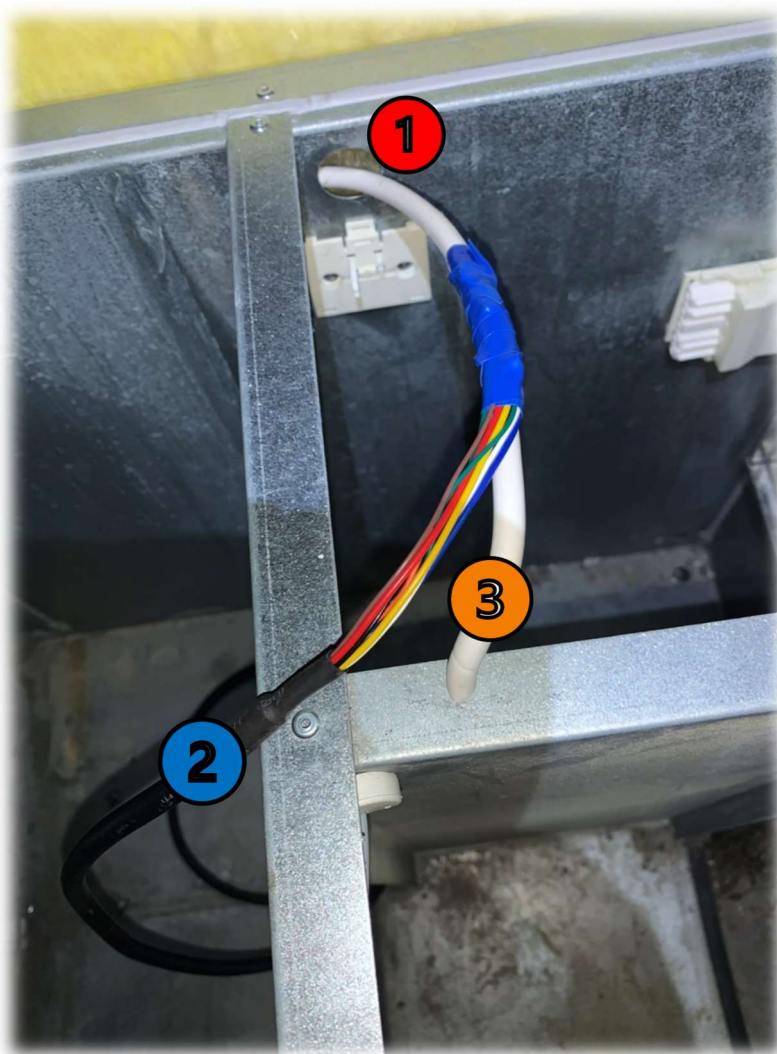

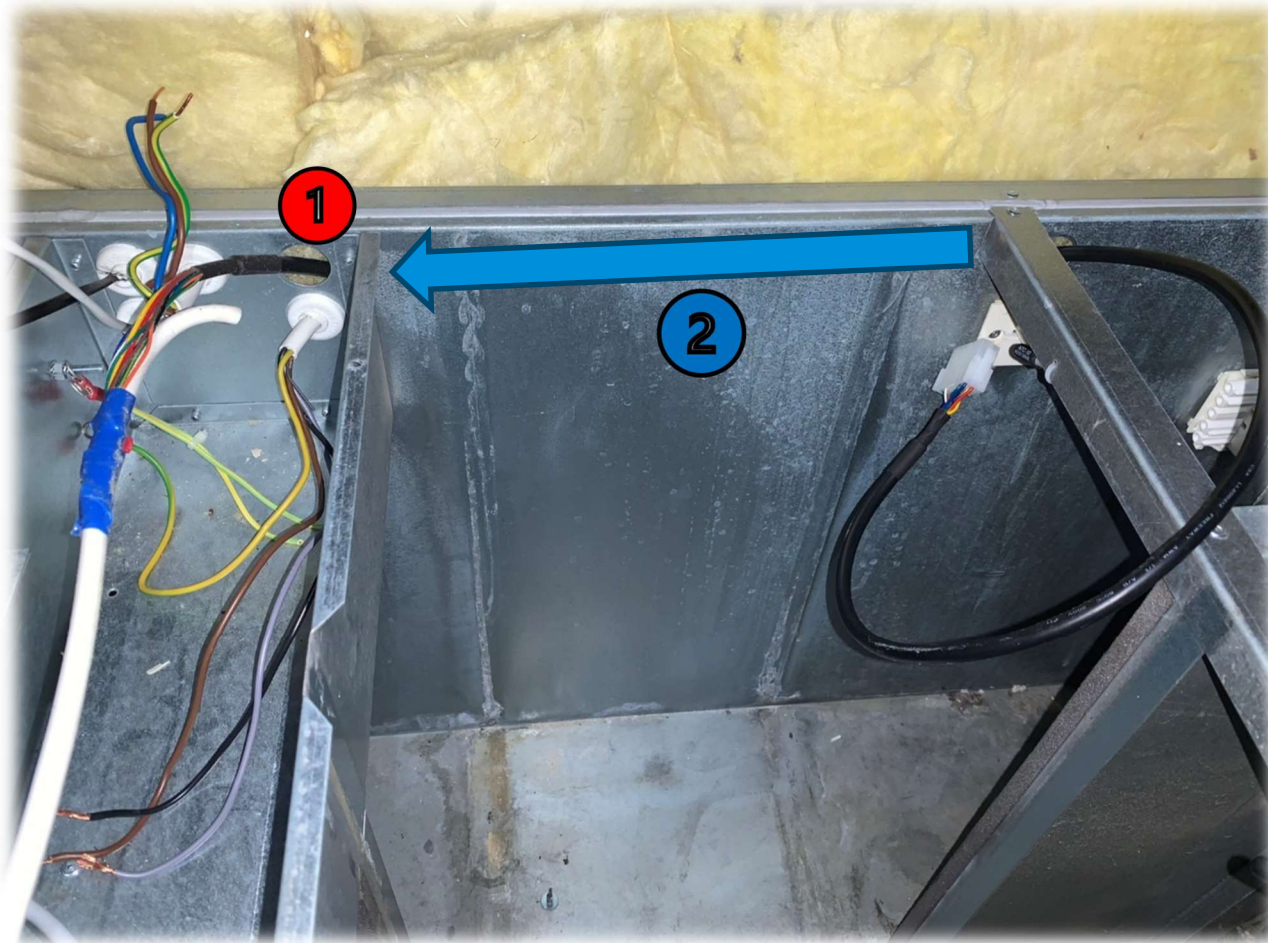

Remove **the cable sealing (1)**.

Install **the new HRW cable (40028738) into the electrical box (2)**.

Install **a new cable sealing (1) (40029244)**.



Remove **the cable sealing (1)**.

Cut **the old extract air fan cable (3)**.

Install **a new cable sealing (40029244) to the new extract air fan cables (2) (40028803, 40028802)**.

Attach **the new extract air fan cables (2) (40028803, 40028802)**
to **the old extract air fan cable (3)** with strong tape.



Remove **the cable sealing (1)**.

Install **the new extract air fan cables (2)** (40028803, 40028802) **into the electrical box (2)**.

Install **a new cable sealing (1)** (40029244).



New cables installed.

Install **the new supply air fan cables (1)**
(40028803, 40028802).

Install **the new electrical after heater (2)**
(10023273 / 10023272)
and install the cables in the electrical box.
Ignore if no after heater installed.

Install **the new extract air sensor (4)**
(40029224).



If electrical after heater installed:

Install **the new pressure difference switch (5)**
(40034055) and connect it
with the wires (40028781) to the mainboard
according to **the electrical diagram (page 39)**.
Connect the pressure hoses to the switch:

(-) in airflow before supply air fan
(+) in airflow after supply air fan







Install **the new automation** in the electrical box.

Make sure no installed cable / sensor get stuck behind the automation base and that they are available in front of the main board.

Attach **the automation base** (40029740) to the electrical box with **four self tapping screws (1)** (40031530).

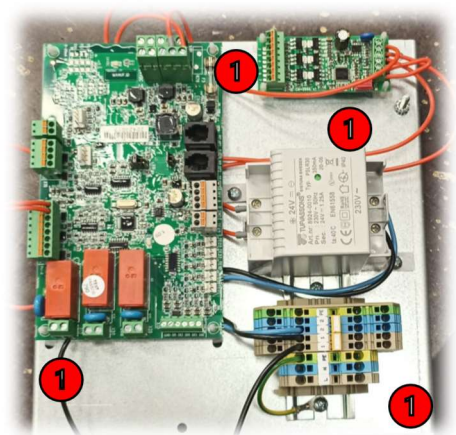

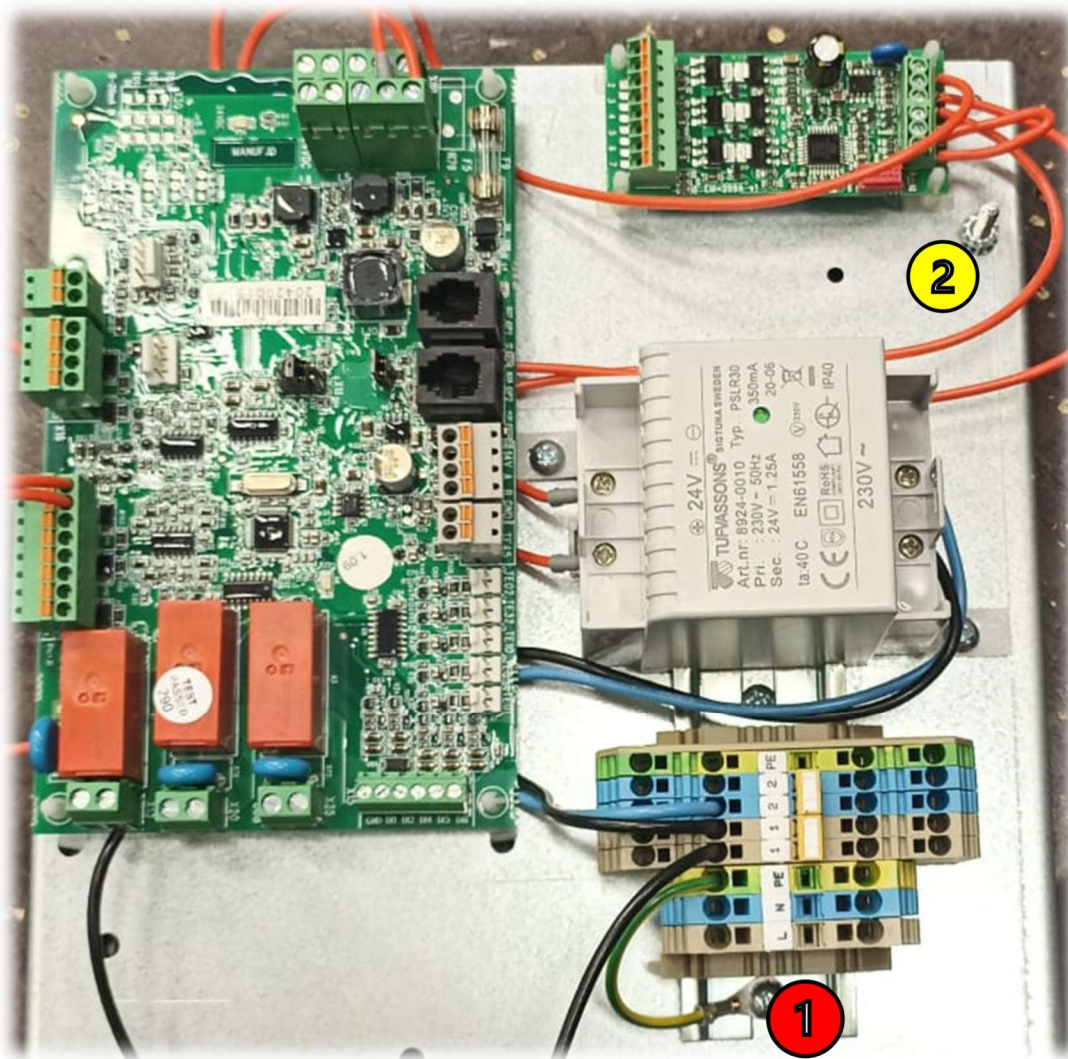


Connect **the main power cable to the terminals (1).**

Connect **all ground wires to the automation base ground point (2).**

Supply air fan, extract air fan, (after heater), HRW.

Tighten with **the nut (40031489).**


Connect **the blue wire** from the electrical after heater to **the blue "2" connection terminal (2)**.
Ignore if no after heater installed.

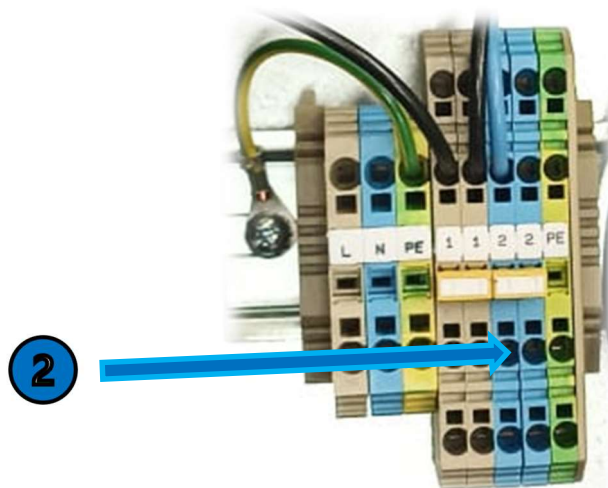


Connect **the brown wire** from the electrical after heater to **the pressure difference switch (COM) (1)**.
Ignore if no after heater installed.




Connect a black wire (40028780) from **the pressure difference switch (NO)** to **DO2 (2)**.
Ignore if no after heater installed.

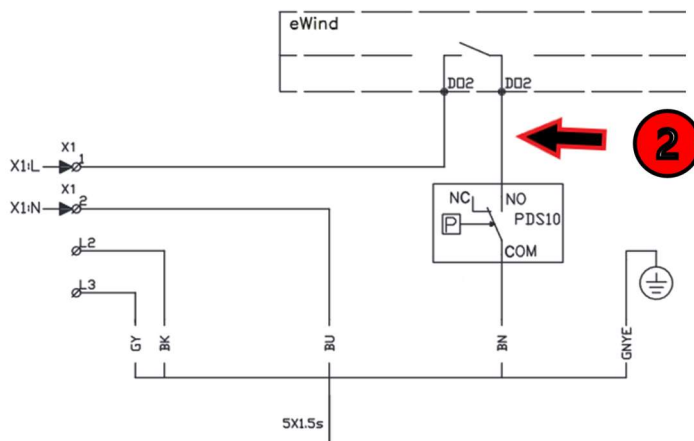


Connect a black wire (40028780) from **connection terminal "1"** to **DO2 (2)**.
Ignore if no after heater installed.

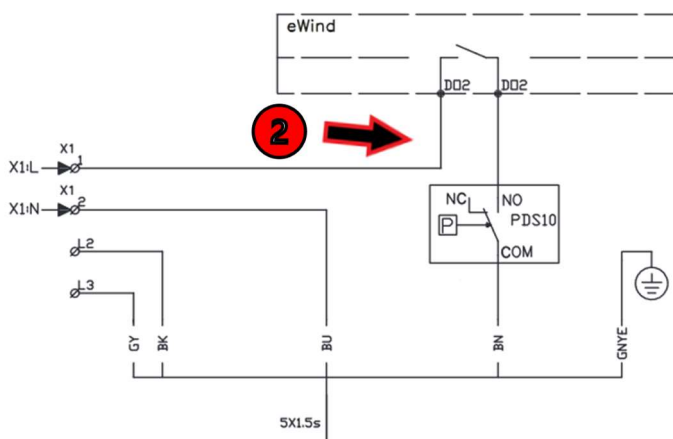

Connect **the wires marked "1"** in the fan power cables (40028803) to **connection terminal "1"** (1).

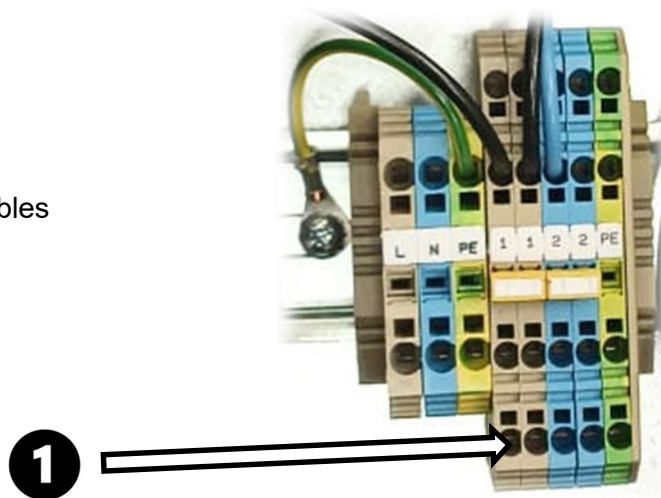

Connect **the wires marked "2"** in the fan power cables (40028803) to **the blue "2" connection terminal (2)**.

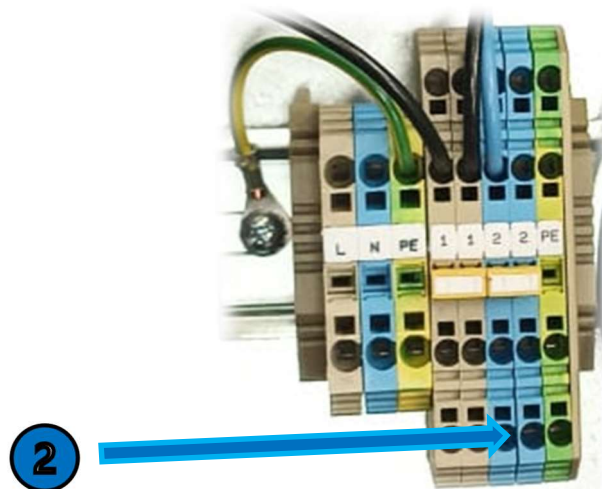


Connect **the extract air sensor (3)** (40029224) to the main board (X29).



Connect **the sensors (1)** to the main board according to the markings.

TE01: Outside air (40029170)
TE05: HRW supply air (40029165)
TE10: Supply air (40029170)
TE32: Waste air (40029167)

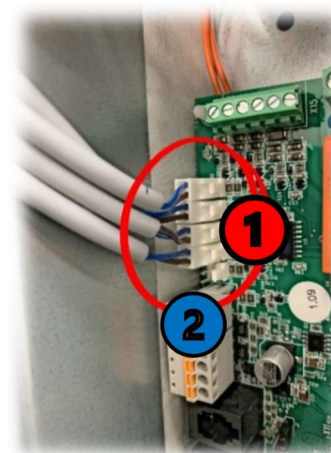

Connect **the wires from the supply air fan control cable (2)** (40028802) to the main board.

- 1: Brown
- 2: Black
- 3: Gray



Connect **the wires from the extract air fan control cable (3)** (40028802) to the main board.

- 4: Brown
- 5: Black
- 6: Gray



Connect **the wires from the HRW cable (40033952) to the HRW control board (1).**

1: Yellow

2: Red

3: Blue


4: White

5: Black

6: Brown

7: Green


8: Orange

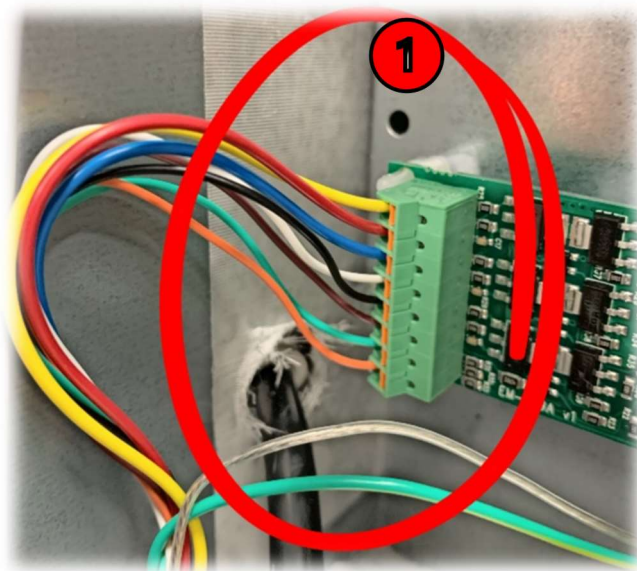


Connect **the after heater control cable (1)** to the main board (X17).

Ignore if no after heater installed.

Connect other components according to the electrical diagrams (pages 37-40).

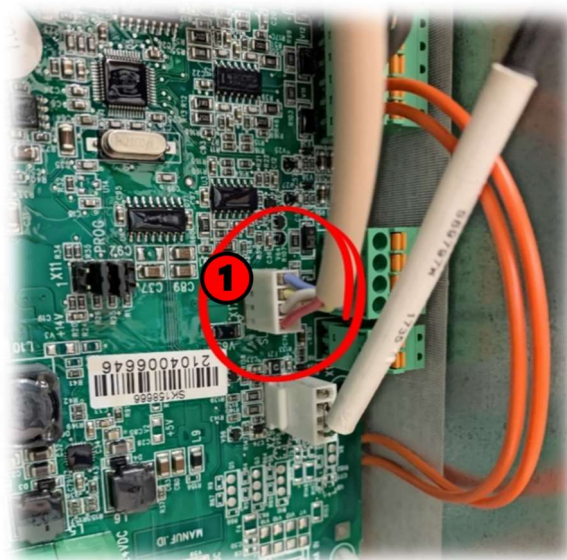

Connect **the pairs of wires with flat connectors**, (40028820, 40028819) to **the main switch (1)**, install the main switch and connect the wires to **the connection terminals (2)**.

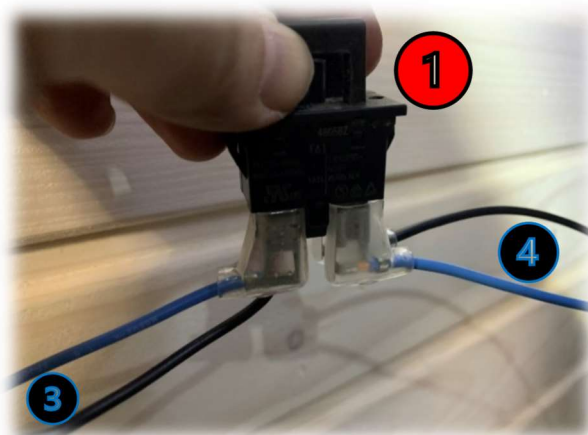


L1: Black (3)

N: Blue (3)


1: Black (4)

2: Blue (4)

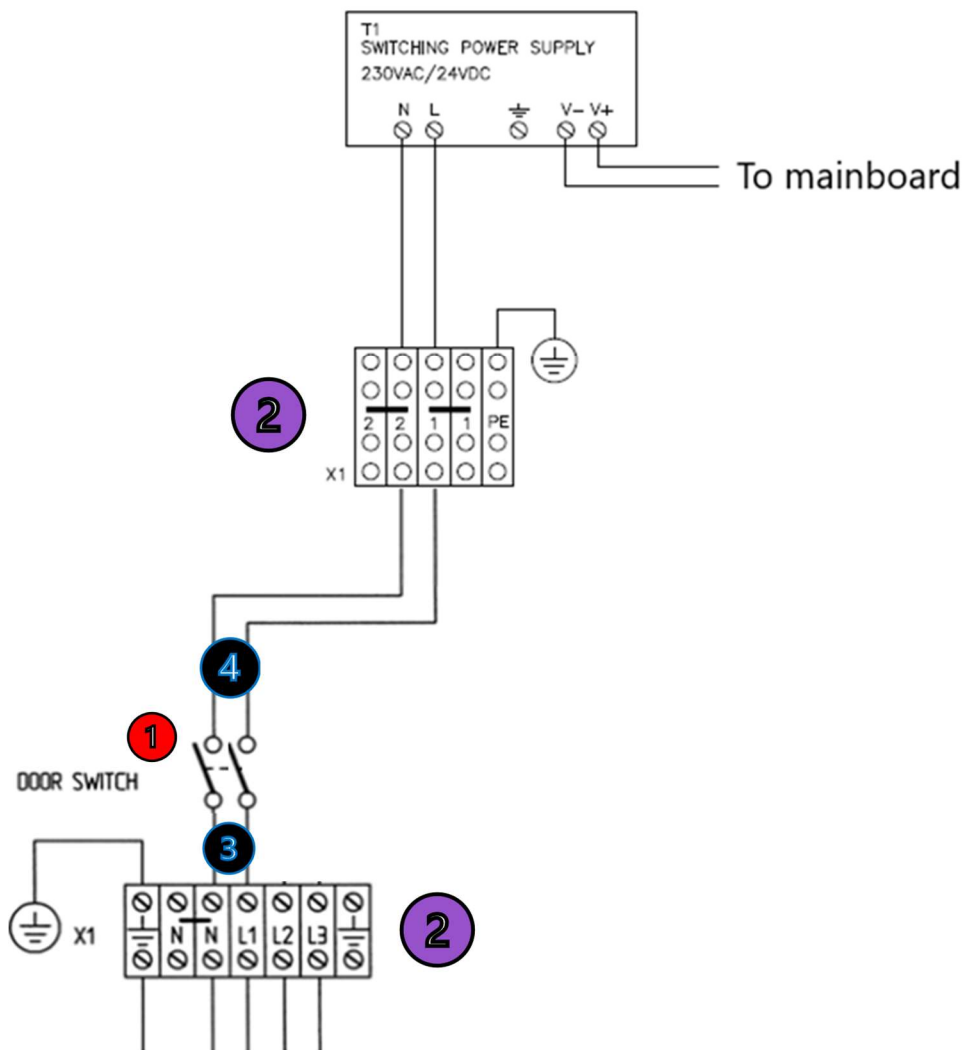

If electrical after heater installed:

Connect **the other pairs of wires with flat connectors**, (40028820) to **the after heater switch (2)**, install the switch and connect the wires to **the connection terminals (5) & (6)**.

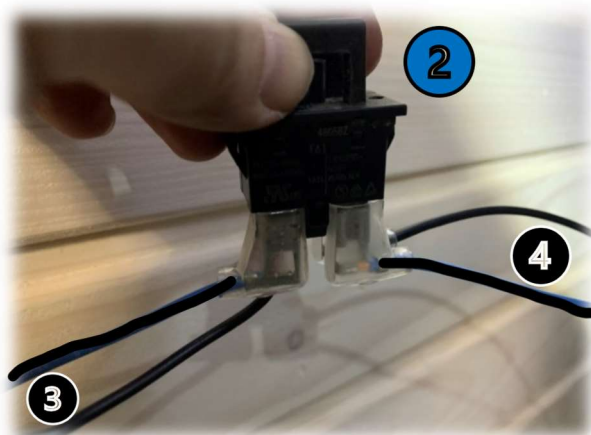


L2: Black (3)

L3: Black (3)

L2: Black (4)

L3: Black (4)

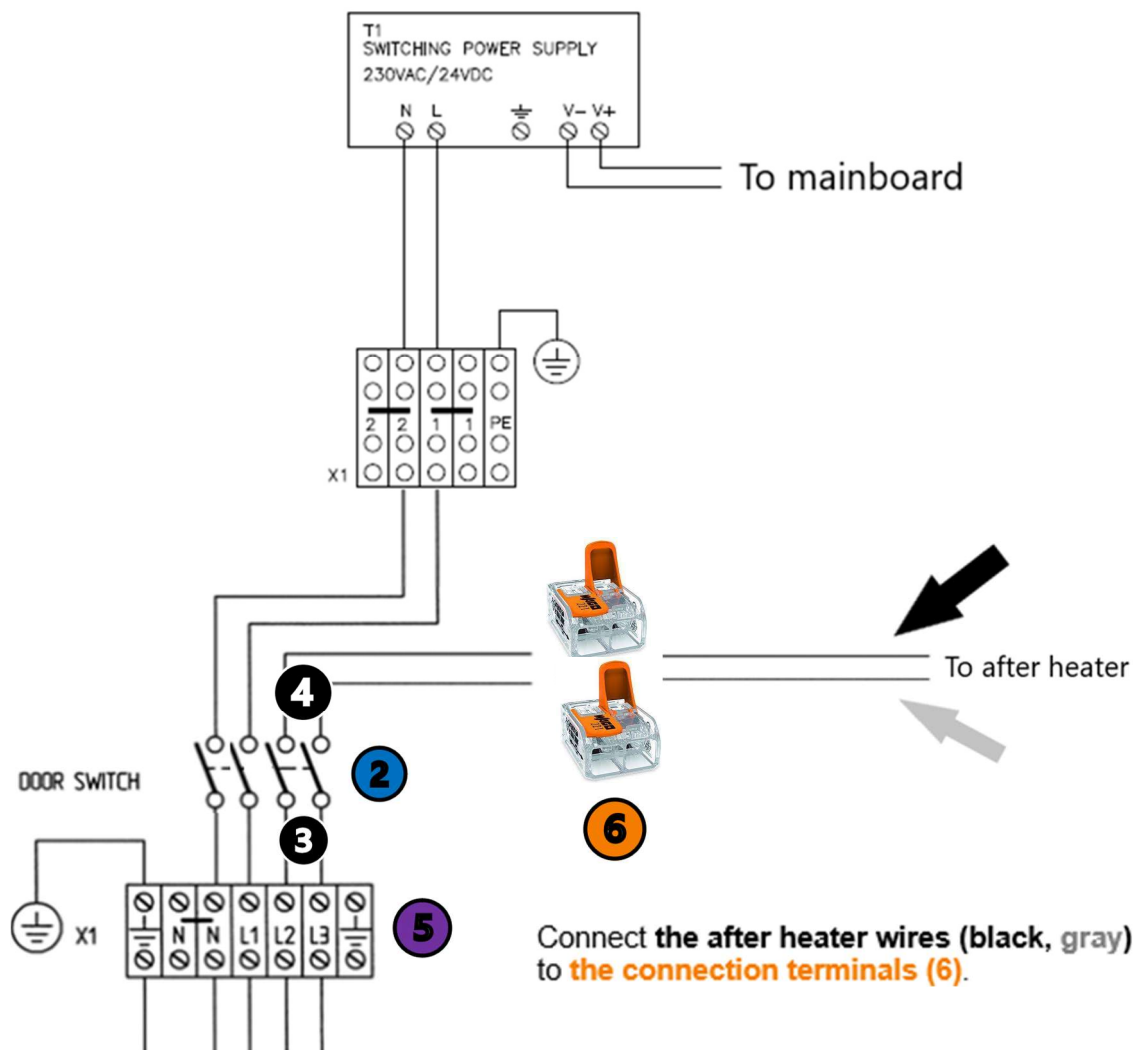




Install and connect **the new fans (1)** (10023152) / (10023151) / (10023144)
and **the fan rail locking parts (2)**.


Remove **the screws (1)** from the HRW cover.



Remove **the belt (1)** from the wheel.
Remove **the screws (2)** from the motor package.
Remove **the ground wire (3)**.

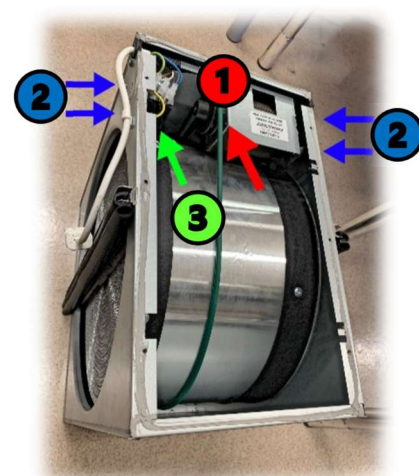


Remove the motor package.
Cut a gap for the new motor cable (2).
Check that **the brush clips (1)** are in place.

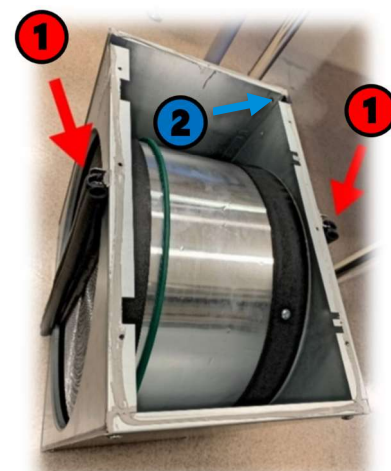


Install **the new motor package (2)** (40028738).
Check that **the brush clips (1)** are in place.

Install the HRW cover.

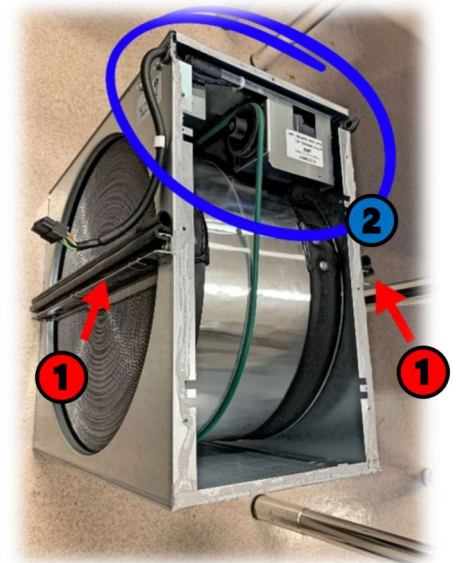

Connect **the new display cable (3)** to the main board.
Close the cover to the electrical box.

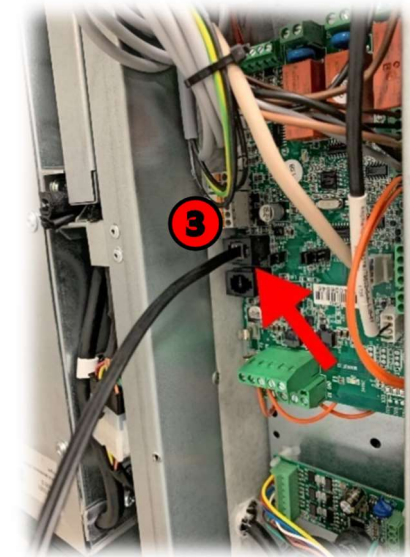

Replace the old display with **the new display (4)** (40031115).



Install **the WiFi module (1)** (40034288).




Install **the new type plate sticker (2)**.


Install and connect **the HRW (3)**.


Install **the filters (4)**.



Press down **the door switch(s) (1)** and perform insulation and ground continuity test according to regulations.

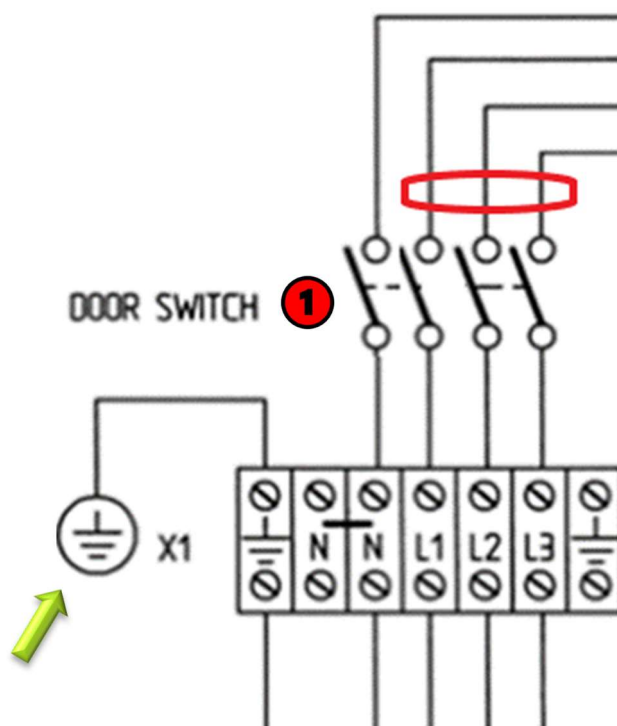


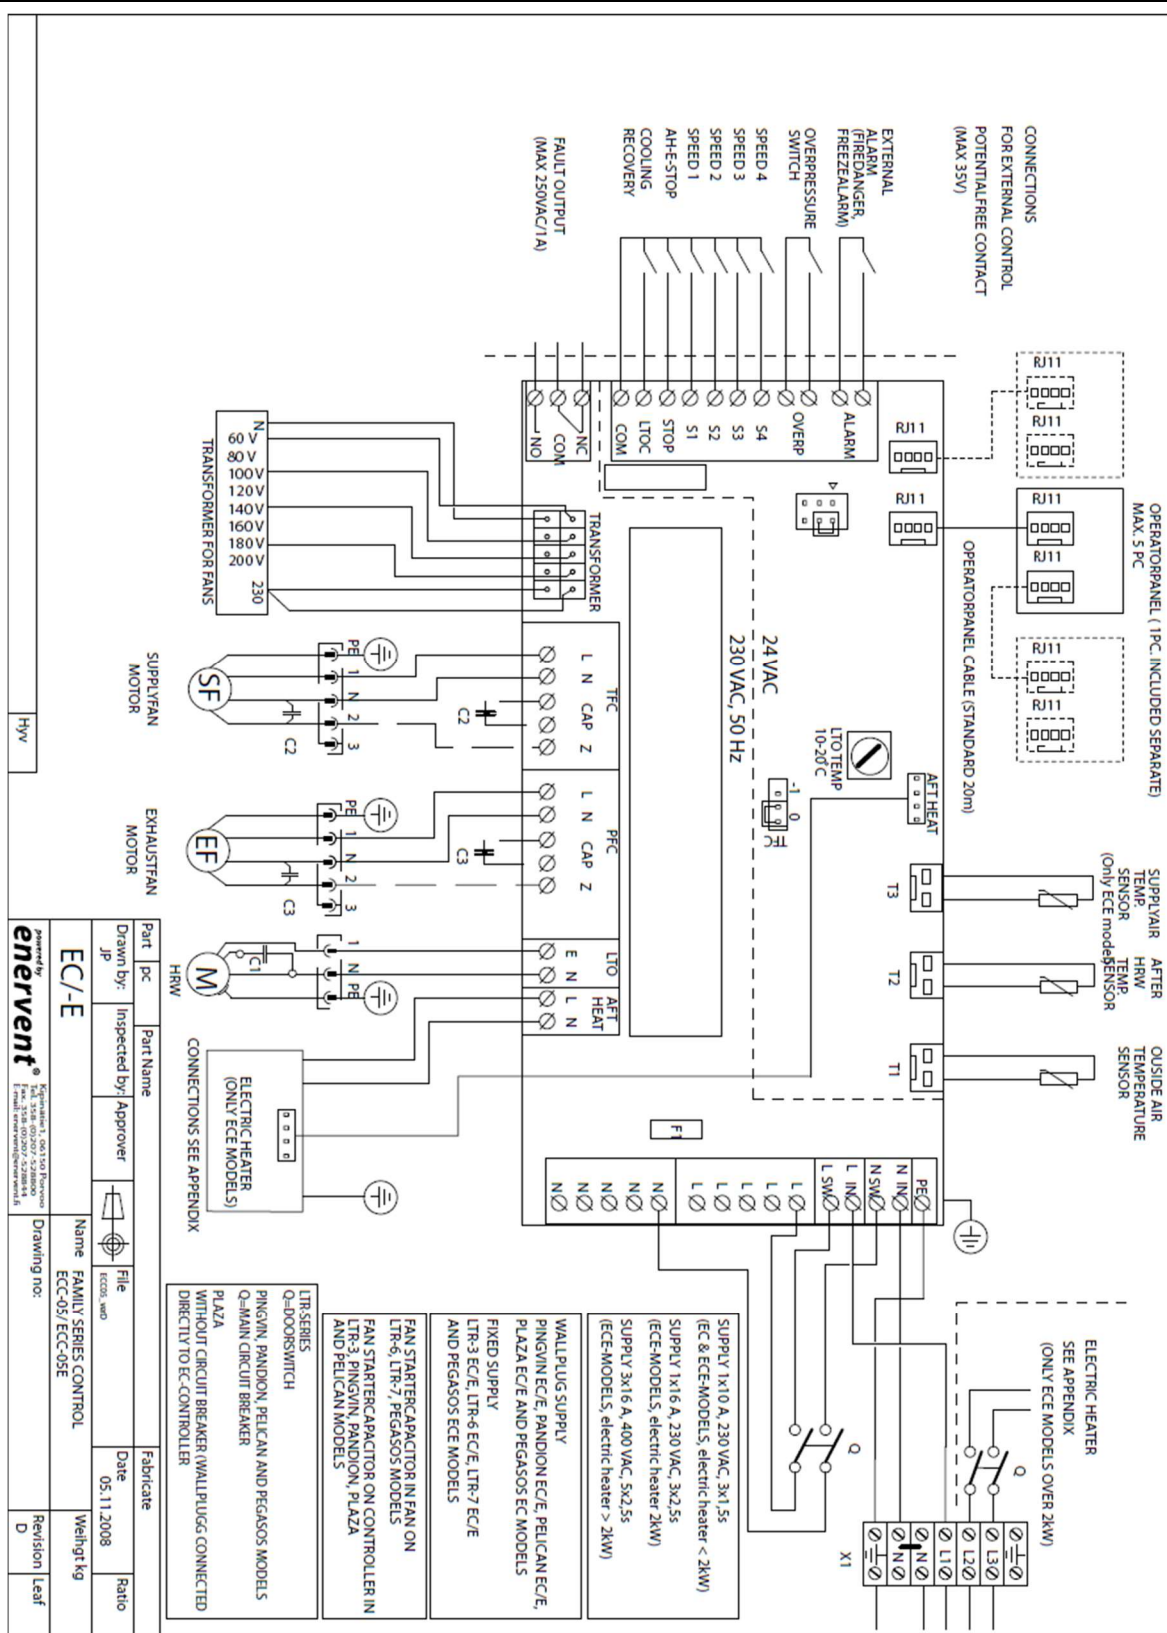


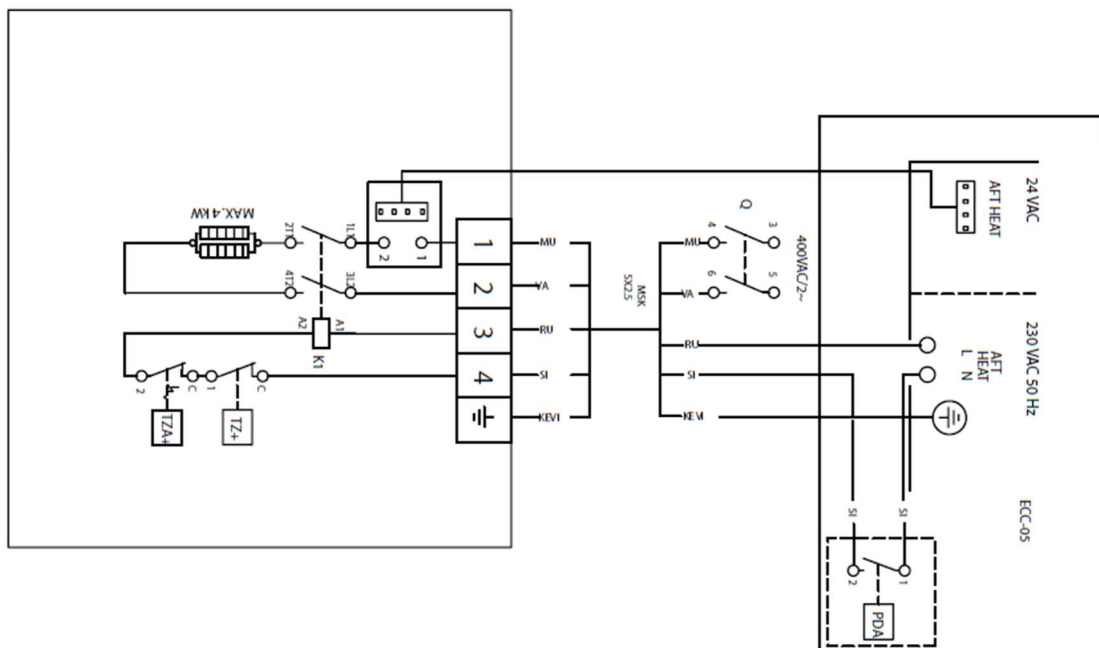



BL=BLUES/BRN=BRN
 SL=SLINNEN/BL=BLUE
 RGY=RELJAHRE/GRJ=GRON/YELLOWGREEN
 MI=MUSTA/STVART/BLACK
 VA=VALKONEN/VIT/WHITE
 LTB=SARJA/SERIEN/SERIES
 Q=QVICK/KIN/DÖRRBRYTARE/DOORSWITCH
 PEGASOS
 Q=QAAKTUN/HUVDBRYTARE/MAINSWITCH

Qsa	Kpl	Osa nimitys	Valmistaja	Suunde
Piirt	Tark	Hv	Pvm	
NEF			04.06.2007	
ECC-05		Nimitys	Paino kg	
ECC-MULTI/MODELLEB/MODELS 3-4 kW				
ECC-MULTI/MODELLEB/MODELS 3-4 kW				
Pir no		LAMMITIN/VARMAE/HEATER		
Muitos		Lehti		

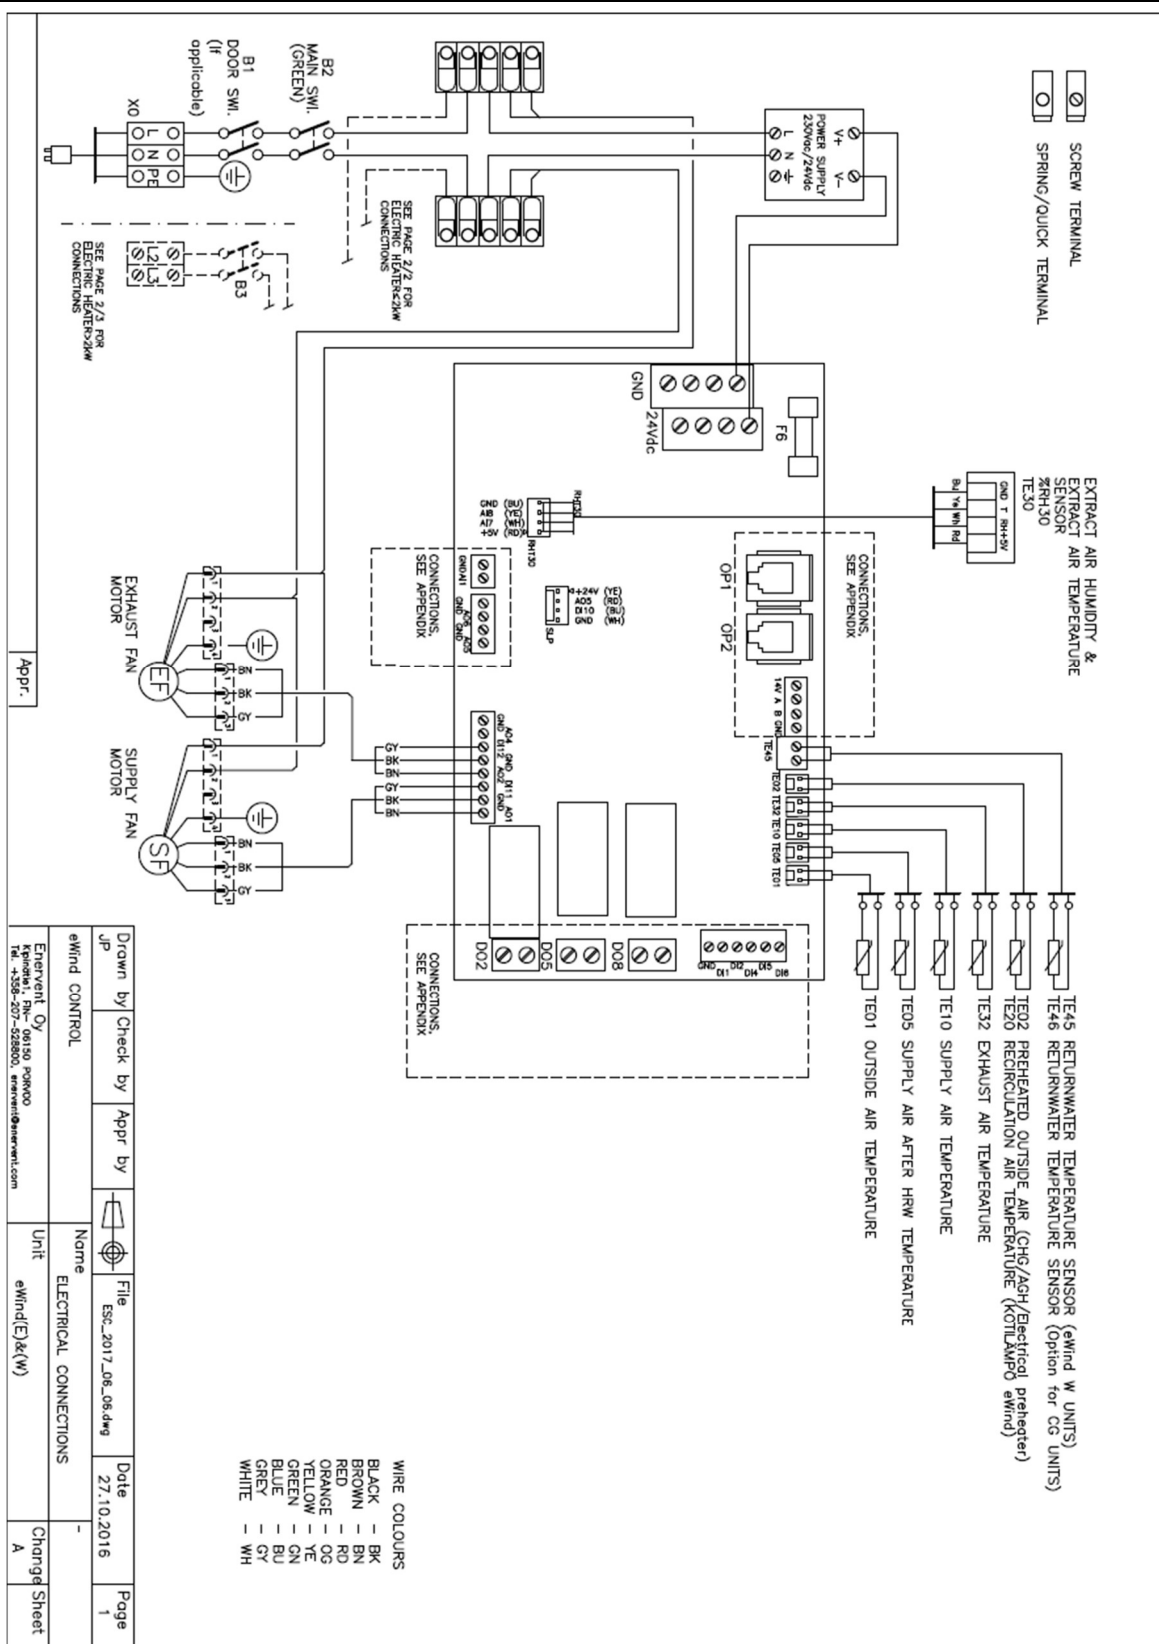

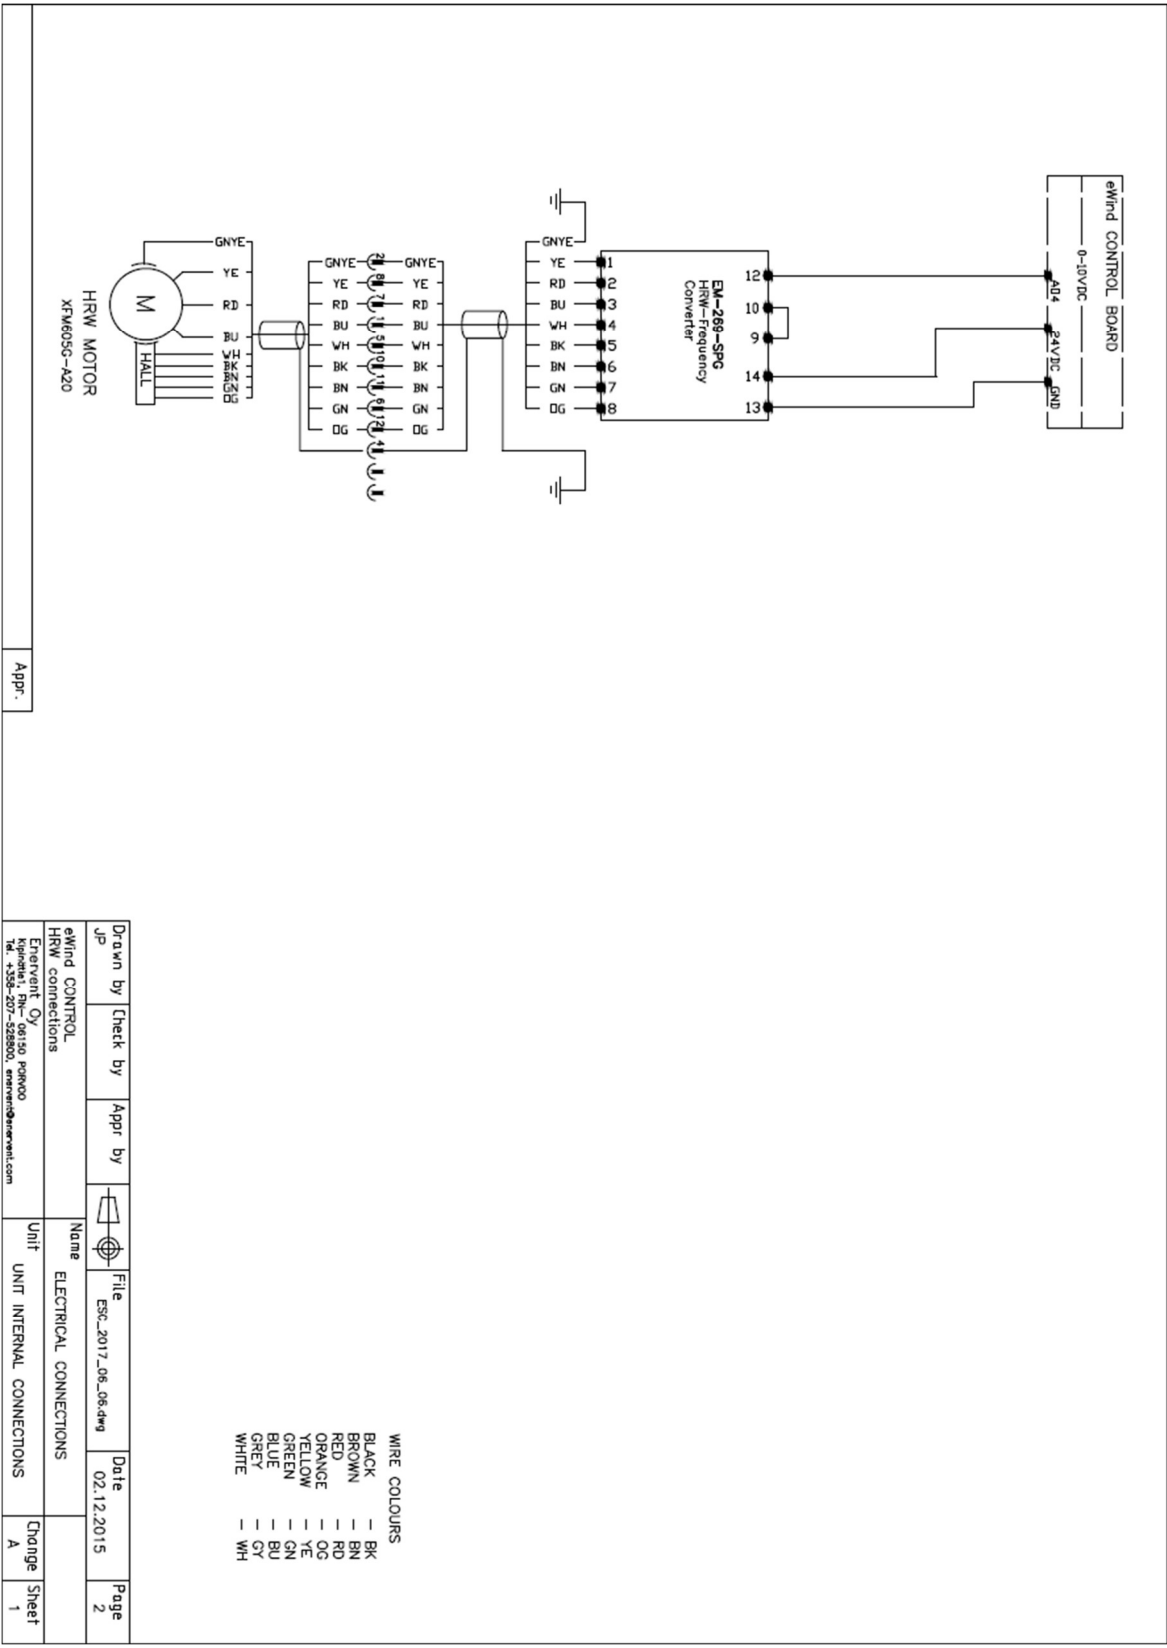

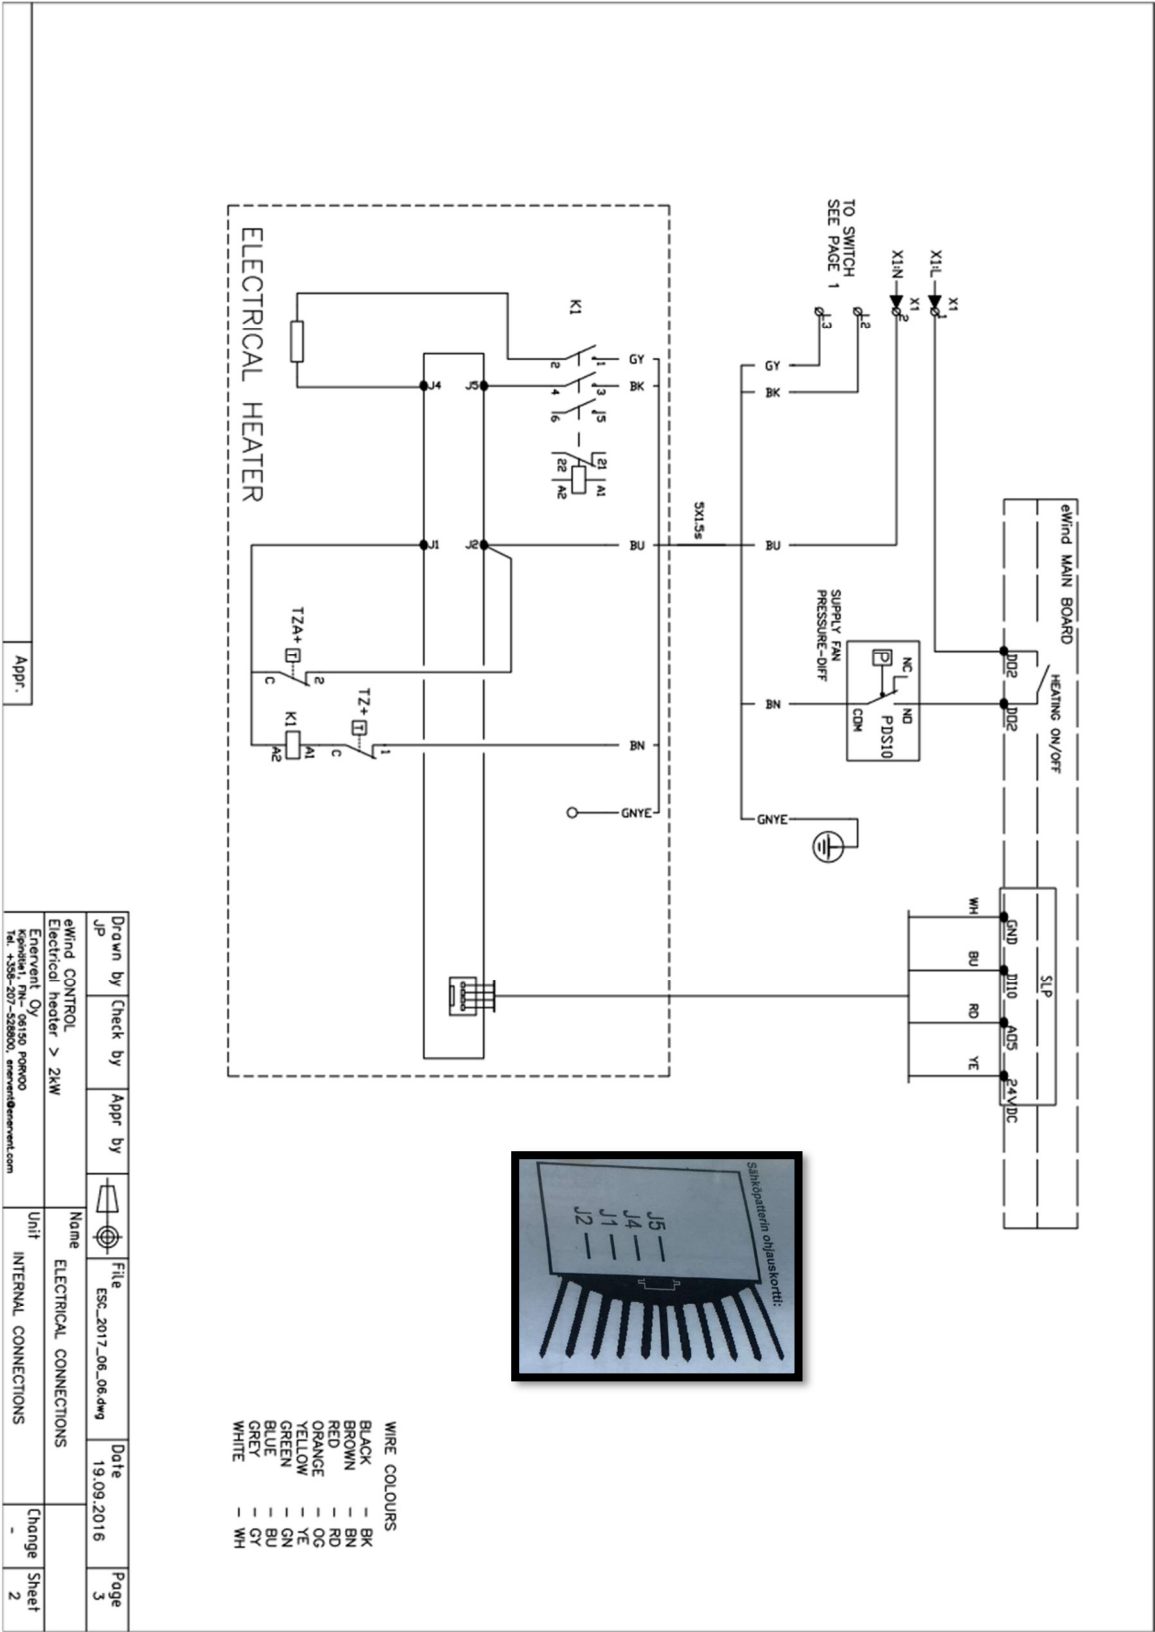

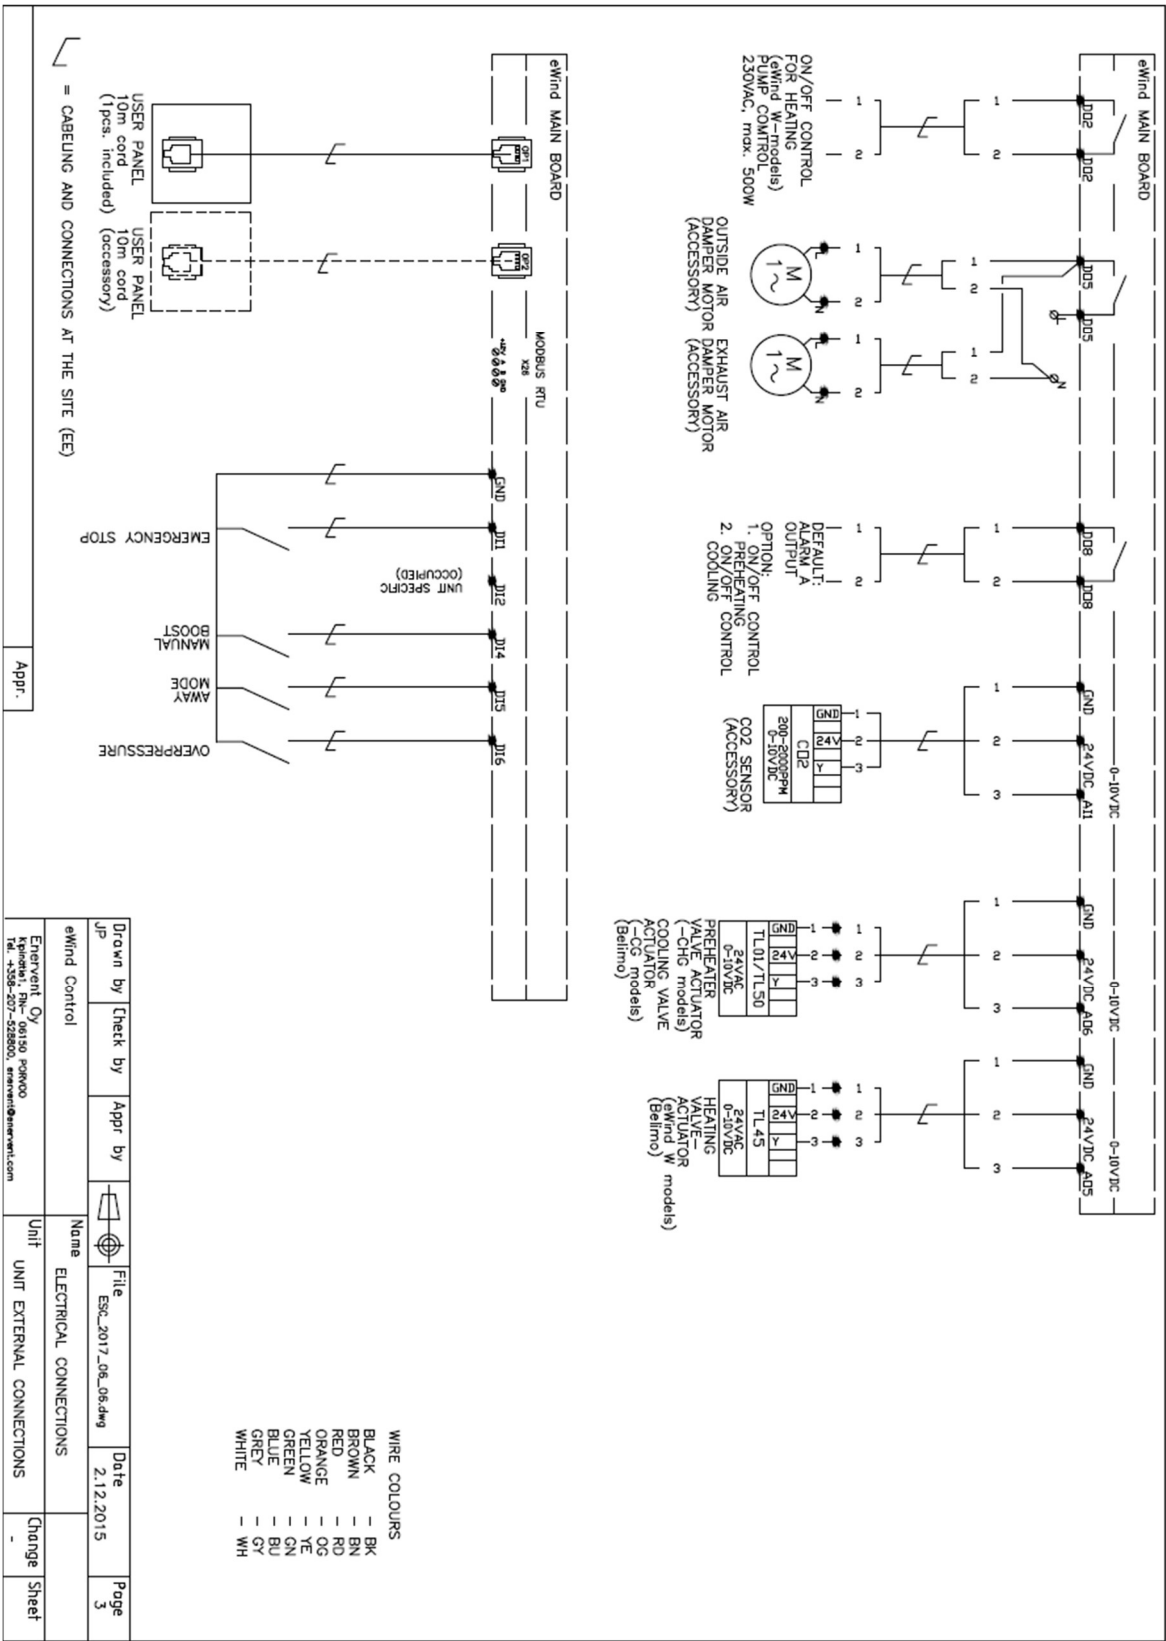

MANDATORY PARTS

10024055	CONTROL UPDATE KIT LTR-7 (XL) ACE/ECE→EWIND E	1
10023152	FAN PACKAGE LTR-7 EBM 520W	2
10023151	or FAN PACKAGE LTR-7 XL EBM 545W	2
10023144	or FAN PACKAGE LTR-7 Z 500W	2
10023273	ELECTRICAL HEATER 4kW	1
10023272	or ELECTRICAL HEATER 6kW	1
Code	Description	Pcs.
10024055	CONTROL UPDATE KIT LTR-7 (XL) ACE/ECE→EWIND E	
	Automation	
40029189	Control board EM-240-M	1
40030936	PCB support KGLS-6S	5
40030937	PCB support LCBSM-6-01	4
40031695	Screw DIN 7981 ZN 3,9x9,5	4
40031631	Screw DIN 7985 ZN M4x20	1
40031537	Washer 6796-A ZN M4x8	3
40031489	Nut DIN 934/8 ZN M4	1
40028772	Wire 65mm orange 0,75mm ²	1
40028773	Wire 340mm orange 0,75mm ²	6
40028774	Wire 255mm 1mm ² black	5
40028779	Wire 255mm 1mm ² blue	1
40031094	eWind main board	1
40029195	Power supply Tufvassons PSLR24	1
40028788	Ground wire 100mm	1
40029740	Automation base	1
40029344	Terminal package modified	1
40029297	Terminal WT4, 58.504.0055.0	3
40029331	Terminal WT4, BL, 50010106	1
40029332	Terminal WT4, PE, 50010186	1
40029339	Terminal 9708/2535,50013525	2
40029337	Terminal AP WT 2,5 - 10 GR	1
40028818	Ground wire 170mm	1
40031440	Terminal marking L1 (25ARK/LTK) 9705A / 6 / 10 B	1
40029325	Terminal marking L2 (25ARK/LTK) 9705A / 6 / 10 B	1
40029326	Terminal marking L3 (25ARK/LTK) 9705A / 6 / 10 B	1
40031441	Terminal marking N (25ARK/LTK) 9705A / 6 / 10 B	1
40031442	Terminal marking PE (25ARK/LTK) 9705A / 6 / 10 B	1
	Components	
40030100	Cable sealing VET 5-7	10
40029244	Cable sealing PMR 615 AVL140	8
40028803	Fan power cable	2
40028802	Fan control cable	2
40029170	EDA temperature sensor 2400mm	2
40029167	EDA temperature sensor 1700mm	1
40029165	EDA temperature sensor 850mm	1
40029224	Humidity/temperature sensor Amphenol 600mm	1
40031530	Screw ZN 4,2x25	4
40029982	WaGo 221-415	2
40028820	Wire 600mm black (main switch)	6
40028819	Wire 600mm blue (main switch)	2
40028781	Wire 600mm 1mm ² blue	2
40028780	Wire 600mm 1mm ² black	2
40031537	Washer 6796-A ZN M4x8	1
40031489	Nut DIN 934/8 ZN M4	1
40030997	Cable tie 2,5x200mm	10
40028738	HRW motor package stepless DC	1
40033952	Rotor cable DC 105cm	1
40031115	eWind panel package	1
40034288	WiFi module package	1
40034055	Pressure difference switch	1
	Manuals etc. (depends on model)	
	eWind installation manual	1
	eWind user manual	1
	eWind electrical diagrams	1

Notes: