



eAir MD & eWind coil/register list for service partners

eAir: Servicemenu, code: 1006, edit coils/edit holding registers

eWind register-editor:

In basic-display, press left & right button at the same time for 20sec.

In T-menu, press left & right button at the same time for 20sec.

P-menu: register-editor

eWind coil-editor

In P-menu, press left & right button at the same time for 20sec.

PC-menu: coil-editor

coil 34 (only eAir): Supply-air extraheater (200-300%) not in use: 0, in use: 1

coil 50: Fresh-air preheater not in use: 0, in use: 1

coil 58: CHG-coil not in use: 0, in use: 1

coil 72: Enervent RHT30-sensor (extract) not in use: 1, in use: 0

coil 72: Amphenol Telaire RHT30-sensor (extract) not in use: 0, in use: 1

coil 73 (only eAir): Modbus RTU in use: 0, Modbus TCP/IP in use: 1

coil 72 & 73 needs eAir-display version v.2.08 or newer

reg. 551: HRC-supply-air cold alarm limit: 50 = 5°C

reg. 552: Supply-air cold cold alarm limit: 100 = 10°C

reg. 542, 569, 570: Fan rotation guard not in use: all three registers need to be changed -> 0

reg. 553: Supply-air hot alarm limit: 550 = 55°C

reg. 555: Extract-air cold alarm limit: 150 = 15°C

reg. 590: Fresh-air preheater-type not in use: 0, E: 1, CHG: 2, GWC: 3

reg. 702 (only eAir): Supply-air extraheater (200-300%) -type not in use: 0, W: 1, E: 3

CHG: cooling/heating geo-coil

E: electric coil

GWC: Fresh-air duct installed in the ground

W: watercoil