

Automation upgrade

Pegasos AC -> eWind

NOTE!

Fan rotation guards must be disabled in the new eWind settings.

Warning!

According to regulations, an ordinary electricity consumer is only allowed to perform some minor service tasks.

**According to Finnish regulations,
a list of the allowed tasks can be found at the Tukes home page (www.tukes.fi).**

Always make sure that the power supply is turned off before opening the service door.

Wait two minutes before beginning the maintenance work. The fans rotate for some time by themselves, and the heating element may be hot even if the power supply of the ventilation unit is switched off. Electrical housing may be opened only by a trained electrician.

Electrical installations must comply with local regulations.

**Continuously check and compare the electrical diagrams at the end
of this instruction as the upgrade progresses!**

Table of contents

Upgrade.....3

Electrical diagrams AC.....24

Electrical diagrams eWind28

Parts list eWind E32


Parts list eWind W.....33

Notes34

Open **the small door (1)** by pressing on it.



Disconnect **all power supplies to the unit (2)**.

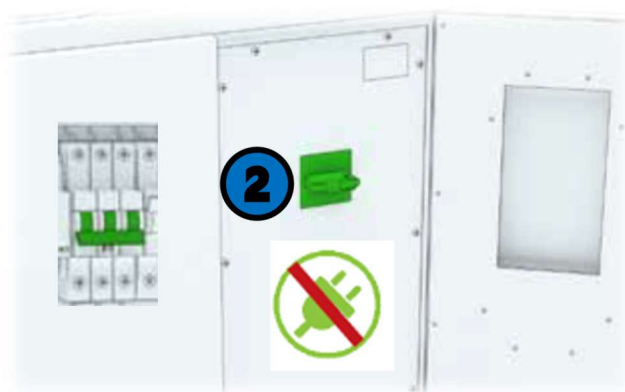


Open the service door by turning **the handle (3)**.




Remove **the cover to the electrical box (1)** and **the supply air fan chamber (1)** by removing the screws.

NOTE! Ensure that no voltage is occurring in the electrical box before proceeding!

Remove **the POP rivets** from **the cable rail (2)** by drilling, and remove the cover.

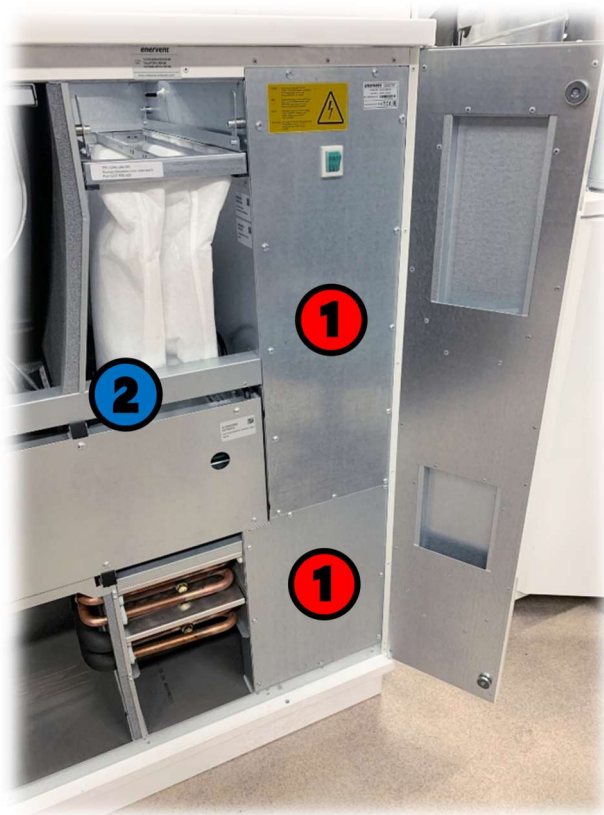

Remove **the filters (1)** by pulling.
 Disconnect **the connectors (2)**.
 Remove **the fans (3)**.
 Remove **the HRW (4)** by pulling.
 Remove **the fan rails (5)** by drilling the pop-rivets (they are also glued to the frame).

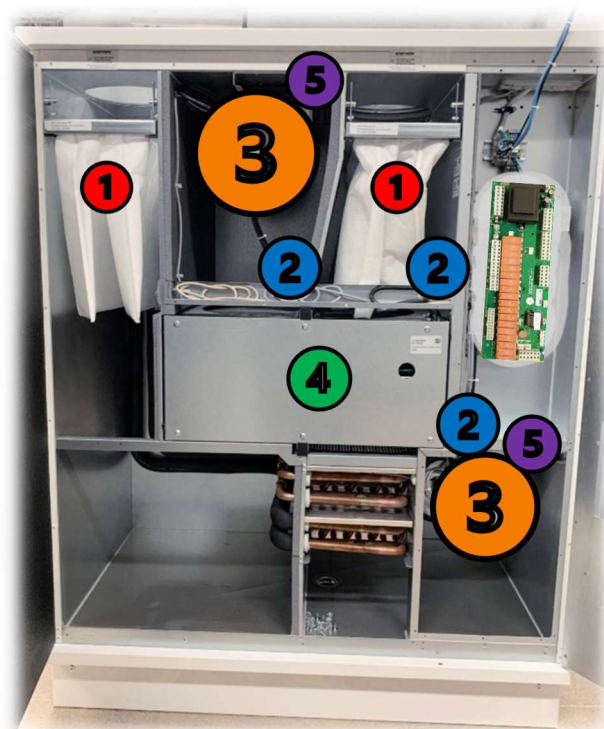



Don't uninstall the main power supply terminals,
the main switch (1), or the wires connected to them.



Disconnect **the wires (1)** by pressing the orange
button next to the wire.

Disconnect **the wires (1)** from the main board marked
red (1) and **blue (2)**.

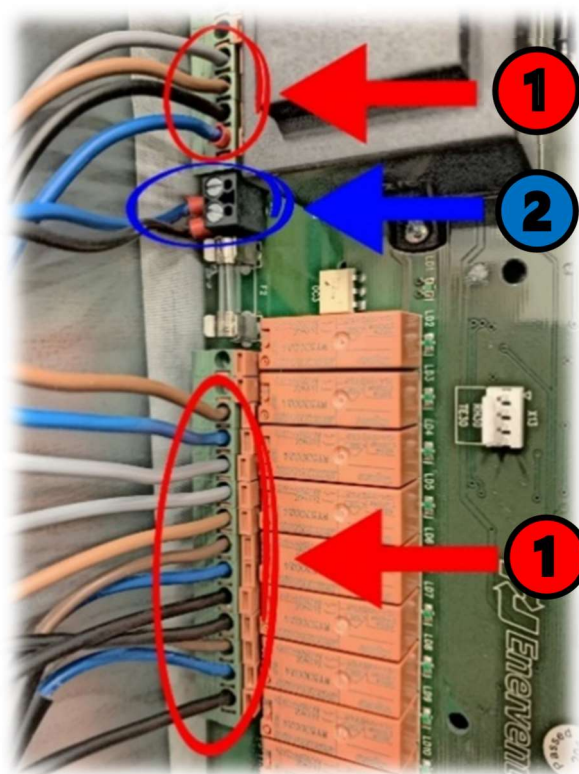

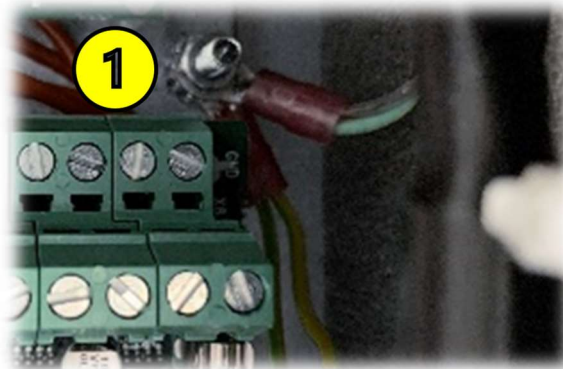

Disconnect **all ground wires (1)** from the automation base ground point.

Disconnect **the ground wire (1)** from the main board and remove it.

If there is a water coil installed (ACW), the actuator is connected **here (2)**. Disconnect and remove the wires. The actuator can't be used anymore.

Install the new actuator afterwards according to the electrical diagram **(page 31)**.


If there are wires connected **here (3)**, mark them according to the reading on the mainboard and disconnect.

Disconnect **the cable (4)**.

Disconnect **the sensors (5)**.

Disconnect **the wires (6)**. Don't remove this cable (might be needed later).


If the unit has a water coil after heater installed (ACW), the return water sensor is connected **here (7)**. Disconnect and remove the wires. The sensor can't be used anymore.

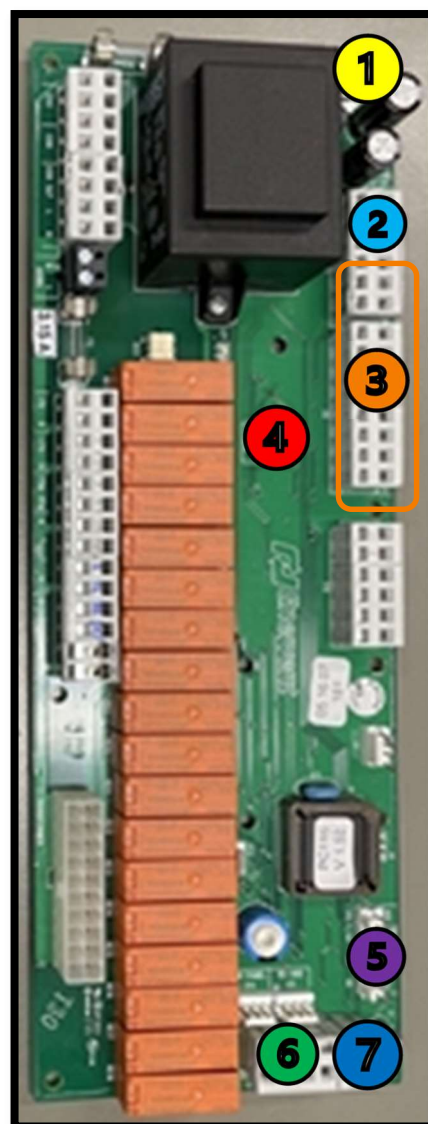

Remove **the screws / PCB supports (1)**,
and remove the automation base
incl. main board and **transformer (5)**.



If the unit has an **electrical after heater (4)** installed;
Disconnect and remove
the pressure difference transmitter (2).
Disconnect but **don't uninstall the pressure hoses (3)**.

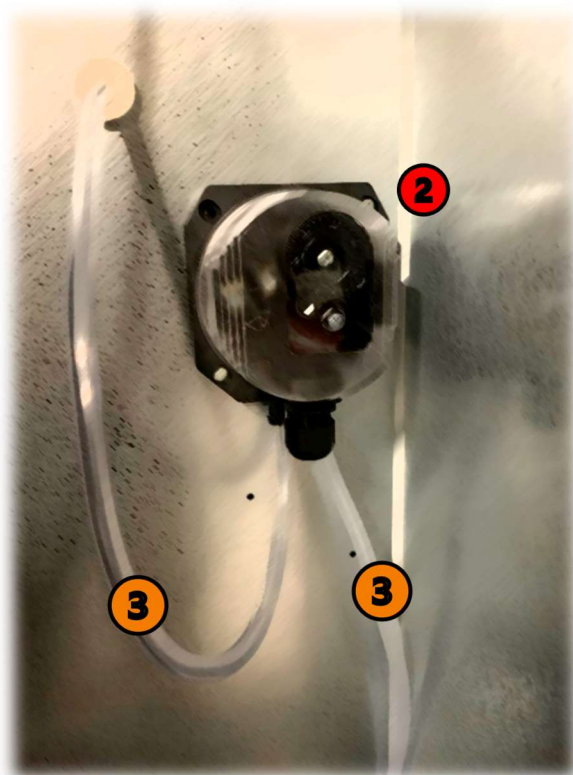


Cut and remove **the outside air sensor (1)**.
 Cut and remove **the HRW supply air sensor (2)**.
 Cut and remove **the waste air sensor (3)**.
 Cut and remove **the supply air sensor (4)**.

If the unit has a water coil after heater installed;
 cut and remove **the sensor cable (5)**.

If the unit has an electrical after heater installed;
 disconnect the wires from the main switch,
 remove the after heater by pulling, along with
 the cables connected to **the after heater (6)**.

Remove **the HRW- and the fan cables (7)**.

Remove **the extract air sensor cable (8)**.

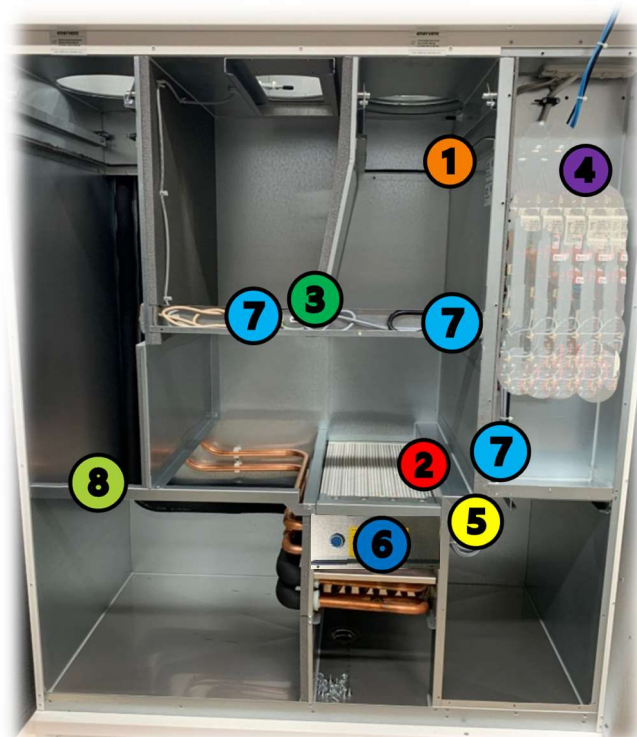


Install **the new extract air sensor (9)** (40029225)
 and attach it with cable ties (40030997)
 on top of the old sensor.
 The old sensor won't be used anymore.



Cut a gap in the insulation and install the extract air sensor cable into **the gap (1)** and through the cable rail into the electrical box.




Drill two 18mm holes in the frame (where the old fan cables were attached), install **new cable sealings** (40030101) and install **the new fan cables (1)** (40028782, 40028783, 40028784, 40028785).


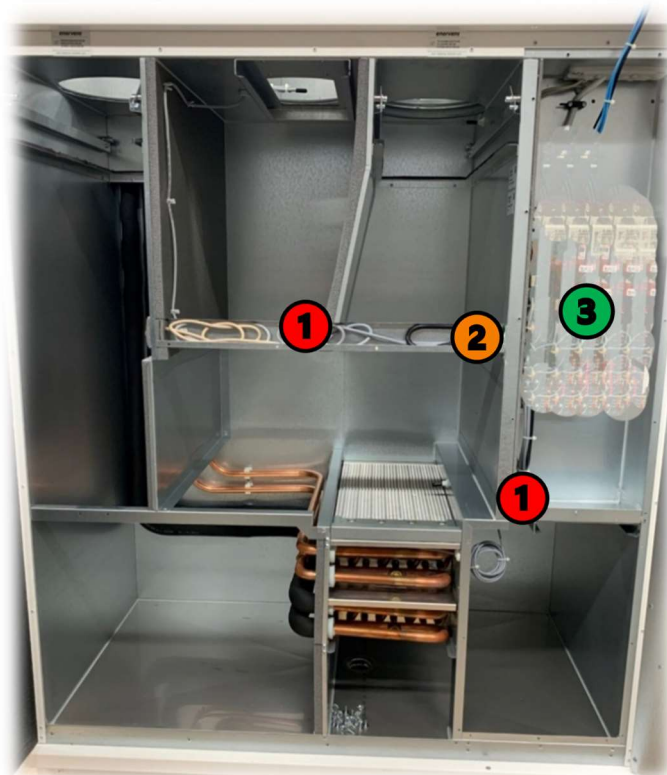


Drill a 18mm hole (where the old HRW cable were attached), install a new cable sealing (40030101) and install **the new HRW cable (2)** (40028725).

Install the cables in **the electrical box (3)**.

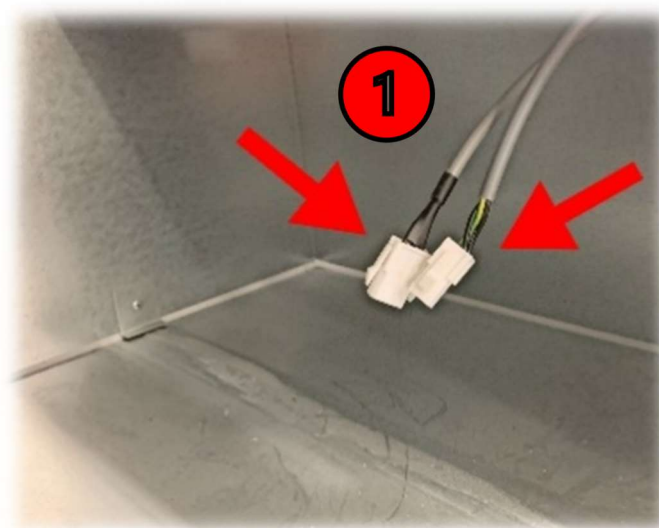

Drill a 16mm hole in **the outside air duct (1)**, install a **new cable sealing (40030100)** and install **the new outside air sensor (1) (1700mm) (40029167)** into the duct. Mark the sensor **"TE01"** on the connector in the other end and install it in **the electrical box (2)** through **the cable sealing in the frame (3)**.

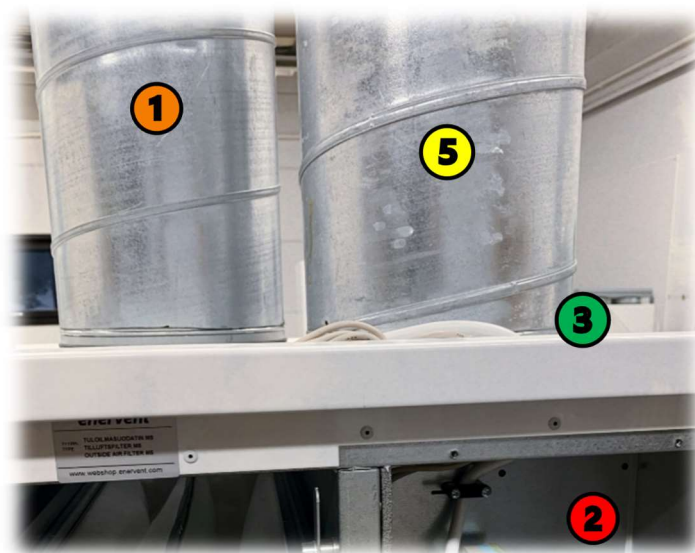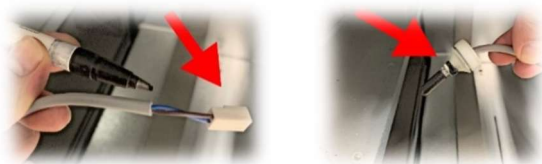


Install **the new HRW-supply air sensor (4) (850mm) (40029165)** and mark it **"TE05"** on the connector in the other end.

Drill a 16mm hole in **the supply air duct (5)**, install a **new cable sealing (40030100)** and install **the new supply air sensor (5) (1700mm) (40029167)** into the duct. Mark it **"TE10"** on the connector in the other end and install it in **the electrical box (2)** through **the cable sealing in the frame (3)**.

Install **the new waste air sensor (6) (1700mm) (40029167)** and mark it **"TE32"** on the connector in the other end.

If the unit has a water coil after heater installed; install **the new return water sensor (7) (40029228)** on the upper pipe of the water coil and isolate it from surrounding air.

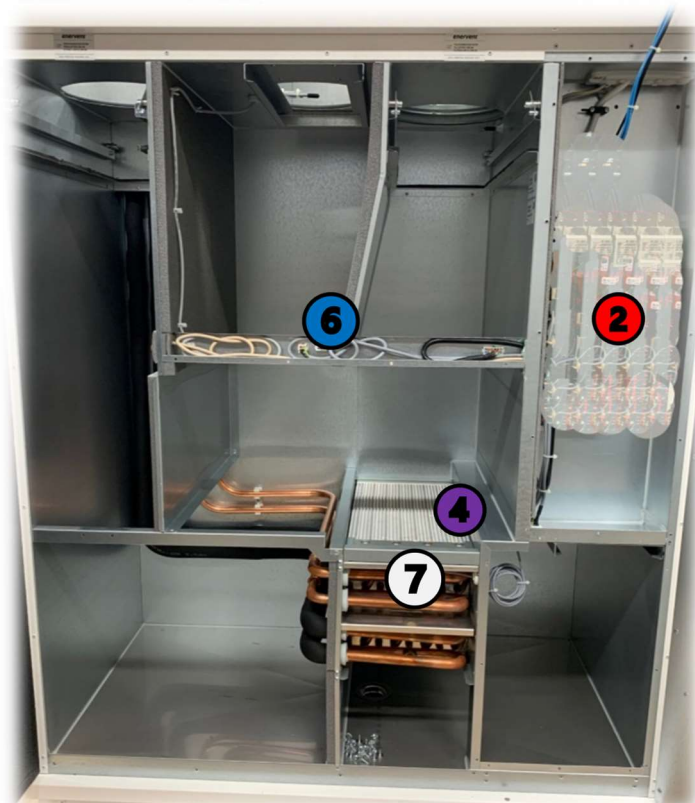

If the unit had an electrical after heater installed; install **the new electrical after heater (1)** (10023897) or (10023896) in its place and install the cables in **the electrical box (2)**.

Install **the new automation (3)** in the electrical box. Make sure no installed cable / sensor get stuck behind the automation base and that they are available in front of the main board.

Attach the automation base (40029647) to the electrical box with **four self tapping screws (4)** (40031530).

If electrical after heater installed:

Install **the new pressure difference switch (5)** (4034055) in the electrical box and connect it with **the wires (40028781)** to the mainboard according to the electrical diagram (**page 15**). Connect the pressure hoses to the switch:
(-) in airflow before supply air fan
(+) in airflow after supply air fan




Connect **the power supply wires to the new terminals (1)**.

If electrical after heater installed:

- 1: Black connection terminal (1)
(from main switch L1)
- 2: Blue connection terminal (2)
(N-terminal)

If water after heater installed:


- 1: Black connection terminal (1)
(from main switch L)
- 2: Blue connection terminal (2)
(from main switch N)

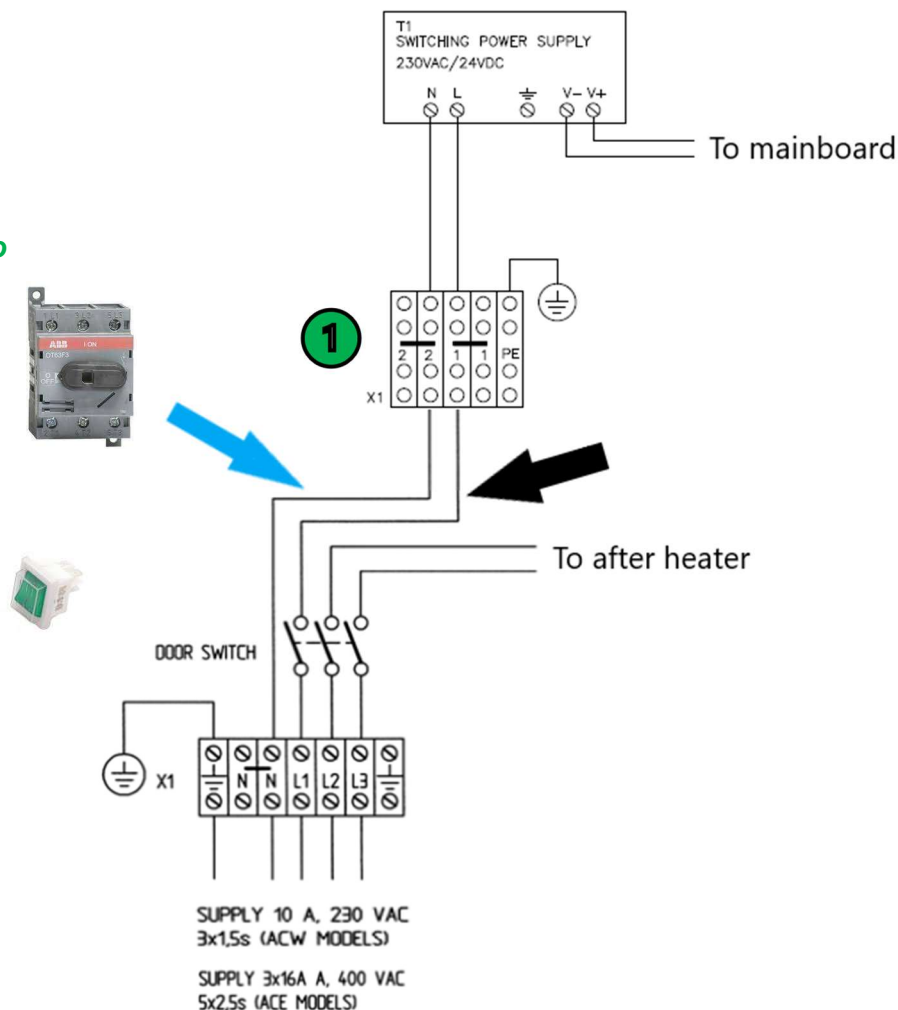


If electrical after heater installed:

Connect **the power supply to the electrical after heater (2)**

- After heater black wire L2
(to main switch L2)
- After heater gray wire L3
(to main switch L3)

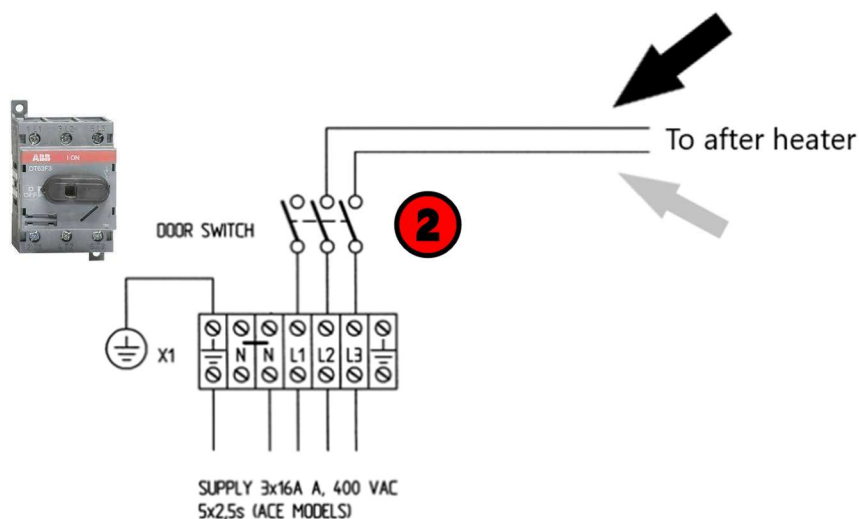

Connect **all ground wires** to **the automation base ground point (1)**.
Supply air fan, extract air fan, electrical after heater, ground terminal.
Totally four wires. **Three wires if no electrical after heater installed.**
Tighten with **the nut (40031489)**.

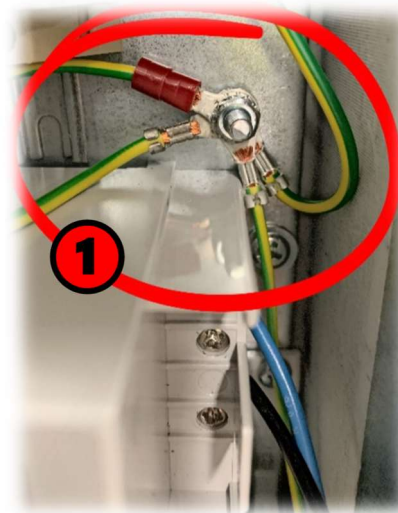

Connect **the blue wire** from the electrical after heater to **the blue "2" connection terminal (2)**.
Ignore if no electrical after heater installed.




Connect **the brown wire** from the electrical after heater to **the pressure difference switch (COM) (1) (4034055)**.
Ignore if the unit has a water coil after heater installed.




Connect a **black wire** (40028780) from **the pressure difference switch (NO)** to DO2 (2).

Ignore if the unit has a water coil after heater installed.

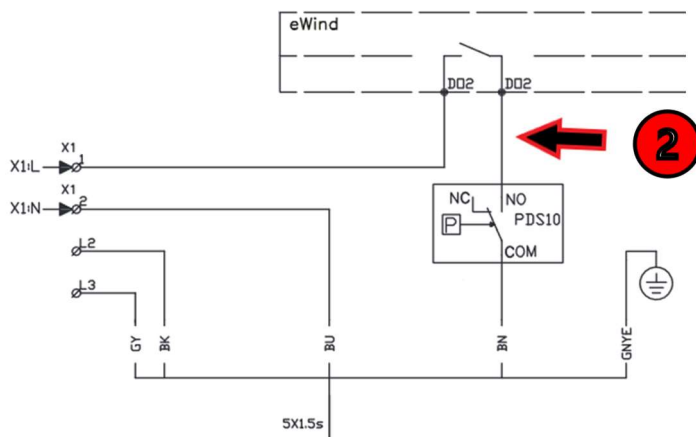


Connect a **black wire** (40028780) from **connection terminal "1"** to DO2 (2).

Ignore if the unit has a water coil after heater installed.

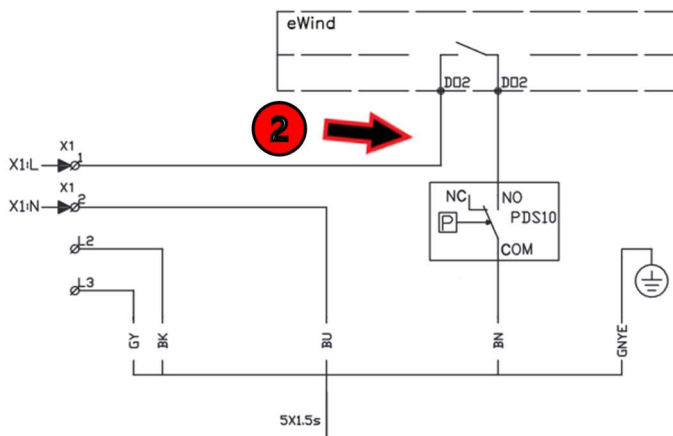

Connect **the wires marked "2"** in the fan power cables (40028782, 40028783) to **the blue "2" connection terminal (2)**.

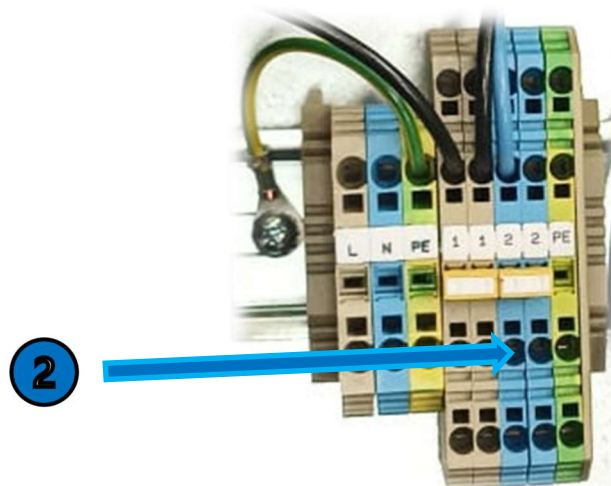

Connect **the extract air sensor (1)** (40029225) to the main board (X29).



Connect **the sensors (1)** to the main board according to the markings.

X1, TE01: Outside air (40029167)


X2, TE05: HRW supply air (40029165)

X3, TE10: Supply air (40029167)

X4, TE32: Waste air (40029167)

X12, TE45: Return water sensor (3) (40029228)

if the unit has a watercoil after heater installed.

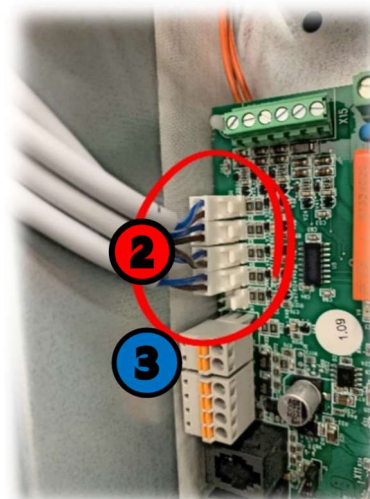


Connect **the wires from the supply air fan control cable (4)** (40028784) to the main board.

1: Brown

2: Black

3: Gray

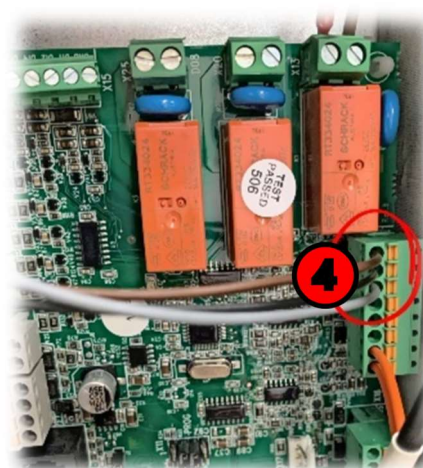


Connect **the wires from the extract air fan control cable (1)** (40028785) to the main board.


4: Brown

5: Black

6: Gray

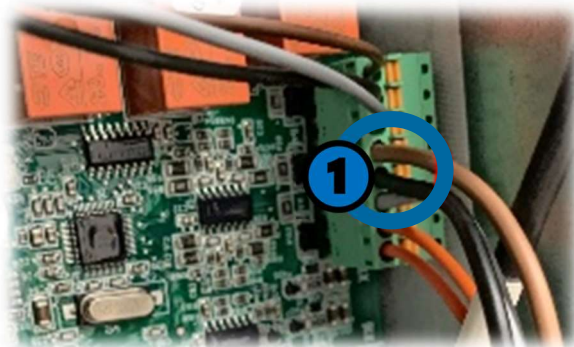

Release **the screw (2)** from the automation base and attach **the ground wire** from the HRW cable to the screw, along with **a washer** (40031537).

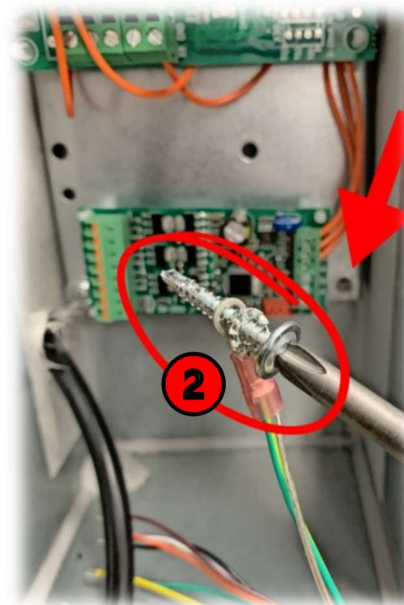

Reattach **the screw (2)** to the automation base.



Connect **the wires from the HRW cable (40028725) to the HRW control board (1).**

1: Yellow

2: Red

3: Blue


4: White

5: Black

6: Brown

7: Green

8: Orange

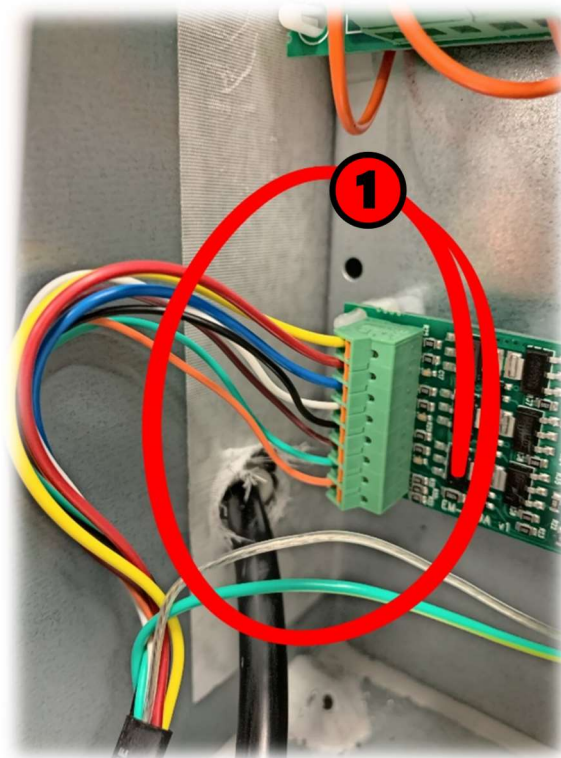


Connect **the after heater control cable (2)** to the main board (X17).

Ignore if the unit has a water coil after heater installed.

Connect other components (for example actuator for cooling coil or water coil after heater) according to the electrical diagrams (pages 28-31).

Attach all cables and wires together with **cable ties (40030997)**.

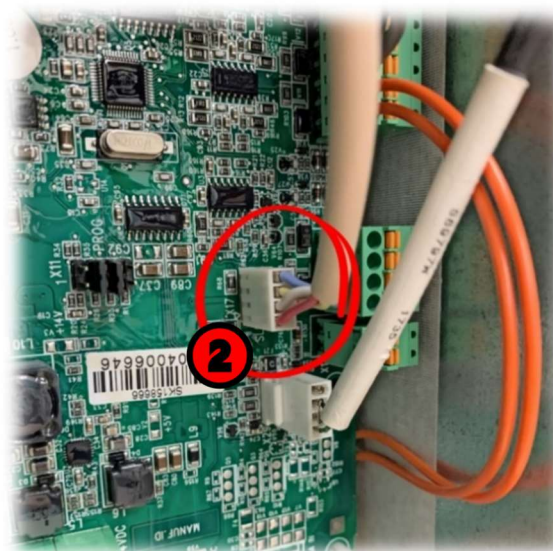

Install **the new fan rails and the fans (2)**

(10023145 (EBM 520W))

(10025051 (EBM 545W))


(10023144 (Z 500W))

NOTE! The new supply air fan rail must be installed 15mm more to the left compared to the old supply air fan rail.

New holes for the pop-rivets must be drilled.
(Otherwise the new supply air fan won't fit!)

Connect **the fan cables (3)** and attach them together with **cable ties (40030997)**.


Install **the filters (4)**.

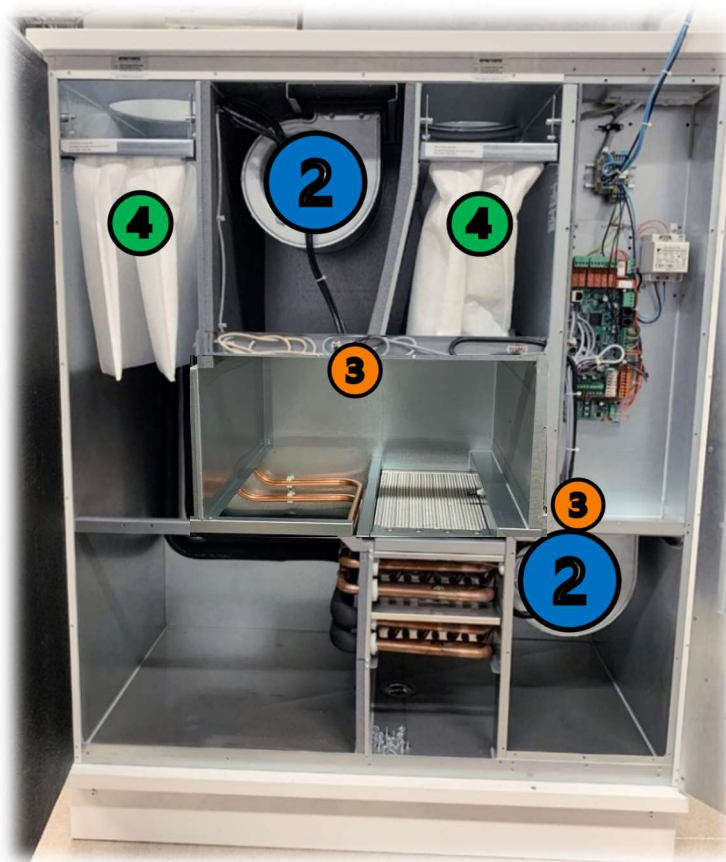


Remove **the screws (1)** from the HRW cover.



Remove **the belt (1)** from the wheel.
Remove **the screws (2)** from the motor package.
Remove **the ground wire (3)**.

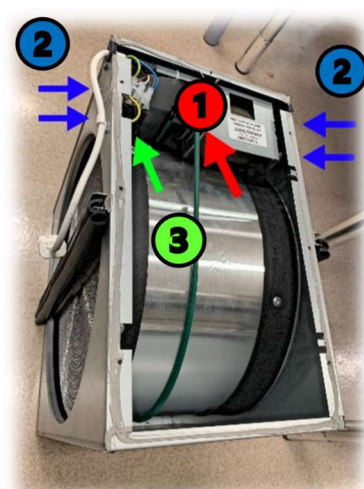

Remove the motor package.
Cut a gap (1) for the new motor cable.
Check that **the brush clips and the rubber sealings (2)** are unbroken and in place.

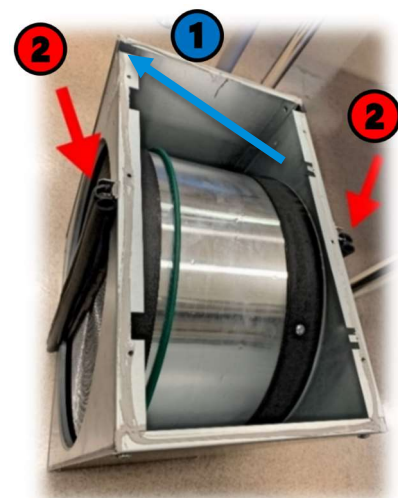


Install **the new motor package (1)** (40028738).
Attach the cover with the screws.



Install **the HRW (1)** and connect it.

Connect **the new display cable (2)**
to the main board through
the cable sealing in the frame (3).

The old display cable may also be used,
but the joints has to be done carefully
and in a proper way.

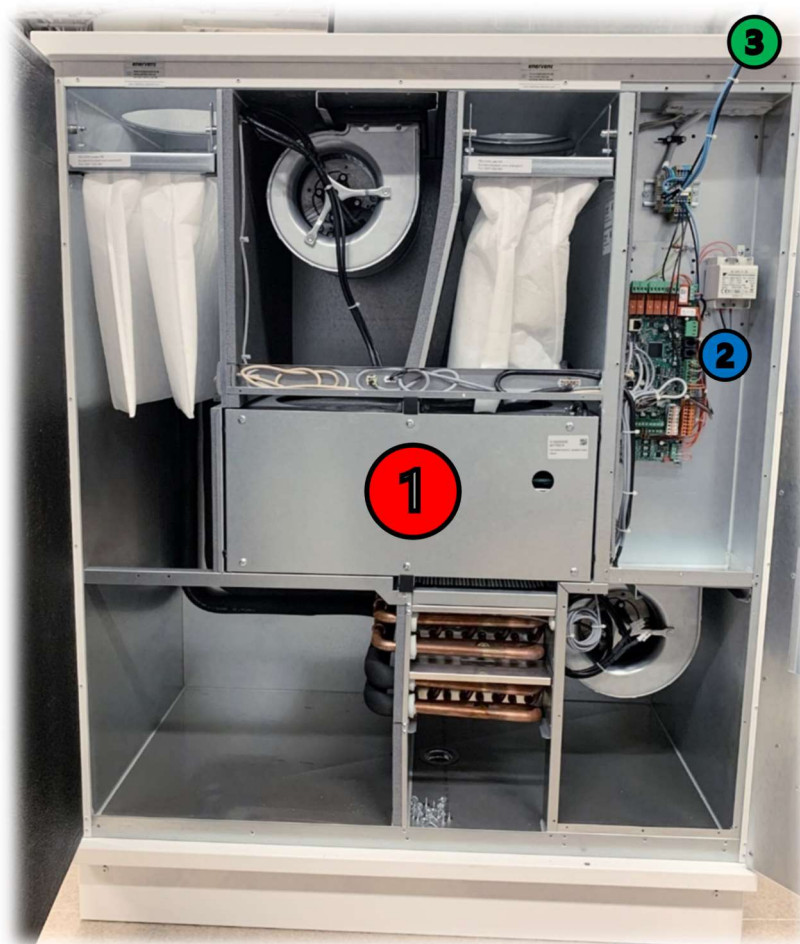

Disconnect and remove the old display.
Install **the new display (1)** (40031115) in a desired place.




Install **the WiFi module (2)** (40034288).



If electrical after heater installed:

Turn on **the main switch (3)** and perform insulation and ground continuity test according to regulations.

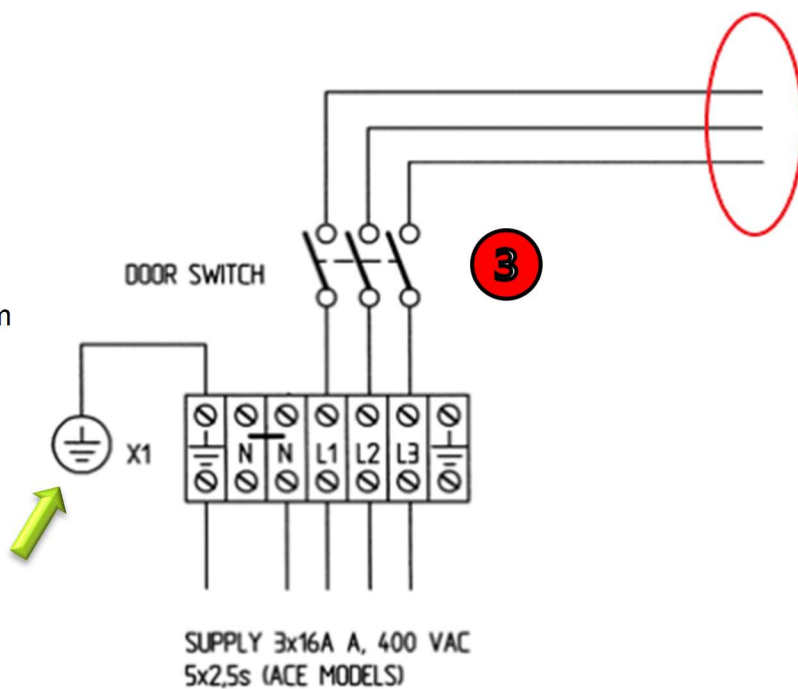


Attach the cover to **the electrical box (1)**
and **the supply air fan chamber (1)**.

Attach **the cover to the cable rail (2)**
with **the new POP rivets (40031559)**.


Install **the new type plate sticker (3)**.


Close the doors.

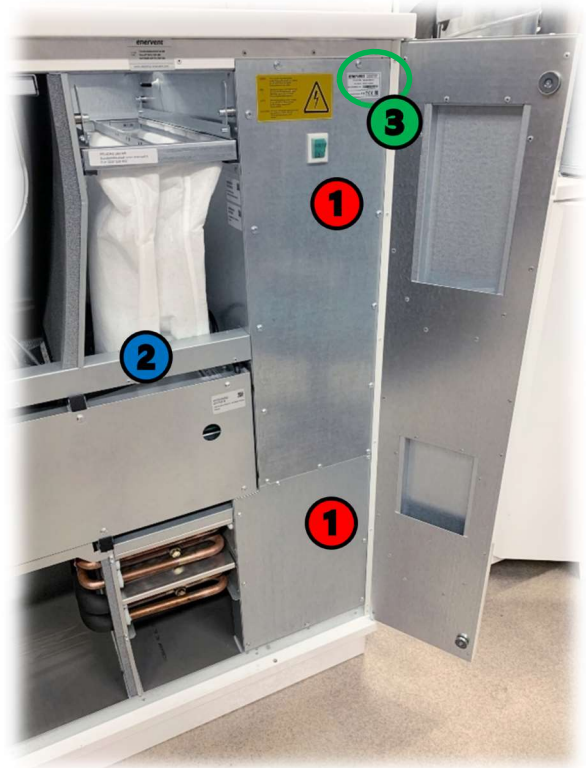



If no after heater installed:


Turn on **the main switch (4)** and perform
insulation and ground continuity test
according to regulations.

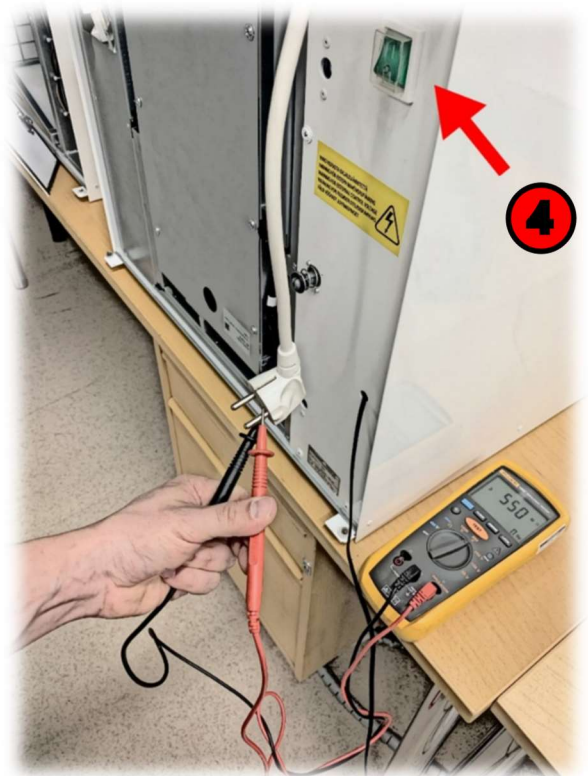


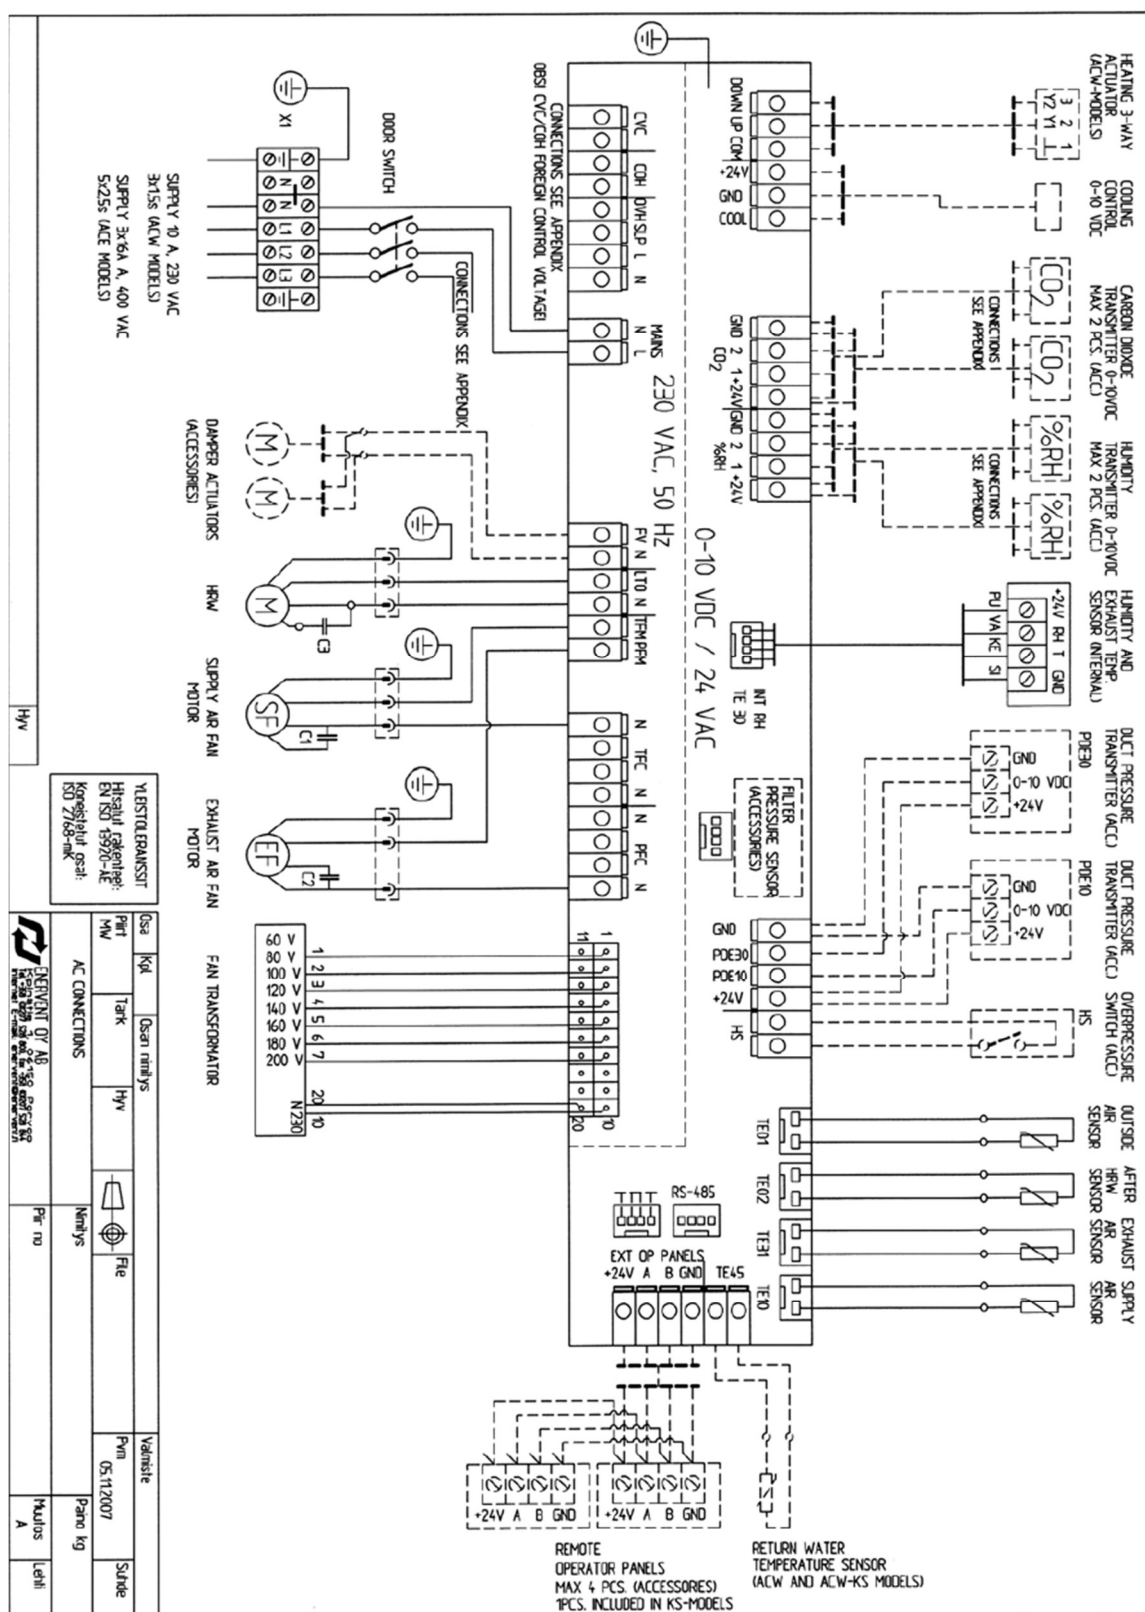



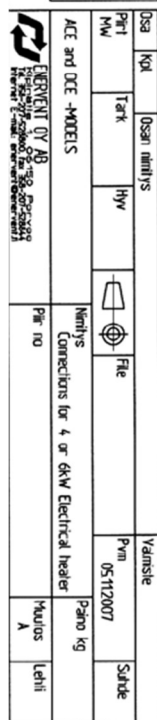


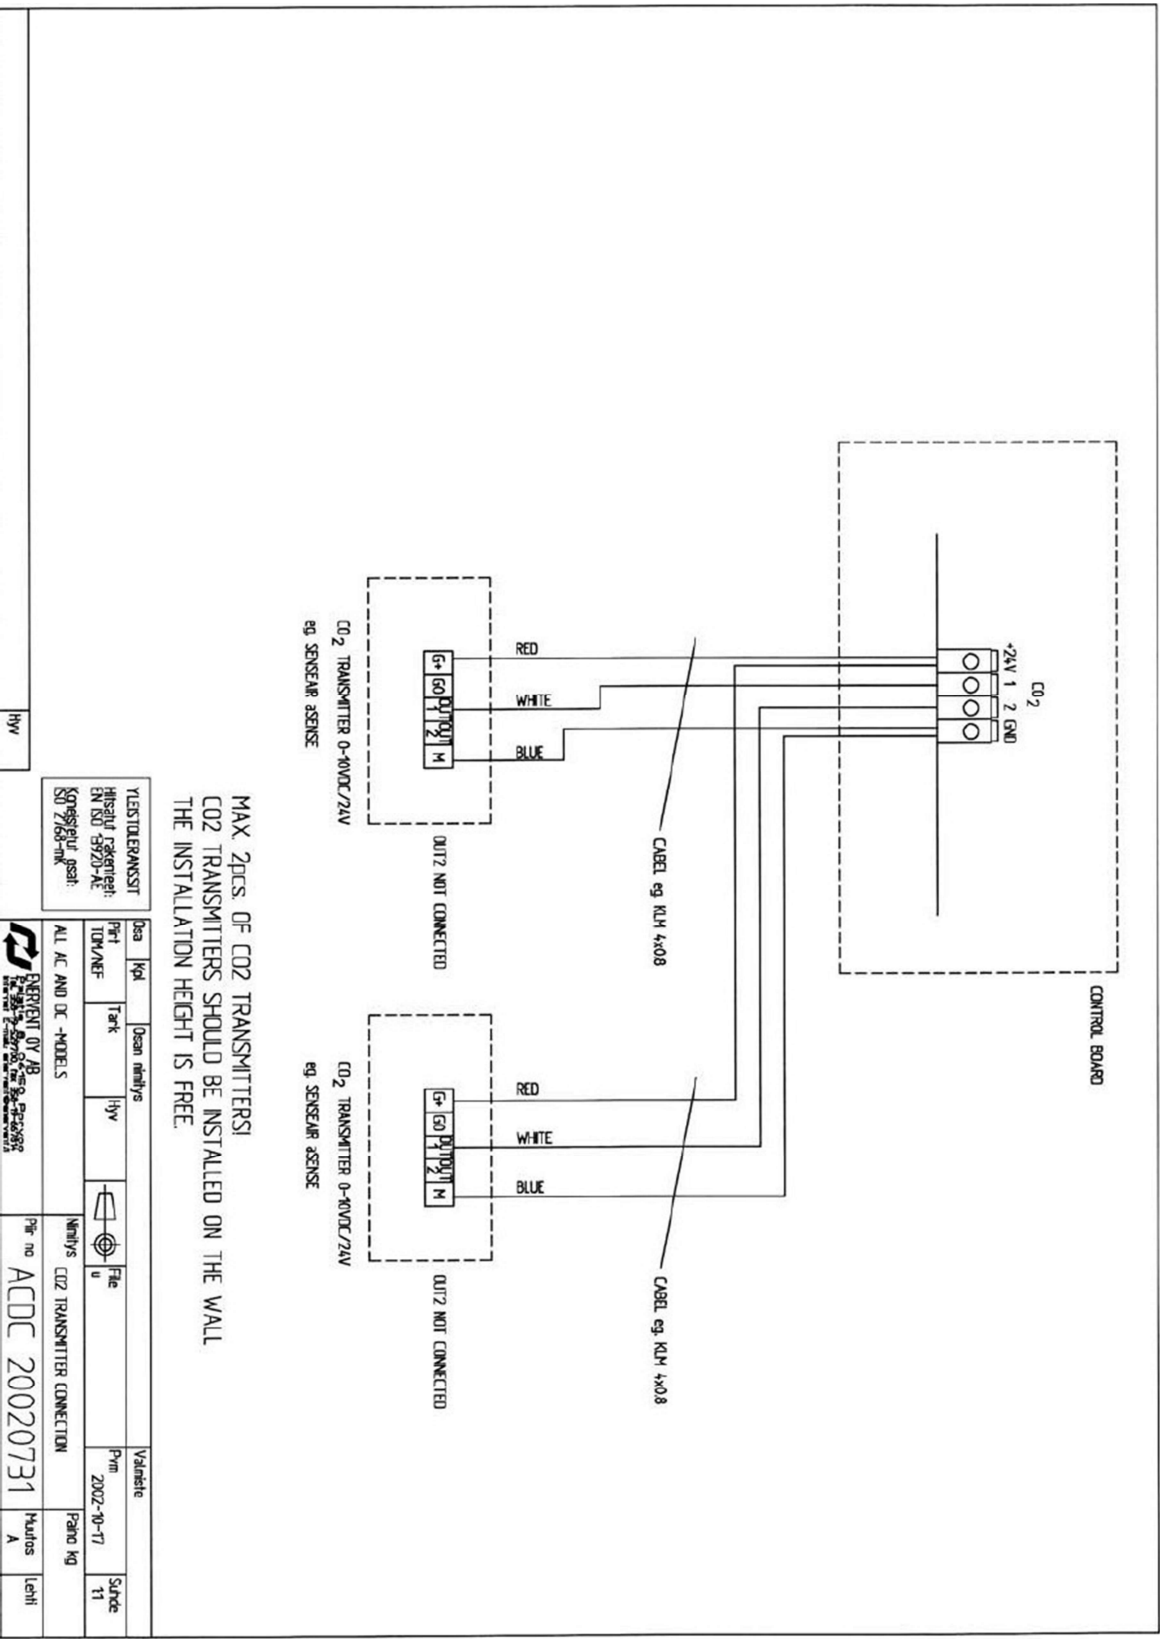

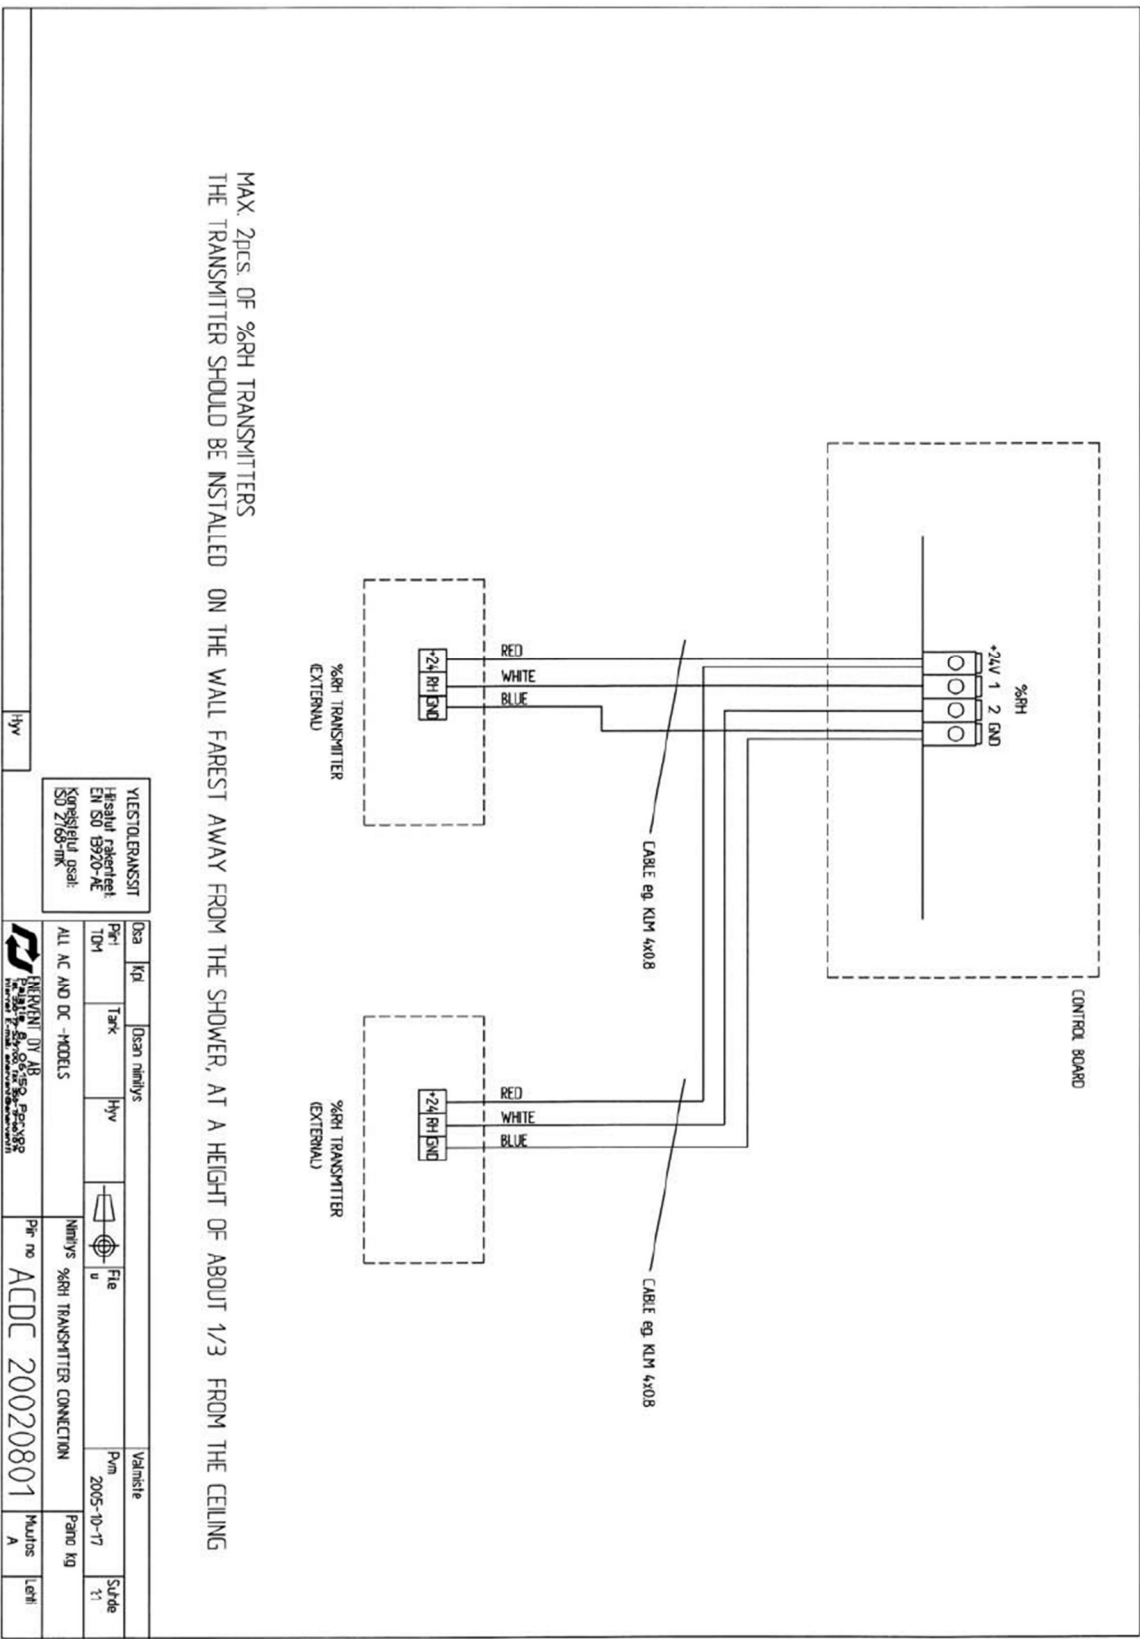

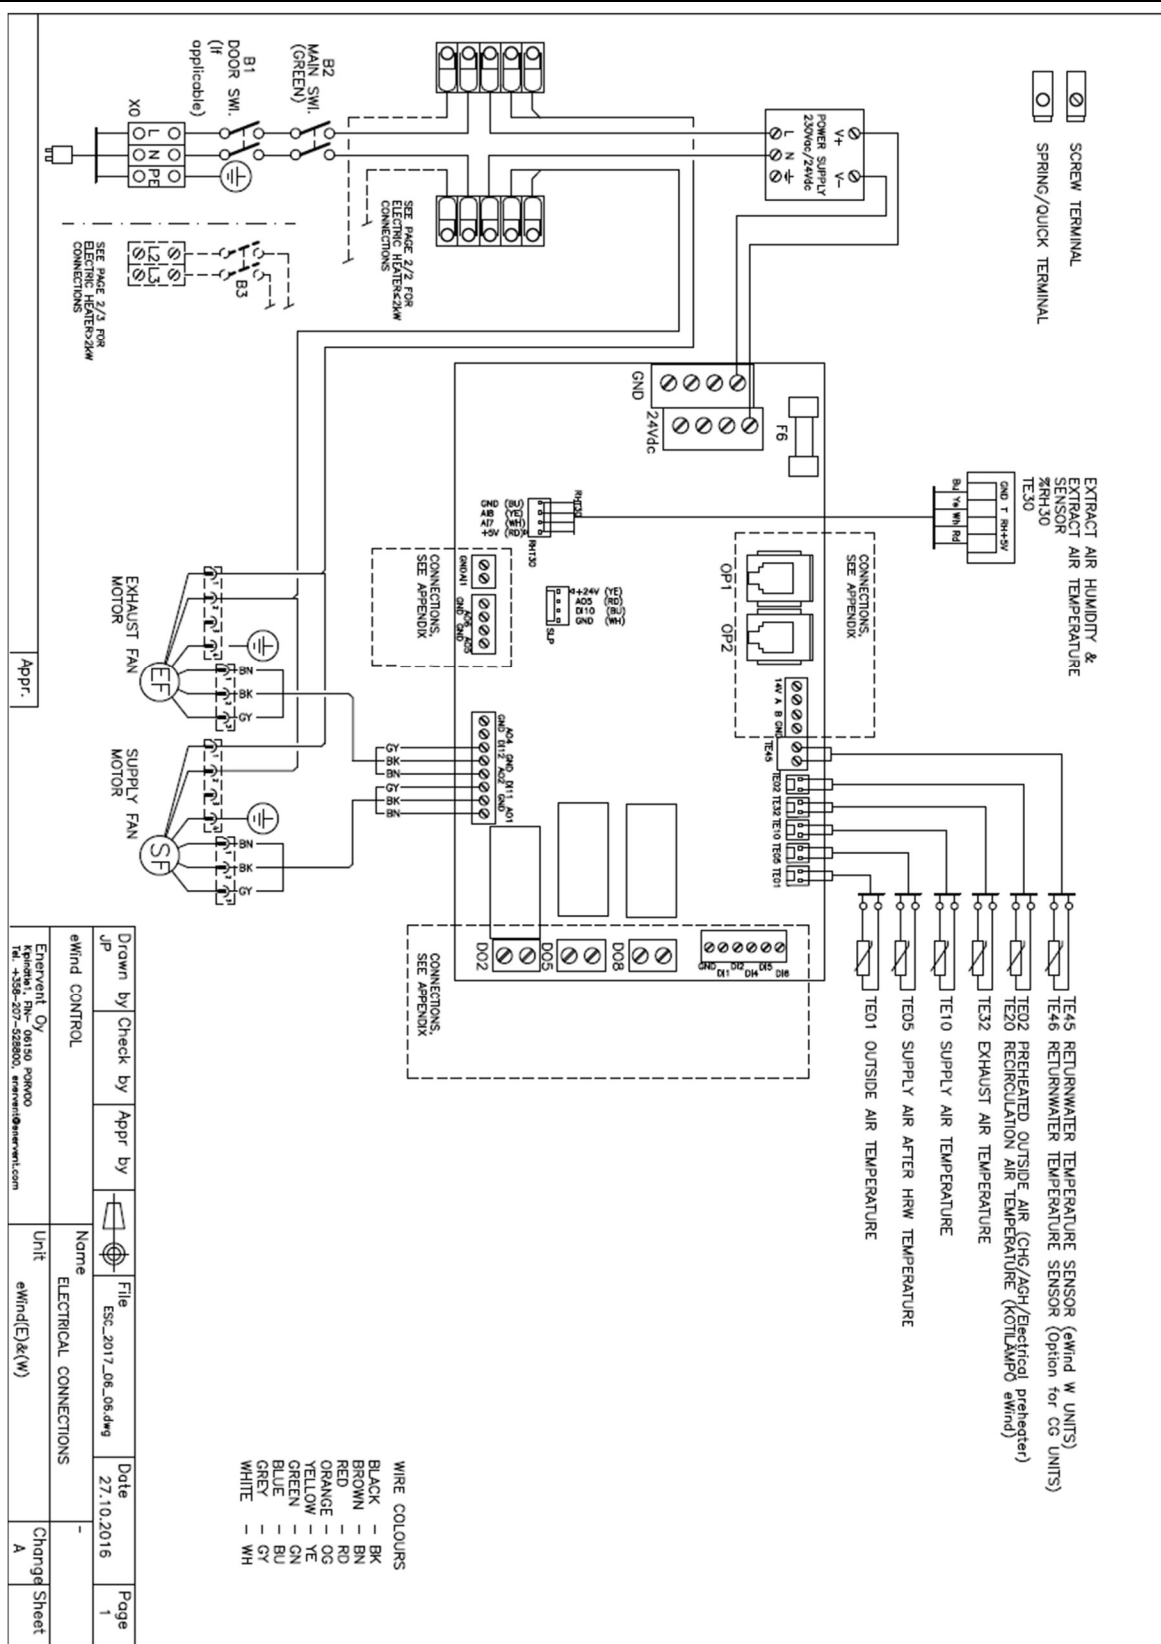


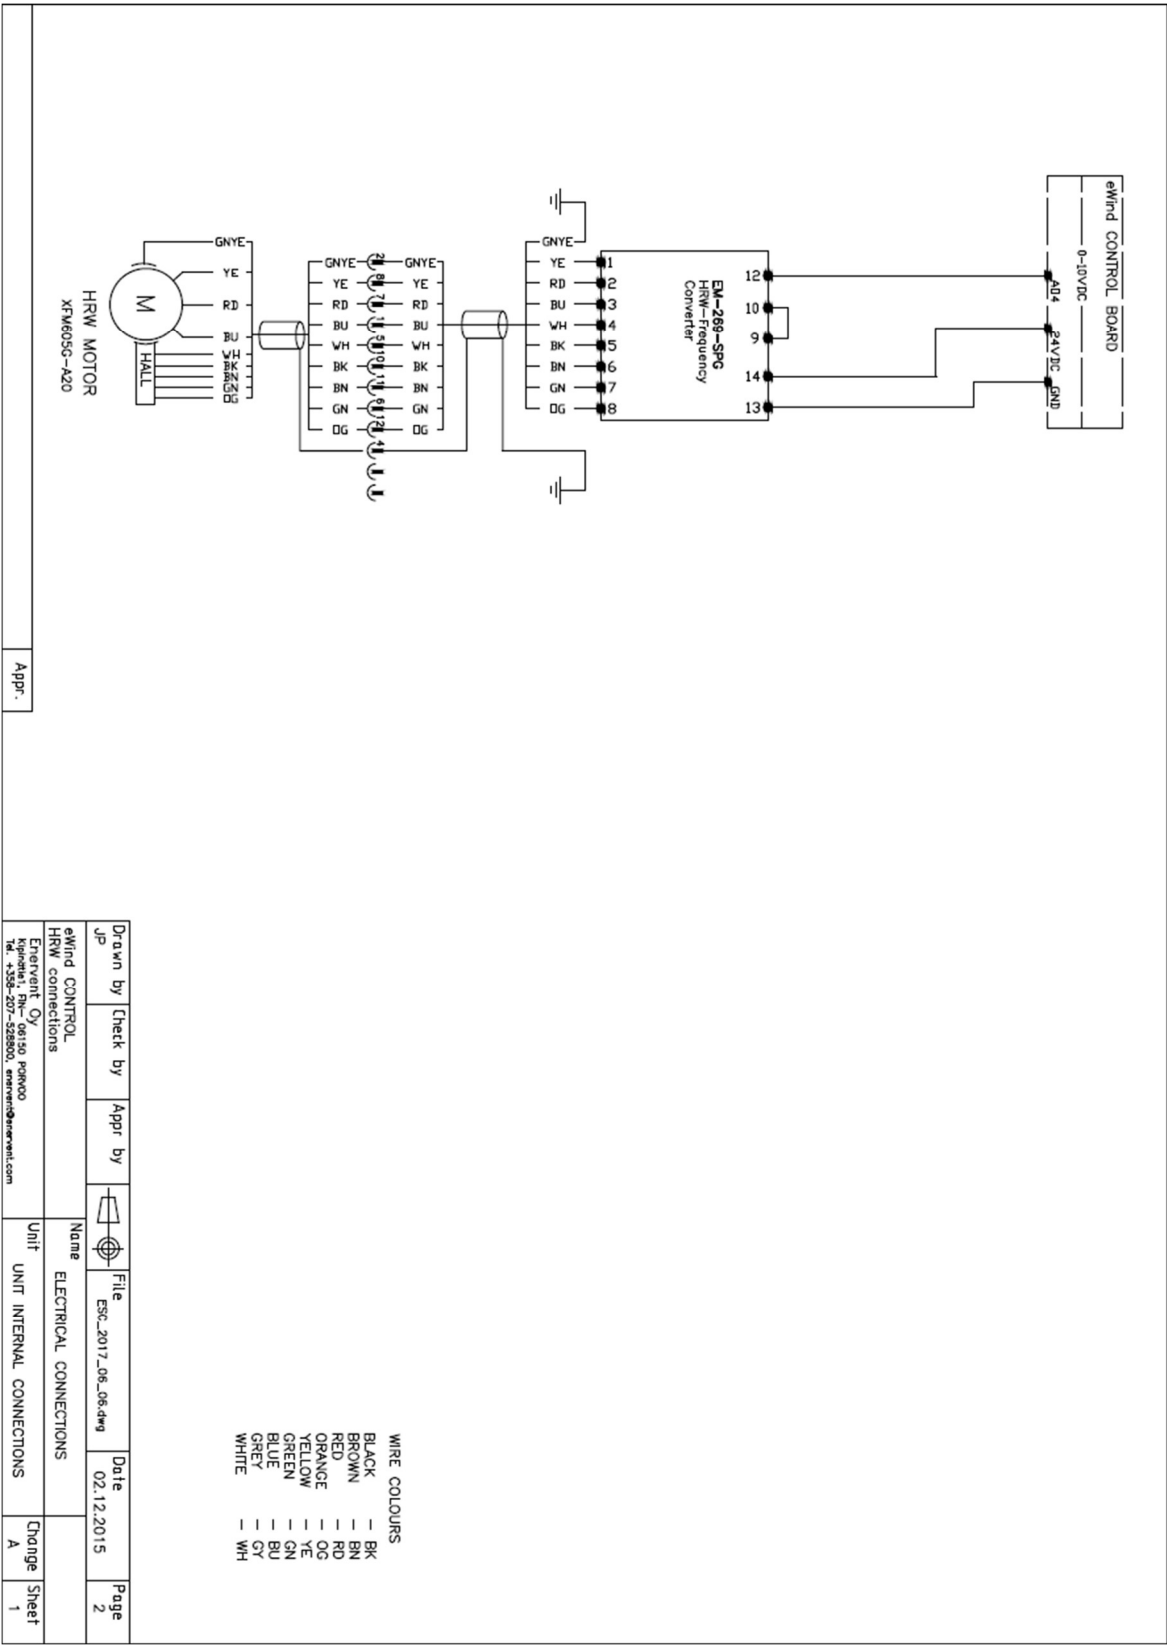

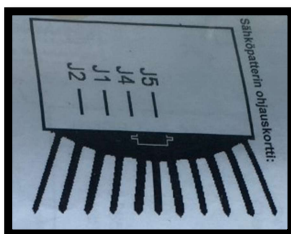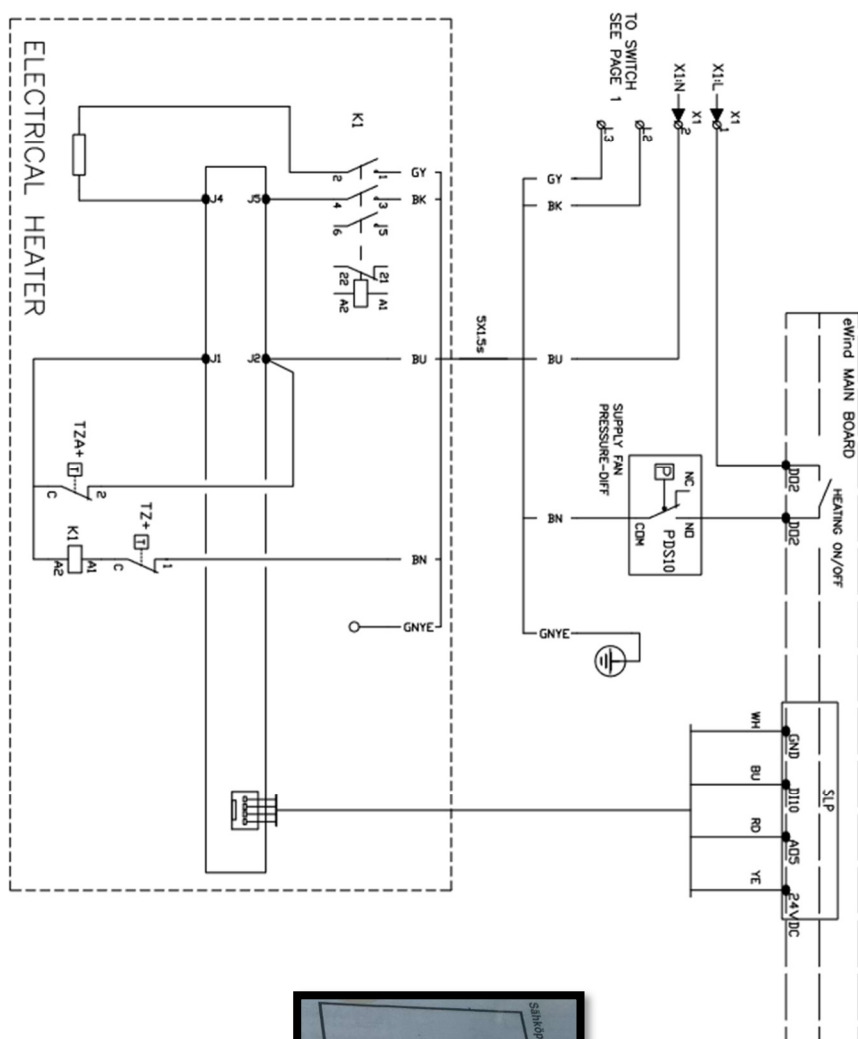

WIRE COLOURS	
BLACK	BK
BROWN	BN
RED	RD
ORANGE	OG
YELLOW	YE
GREEN	GN
BLUE	BU
GREY	GY
WHITE	WH

Drawn by	Check by	Appr by		File	Date	Page
JP				Esc_2017_06.06.dwg	19.09.2016	3
wind CONTROL			Name			
Electrical heater > 2kW			ELECTRICAL CONNECTIONS			
Emergent Oy Koponen, Pii- 06150, PORVOO Tel. +358-207-525800, piiporonen@emergent.com			Unit		Change	Sheet
			INTERNAL CONNECTIONS		-	2

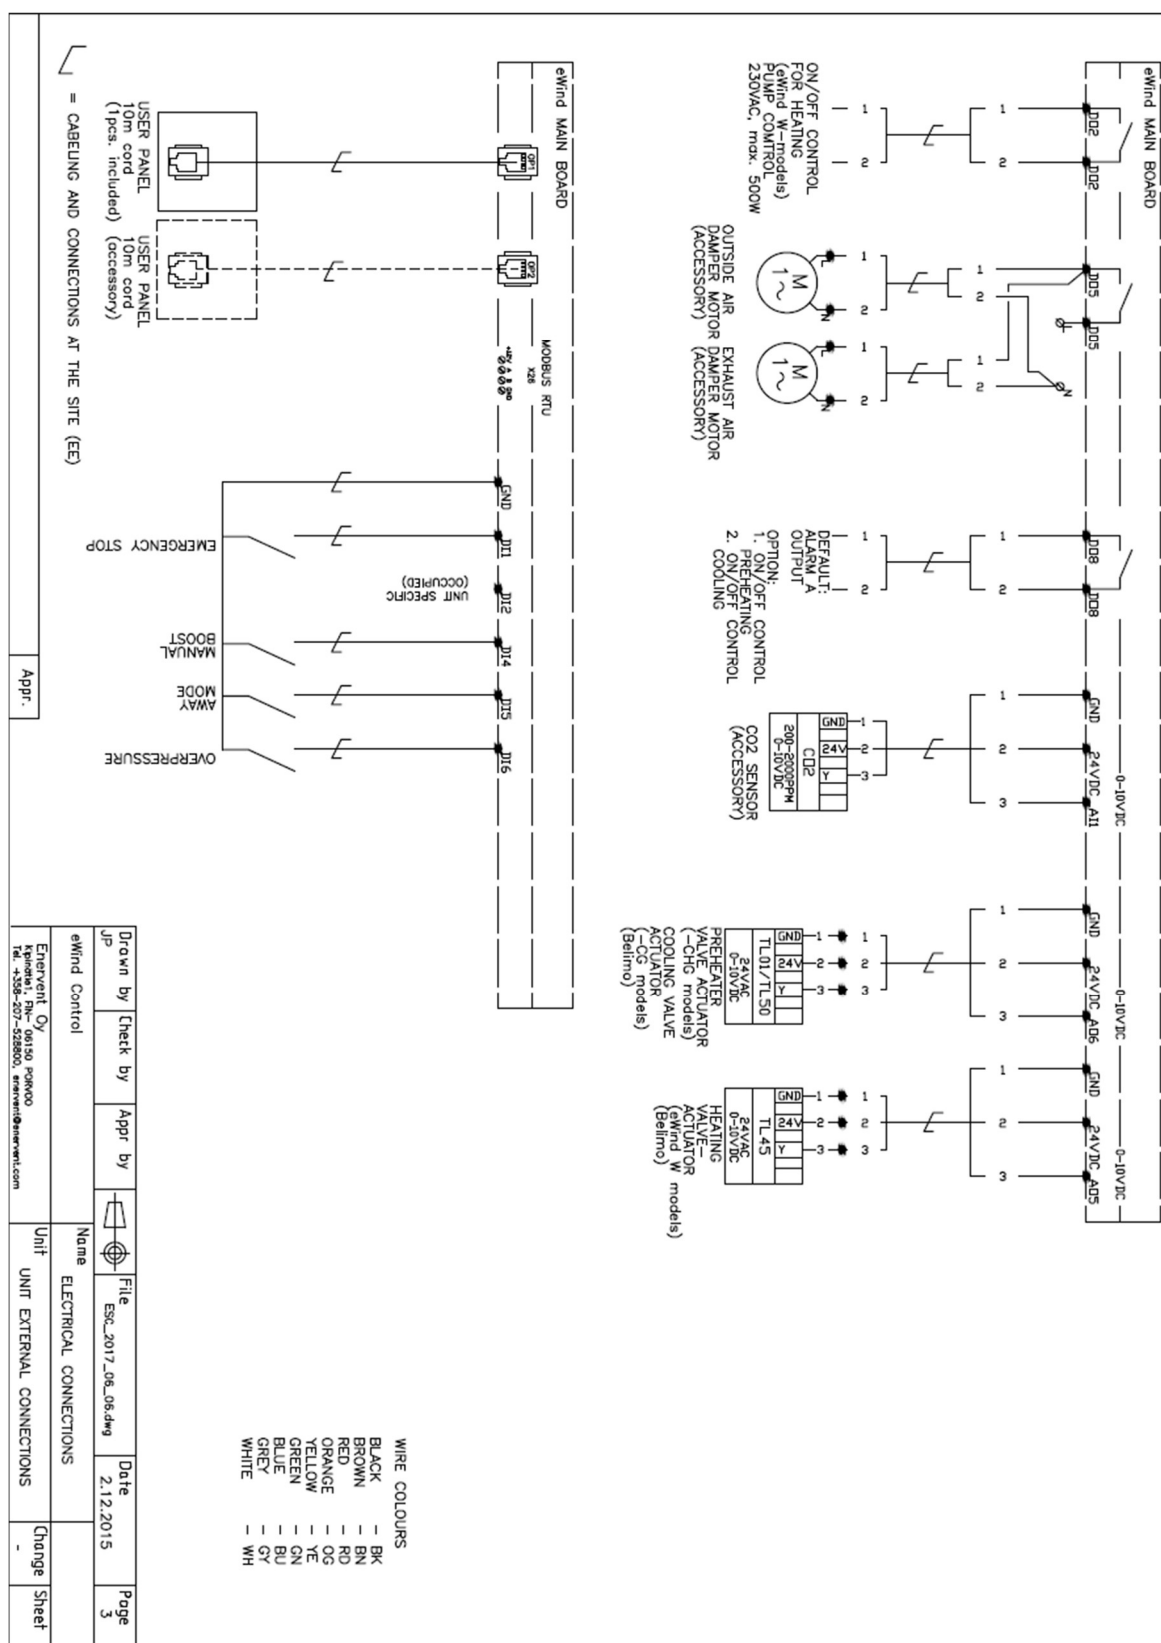

MANDATORY PARTS

10023999	CONTROL UPDATE KIT PEGASOS E/ACE/ECE→ EWIND E	1
10025828	FAN RAIL PACKAGE PEGASOS	1
10023145	FAN PACKAGE PEGASOS EBM 520W	2
	or	
10025051	FAN PACKAGE PEGASOS XL EBM 545W	2
	or	
10023144	FAN PACKAGE PEGASOS Z 500W	2
10023897	ELECTRICAL HEATER 4kW	1
	or	
10023896	ELECTRICAL HEATER 6kW	1

Code	Description	Pcs.
10023999	CONTROL UPDATE KIT PEGASOS E/ACE/ECE→ EWIND E	
	Automation	
40029189	Control board EM-240-M	1
40030936	PCB support KGLS-6S	4
40030937	PCB support LCBSM-6-01	4
40031695	Screw DIN 7981 ZN 3,9x9,5	4
40031631	Screw DIN 7985 ZN M4x20	1
40031537	Washer 6798-A ZN M4x8	3
40031489	Nut DIN 934/8 ZN M4	1
40028772	Wire 65mm orange 0,75mm2	1
40028773	Wire 340mm orange 0,75mm2	6
40028774	Wire 255mm 1mm2 black	3
40028779	Wire 255mm 1mm2 blue	1
40031094	eWind main board	1
40029195	Power supply Tufvassons PSLR24	1
40028788	Ground wire 100mm	1
40029647	Automation base	1
40029344	Terminal package	1
	Components	
40030100	Cable sealing VET 5-7	2
40030101	Cable sealing VET 7-10	3
40028782	Fan power cable supply air	1
40028783	Fan power cable extract air	1
40028784	Fan control cable supply air	1
40028785	Fan control cable extract air	1
40029167	EDA temperature sensor 1700mm	3
40029165	EDA temperature sensor 850mm	1
40029225	Humidity/temperature sensor Amphenol 1800mm	1
40028774	Wire 255mm 1mm2 black	2
40028780	Wire 600mm 1mm2 black	2
40031530	Screw ZN 4,2x25	6
40031537	Washer 6798-A ZN M4x8	1
40031489	Nut DIN 934/8 ZN M4	1
40030997	Cable tie 2,5x200mm	10
40031559	POP-rivet Multigrip 3,2x9	12
40028738	HRW motor package stepless DC	1
40028725	Rotor cable DC 60cm	1
40031115	eWind panel package	1
40034288	WiFi module package	1
40034055	Pressure difference switch	1
	Manuals etc. (depends on model)	
	eWind installation manual	1
	eWind user manual	1
	eWind electrical diagrams	1

MANDATORY PARTS

10024028	CONTROL UPDATE KIT PEGASOS ACW → EWIND W	1
10025828	FAN RAIL PACKAGE PEGASOS	1
10023145	FAN PACKAGE PEGASOS EBM 520W	2
	or	
10025051	FAN PACKAGE PEGASOS XL EBM 545W	2
	or	
10023144	FAN PACKAGE PEGASOS Z 500W	2

Code	Description	Pcs.
10024028	CONTROL UPDATE KIT PEGASOS ACW → EWIND W	
	Automation	
40029189	Control board EM-240-M	1
40030936	PCB support KGLS-6S	4
40030937	PCB support LCBSM-6-01	4
40031695	Screw DIN 7981 ZN 3,9x9,5	4
40031631	Screw DIN 7985 ZN M4x20	1
40031537	Washer 6798-A ZN M4x8	3
40031489	Nut DIN 934/8 ZN M4	1
40028772	Wire 65mm orange 0,75mm2	1
40028773	Wire 340mm orange 0,75mm2	6
40028774	Wire 255mm 1mm2 black	3
40028779	Wire 255mm 1mm2 blue	1
40031094	eWind main board	1
40029195	Power supply Tufvassons PSLR24	1
40028788	Ground wire 100mm	1
40029341	Terminal SL 4/15	1
40029343	Terminal ES 15 PA	1
40029340	Terminal SRK 2,5/15 PA	2
40029330	PMC SB 5/50 So ERDE	1
40029329	PMC SB 5/50 So L	1
40029327	PMC SB 5/50 FW N	1
40029647	Automation base	1
	Components	
40030100	Cable sealing VET 5-7	2
40030101	Cable sealing VET 7-10	3
40028782	Fan power cable supply air	1
40028783	Fan power cable extract air	1
40028784	Fan control cable supply air	1
40028785	Fan control cable extract air	1
40029167	EDA temperature sensor 1700mm	3
40029165	EDA temperature sensor 850mm	1
40029225	Humidity/temperature sensor Amphenol 1800mm	1
40029228	Return water sensor, surface	1
40029982	WaGo 221-415	2
40031530	Screw ZN 4,2x25	6
40031537	Washer 6798-A ZN M4x8	1
40031489	Nut DIN 934/8 ZN M4	1
40028774	Wire 255mm 1mm2 black	1
40030997	Cable tie 2,5x200mm	10
40031559	POP-rivet Multigrip 3,2x9	12
40028738	HRW motor package stepless DC	1
40028725	Rotor cable DC 60cm	1
40031115	eWind panel package	1
40034288	WiFi module package	1
40034505	Valve actuator TR24-SR	1
	Manuals etc. (depends on model)	
	eWind installation manual	1
	eWind user manual	1
	eWind electrical diagrams	1

Notes: