

Automation upgrade

Pegasos EDA -> eWind

NOTE!

Fan rotation guards must be disabled in the new eWind settings.

Warning!

According to regulations, an ordinary electricity consumer is only allowed to perform some minor service tasks.

**According to Finnish regulations,
a list of the allowed tasks can be found at the Tukes home page (www.tukes.fi).**

Always make sure that the power supply is turned off before opening the service door.

Wait two minutes before beginning the maintenance work. The fans rotate for some time by themselves, and the heating element may be hot even if the power supply of the ventilation unit is switched off. Electrical housing may be opened only by a trained electrician.

Electrical installations must comply with local regulations.

**Continuously check and compare the electrical diagrams at the end
of this instruction as the upgrade progresses!**

Table of contents

Upgrade.....3

Electrical diagrams EDA26

Electrical diagrams eWind30

Parts list eWind E34

Parts list eWind W35

Notes36


Open **the small door (1)** by pressing on it.



Disconnect **all power supplies to the unit (2)**.




Open the service door by turning **the handle (3)**.

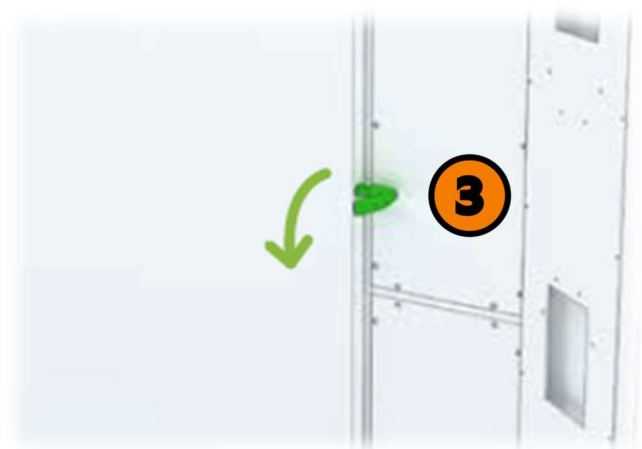


Remove **the cover to the electrical box (1)** and **the supply air fan chamber (1)** by removing the screws.

NOTE! Ensure that no voltage is occurring in the electrical box before proceeding!


Remove **the POP rivets** from **the cable rail (2)** by drilling, and remove the cover.

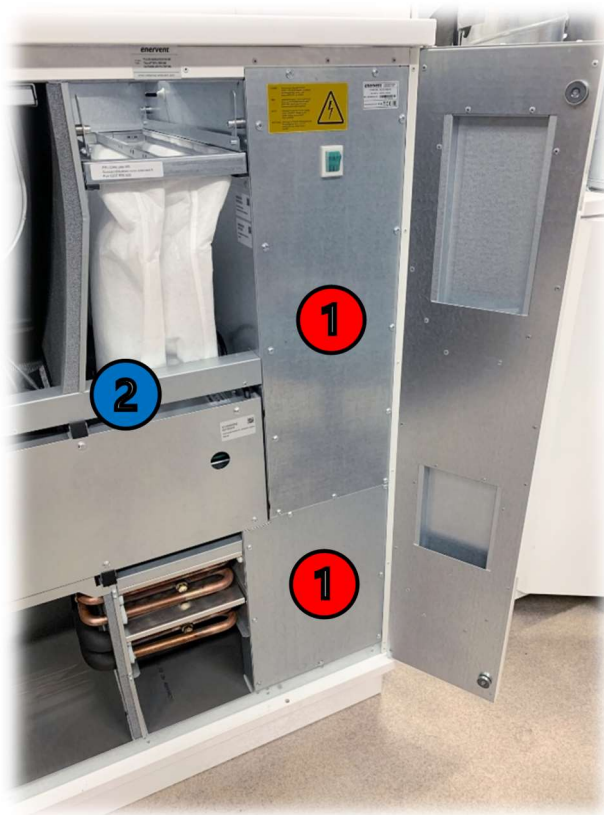


Remove **the filters (1)** by pulling.
Disconnect **the connectors (2)**.
Remove **the fans (3)**.
Remove **the fan rails (4)** by drilling the pop-rivets (they are also glued to the frame).

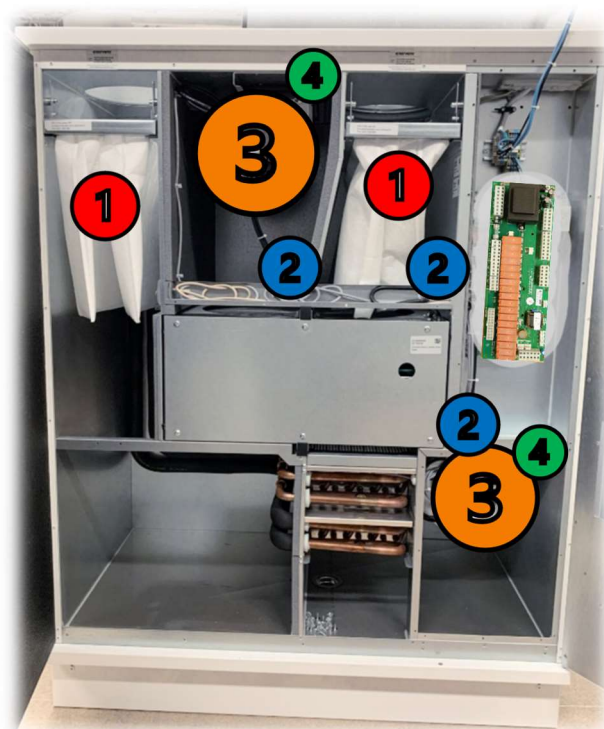


Mark all wires/sensors according to the marking on the main board and disconnect them from **the EDA main board (1)**.

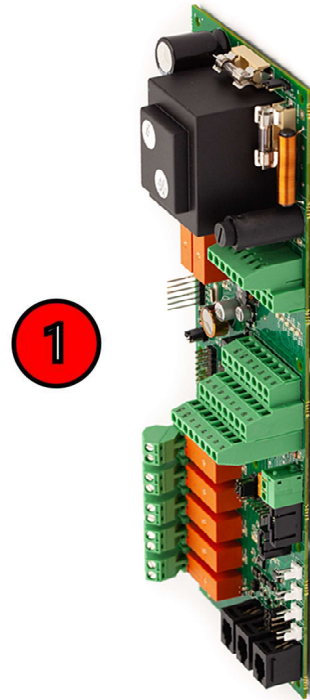

Mark all wires according to the marking on the circuit board and disconnect them from **the HRW circuit board (2)** and **possible transformer (3)**.
Type of HRW depends on year of manufacture.

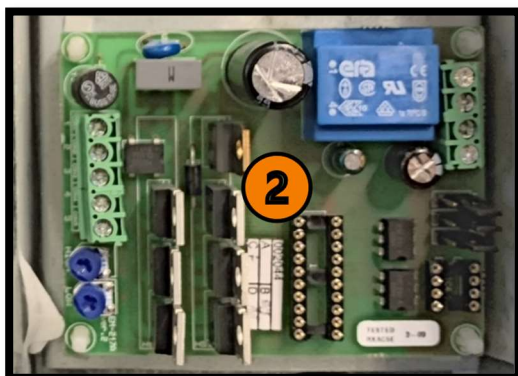

AC HRW circuit board.

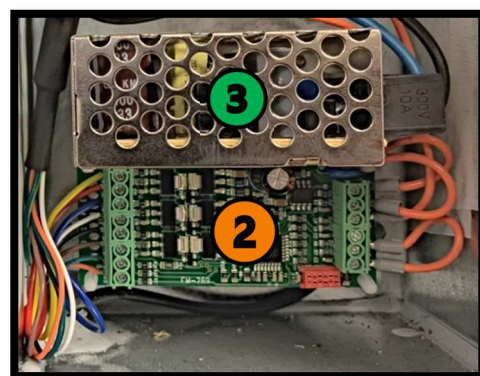



DC HRW circuit board.

Disconnect **all ground wires (1)** from the automation base ground point.



Remove **the screws (3)** and remove the automation base incl. **relay board (4)**, **EDA main board (5)**, **capacitors (6)** and **transformer (2)**.

If there is a **blue relay (7)** installed, remove the relay along with the wires and replace the electrical after heater with the new delivered one.

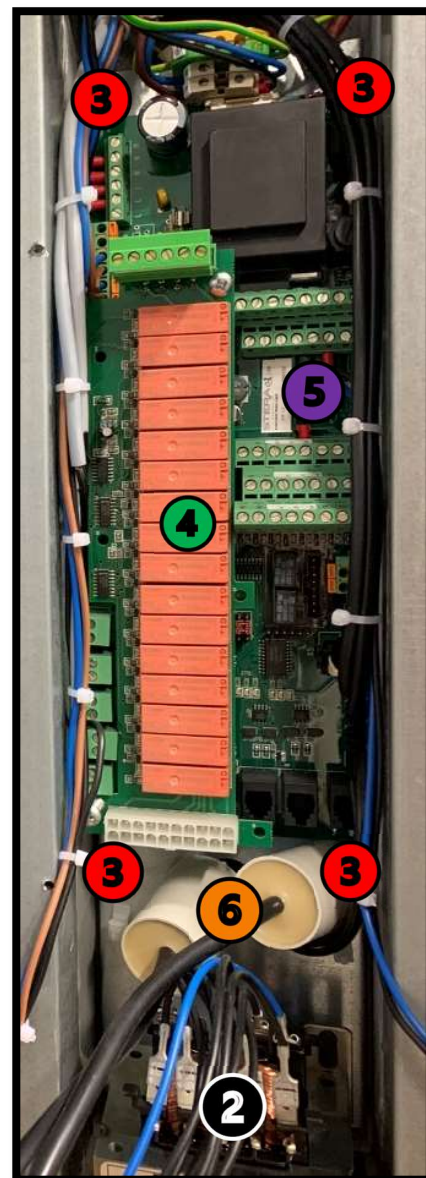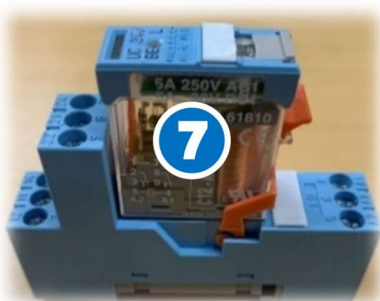

Don't uninstall the main power supply terminals,
the main switch (1), or the wires connected to them.



If the unit has an electrical after heater installed;
Disconnect and remove
the pressure difference transmitter (2).
Disconnect but don't uninstall **the pressure hoses (3)**.




NOTE! If there was a blue relay installed;

Disconnect and remove **the HRW (3)** and install **the new after heater (10023897)**.

NOTE! If there was no blue relay installed in the electrical box;



Open **the after heater (1)** (four screws).
Remove the old triac control cable and install **the new triac control cable (2)** (40030313).
Install the other end of the triac control cable into the electrical box.

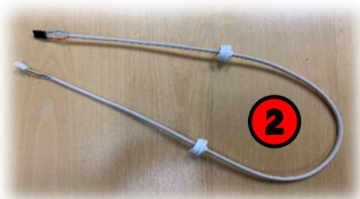

Remove **the extract air sensor cable (4)**.

Remove **the fan cables (6)**.

Install **the new extract air sensor (5)** (40029225) and attach it with **cable ties** (40030997) on top of the old sensor.
The old sensor won't be used anymore.

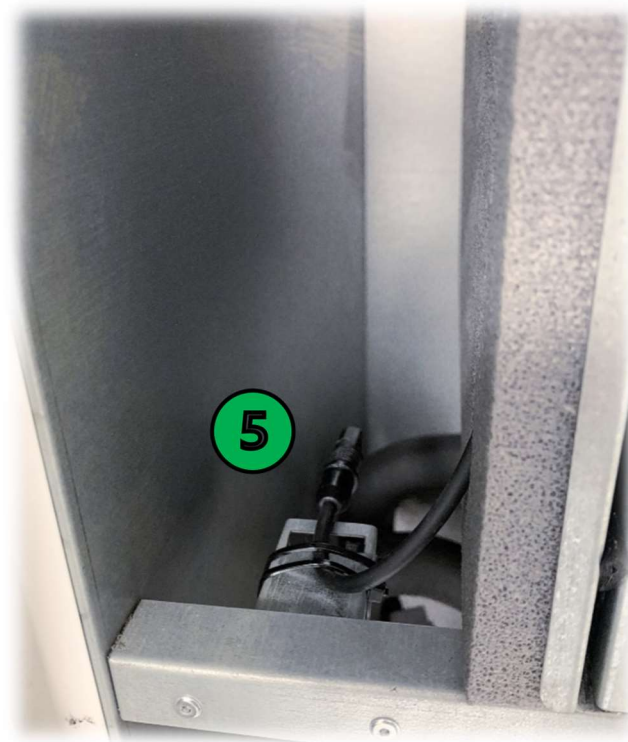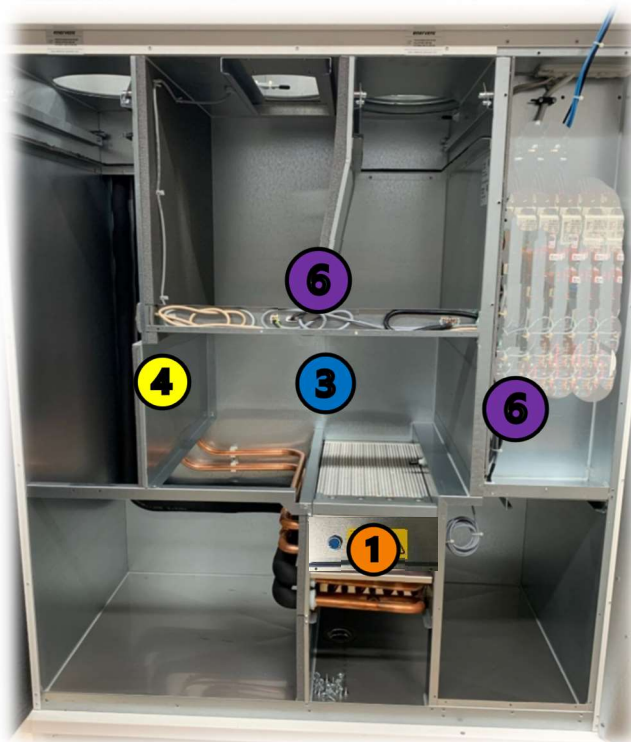


Cut a gap in the insulation and install the extract air sensor cable into **the gap (1)** and through the cable rail into the electrical box.



Drill two 18mm holes (if needed) in the frame (where the old fan cables were attached), install **new cable sealings** (40030101) and install **the new fan cables (2)** (40028782, 40028783, 40028784, 40028785).




If the unit has a DC HRW installed, jump to page 14.

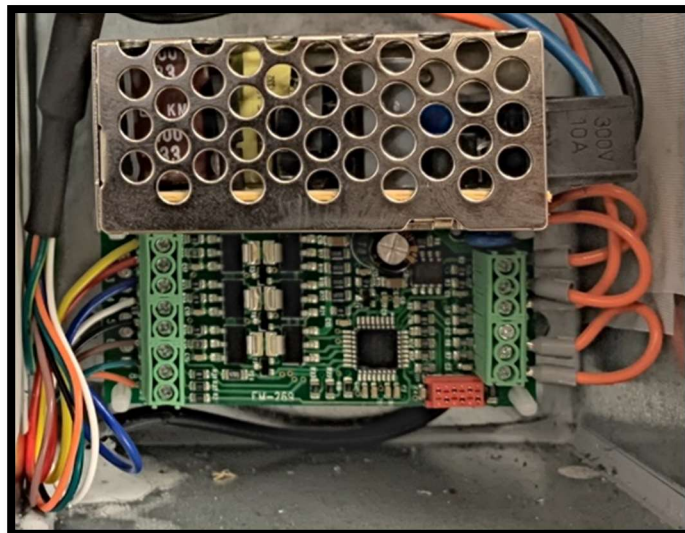

If the unit has an AC HRW installed, follow the instructions on the next page.


If the AC HRW control board is installed separately in the electrical box, there is no need to move it physically. Just connect it like advised (page 13, 21, 27).

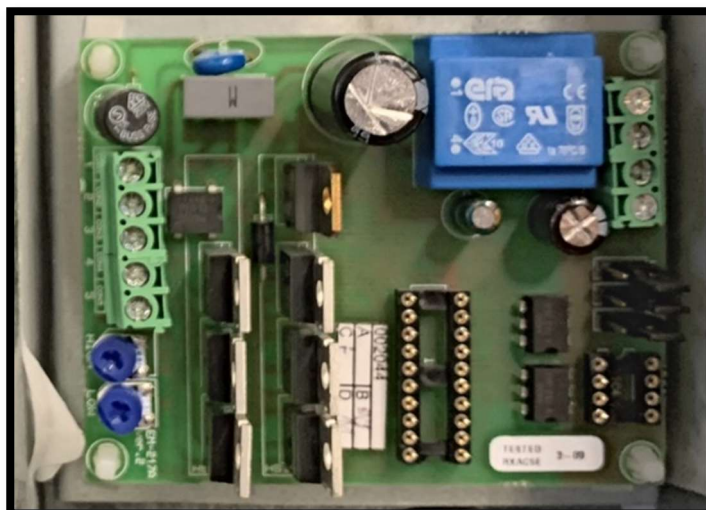

Remove **the PCB supports (1)** from the new automation base.




Mark **the holes (2)** to the automation base, and drill 4 pcs. 4,5mm holes according to the markings.

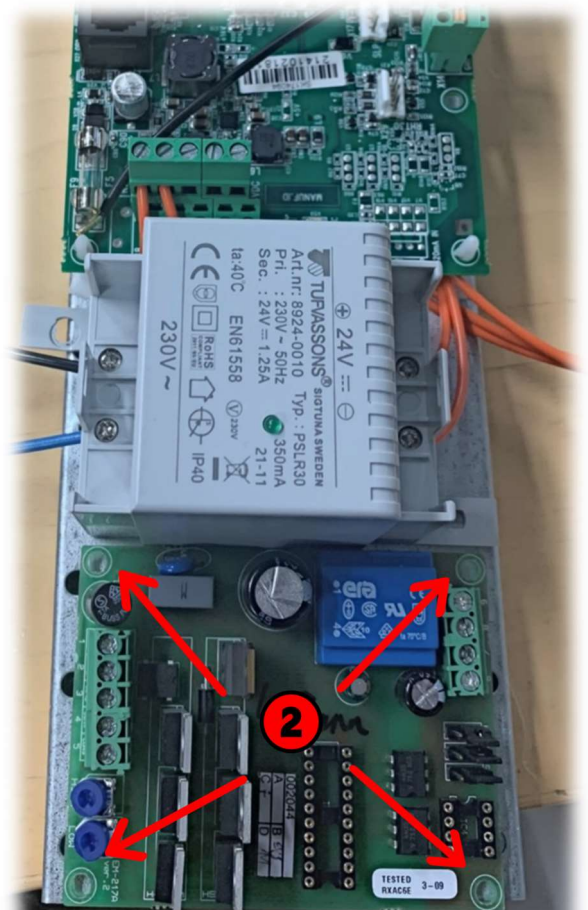


Install **the new PCB supports** (40030936) **into the drilled holes (1).**

Attach the AC HRW circuit board to the PCB supports.

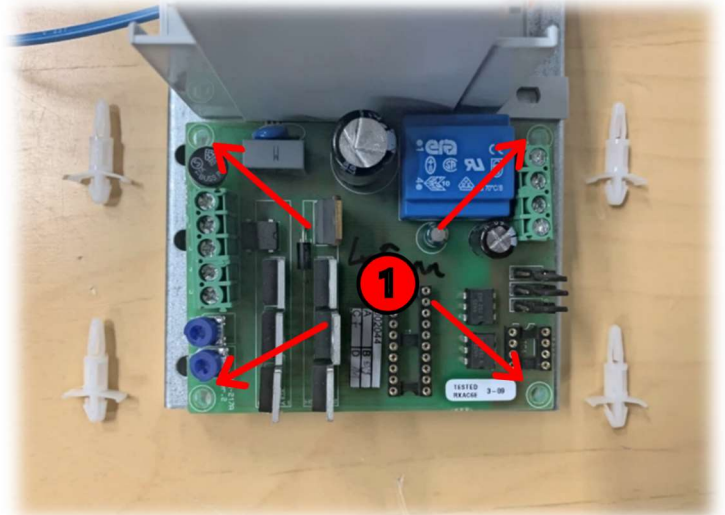


Disconnect and remove **the possible extra wire (2).**

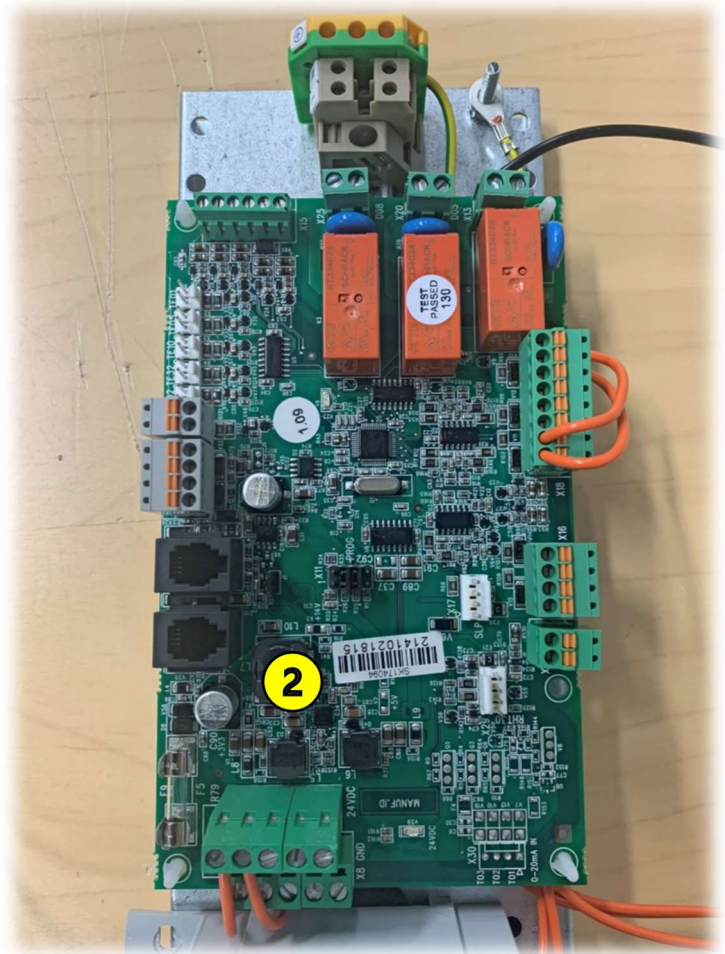

Connect **the wire from the main board connector "AO4"** to AC HRW circuit board "8".

Connect **the wire from the main board connector "GND"** to AC HRW circuit board "7".

1

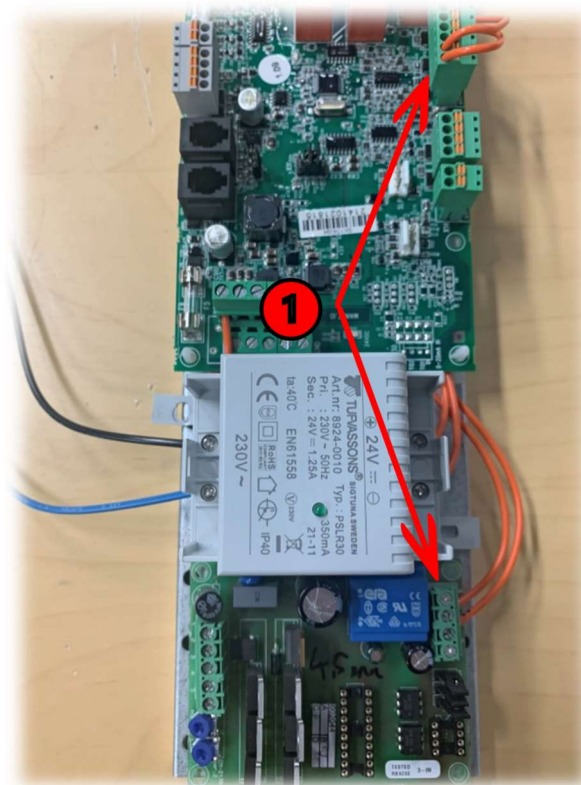


Install **the connection terminals (2)** (40029982) to the wires and the transformer.

Connect **the wires (3)** (40028774 & 40028779) to the connection terminals (black -> 1, blue -> 2).

Connect **the wires (4)** (40028780 & 40028781) to the AC HRW circuit board connectors:


1: Black (L)

2: Blue (N)

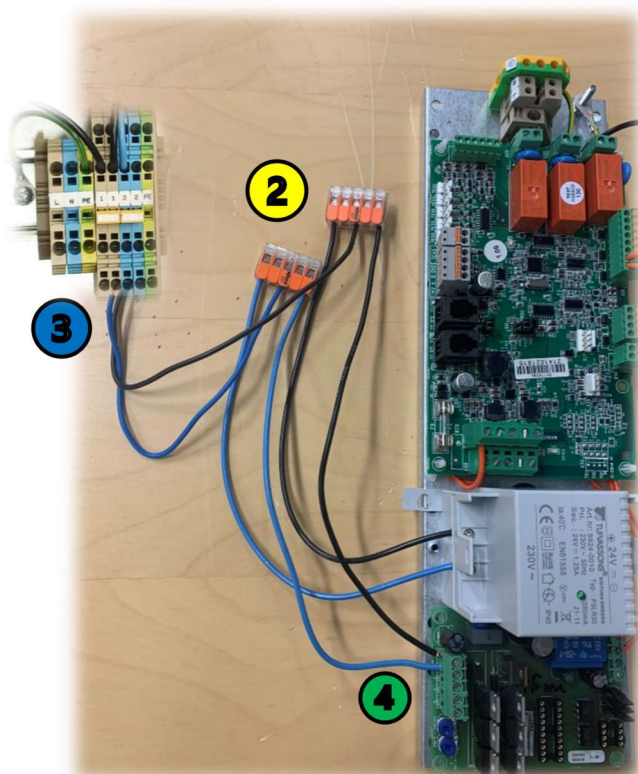

Install **the new automation (3)** in the electrical box. Make sure no installed cable / sensor get stuck behind the automation base and that they are available in front of the main board.

Attach **the automation base (40029647)** to the electrical box with **four self tapping screws (4) (40031530)**.

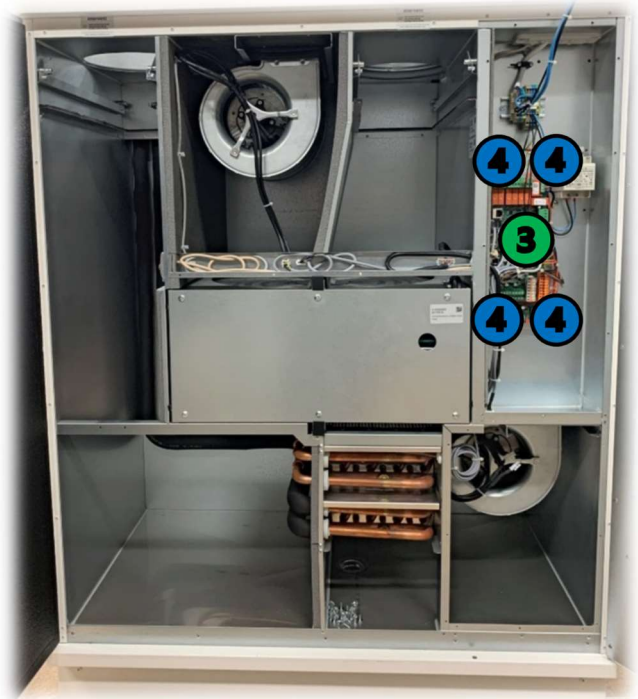


Connect **the power supply wires to the new terminals (1)**.

If electrical after heater installed:

- 1: Black connection terminal (1)
(from main switch L1)
- 2: Blue connection terminal (2)
(N-terminal)

If water after heater installed:


- 1: Black connection terminal (1)
(from main switch L)
- 2: Blue connection terminal (2)
(from main switch N)

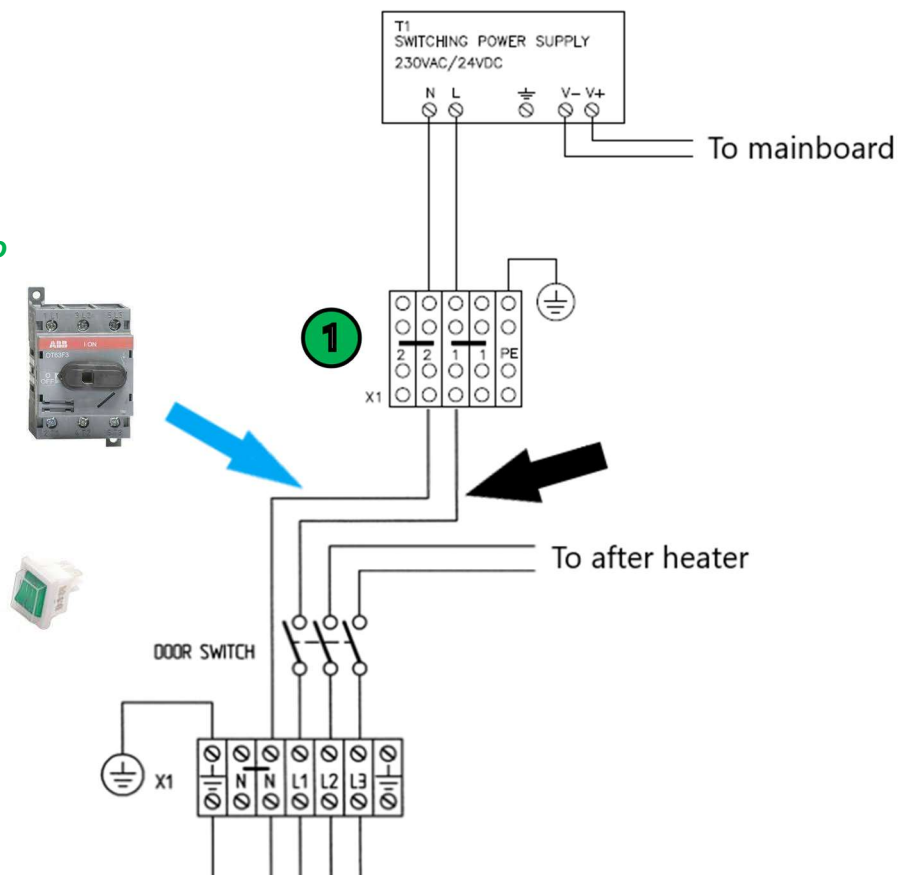


If electrical after heater installed:

Connect **the power supply to the electrical after heater (2)**


- After heater black wire L2
(to main switch L2)
- After heater gray wire L3
(to main switch L3)

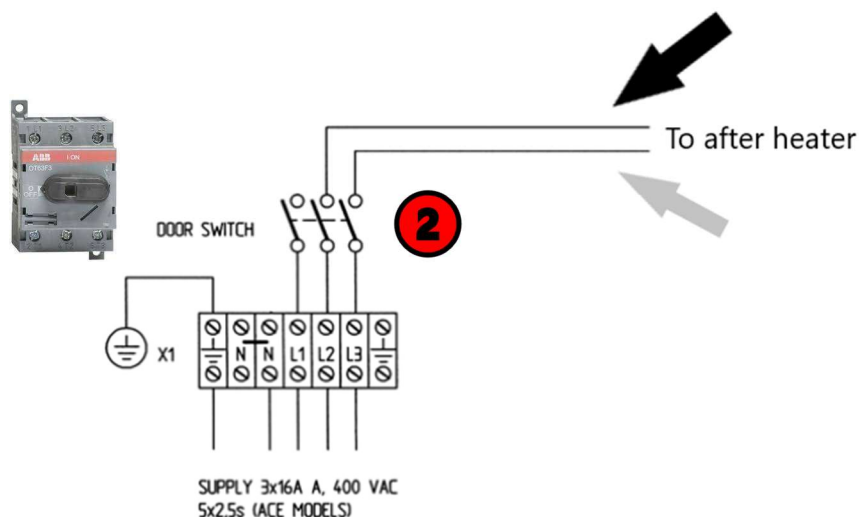

Connect **the ground wires** to **the automation base ground point (1)**.
Supply air fan, extract air fan, (HRW), ground terminal.
Tighten with **the nut (40031489)**.

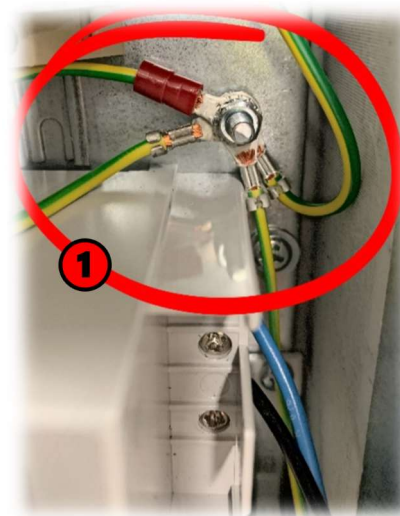

Connect **the blue wire** from the electrical after heater to **the blue "2" connection terminal (2)**.
Ignore if no electrical after heater installed.

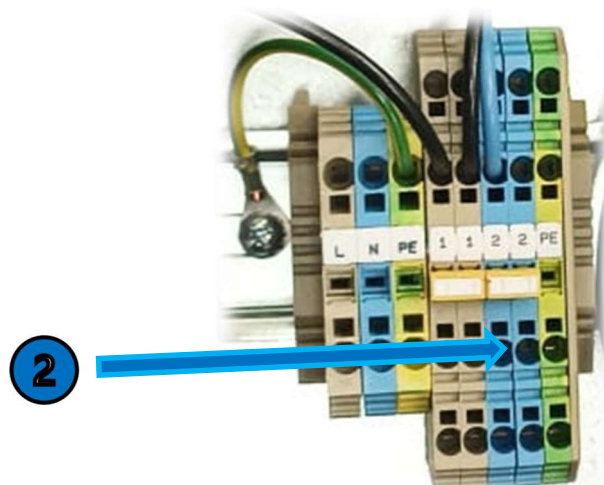


Connect **the brown wire** from the electrical after heater to **the pressure difference switch (COM) (1)**.
Ignore if the unit has a water coil after heater installed.




Connect a **black wire** (40028780) from **the pressure difference switch (NO)** to **DO2 (2)**.

Ignore if the unit has a water coil after heater installed.

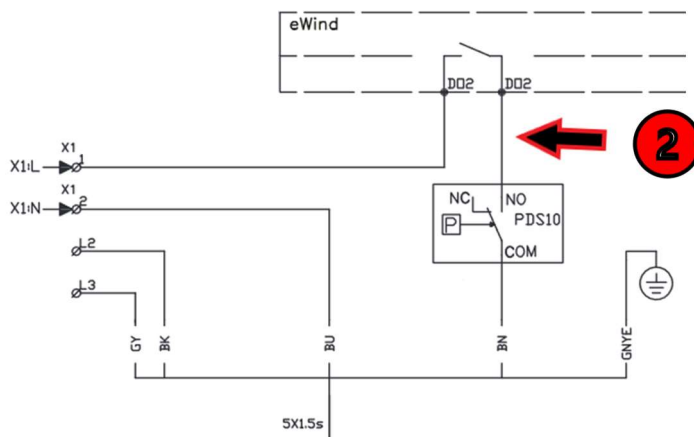


Connect a **black wire** (40028780) from **connection terminal "1"** to **DO2 (2)**.

Ignore if the unit has a water coil after heater installed.

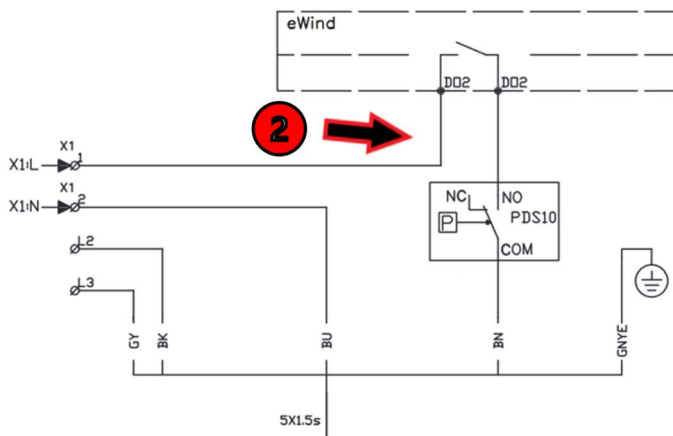


Connect **the wires marked "2"** in the fan power cables to **the blue "2" connection terminal (2)**.

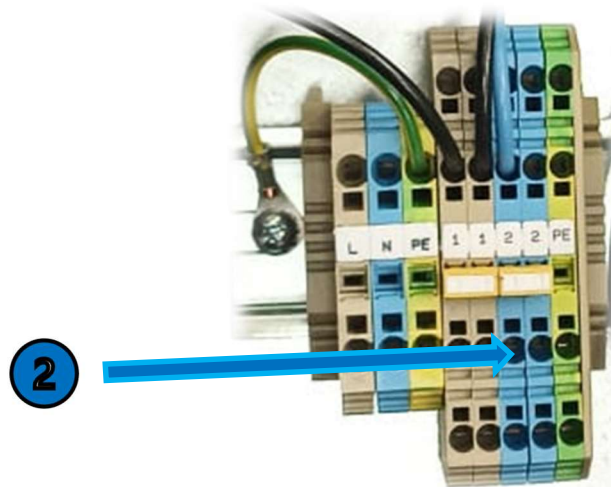

Connect **the wires marked "1"** in the fan power cables to **the brown "1" connection terminal (1)**.

1

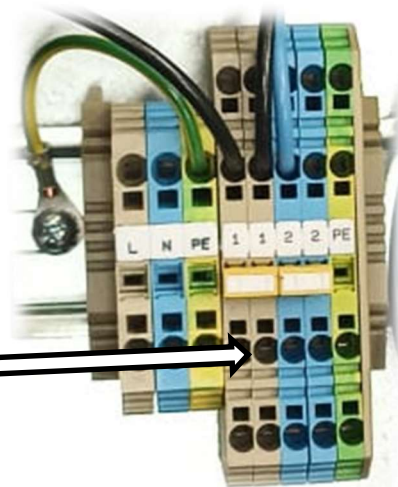

Connect **the extract air sensor (2)** (40029225) to the main board (X29).



Connect **the sensors (3)** to the main board according to the markings.

X1, TE01: Outside air


X2, TE05: HRW supply air

X3, TE10: Supply air

X4, TE32: Waste air


X12, TE45: Return water sensor (4)

if the unit has a watercoil after heater installed.

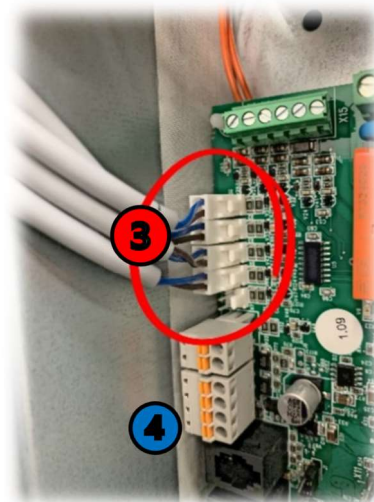


Connect **the wires from the supply air fan control cable (1)** (40028784) to the main board.

- 1: Brown
- 2: Black
- 3: Gray

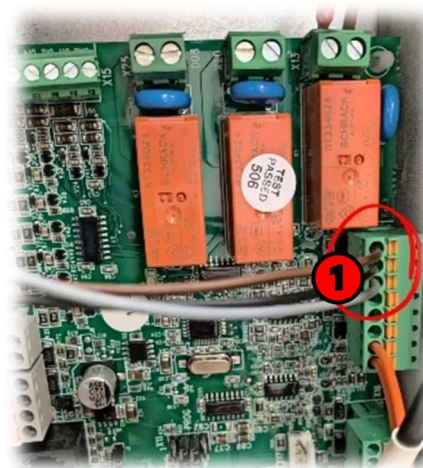

Connect **the wires from the extract air fan control cable (2)** (40028785) to the main board.


- 4: Brown
- 5: Black
- 6: Gray

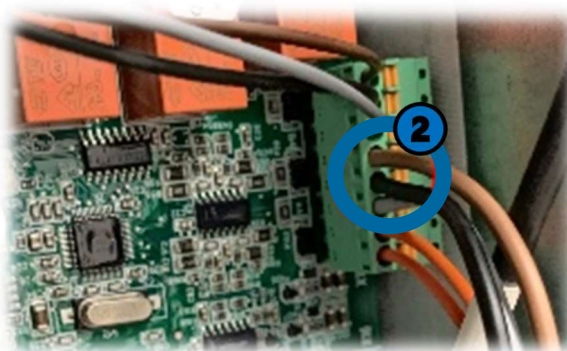


Connect **the after heater control cable (3)** to the main board (X17).
Ignore if the unit has a water coil after heater installed.

Connect other components (for example actuator for cooling coil or water coil after heater) according to the electrical diagrams (pages 30-33).

Attach all cables and wires together with cable ties (40030997).

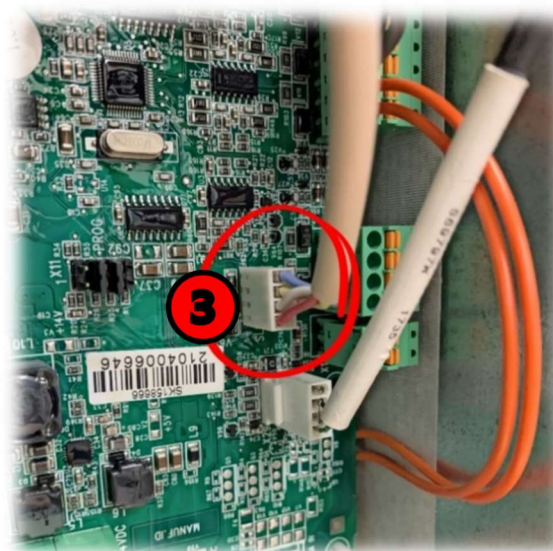


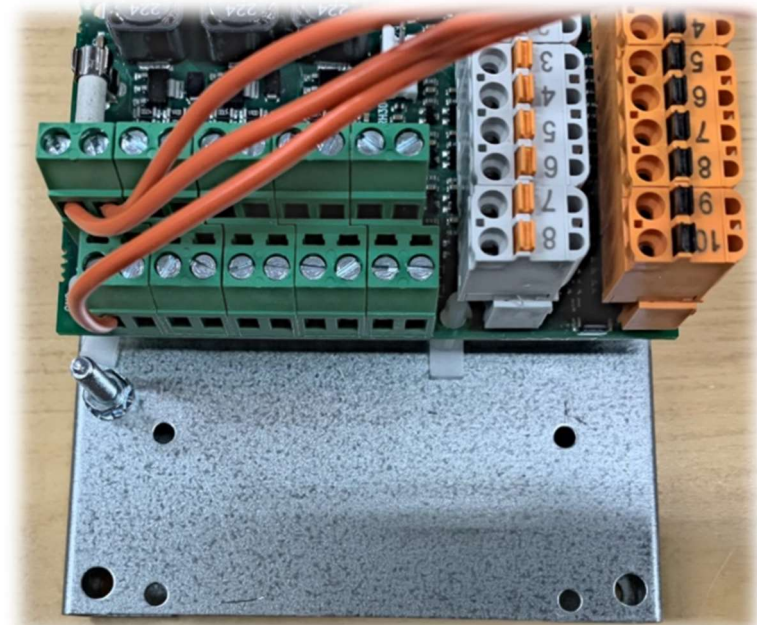

If DC HRW:

Install **the old DC HRW circuit board (1)** to the new automation base / or leave it in place if installed separately in the electrical box, and connect it to the main board according to the electrical diagram (**page 31**).

The old transformer won't be used anymore!

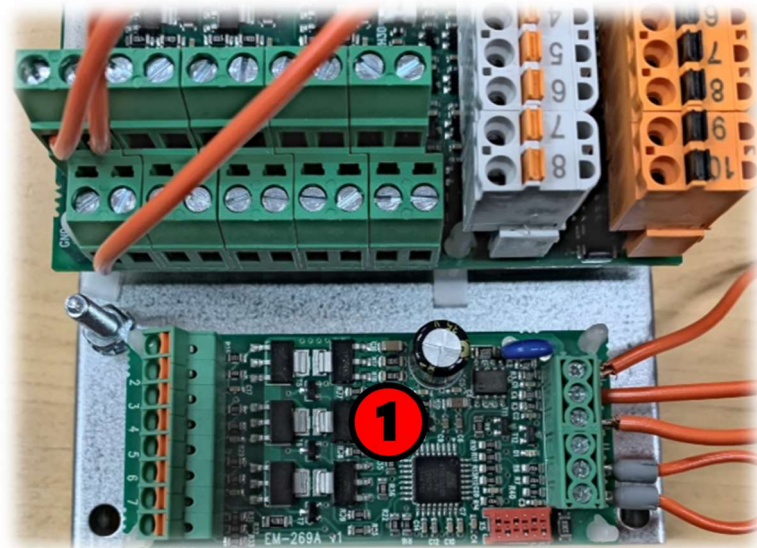

If DC HRW:

Connect **the wires from the HRW cable to the HRW control board (1).**

1: Yellow

2: Red

3: Blue


4: White

5: Black

6: Brown

7: Green

8: Orange

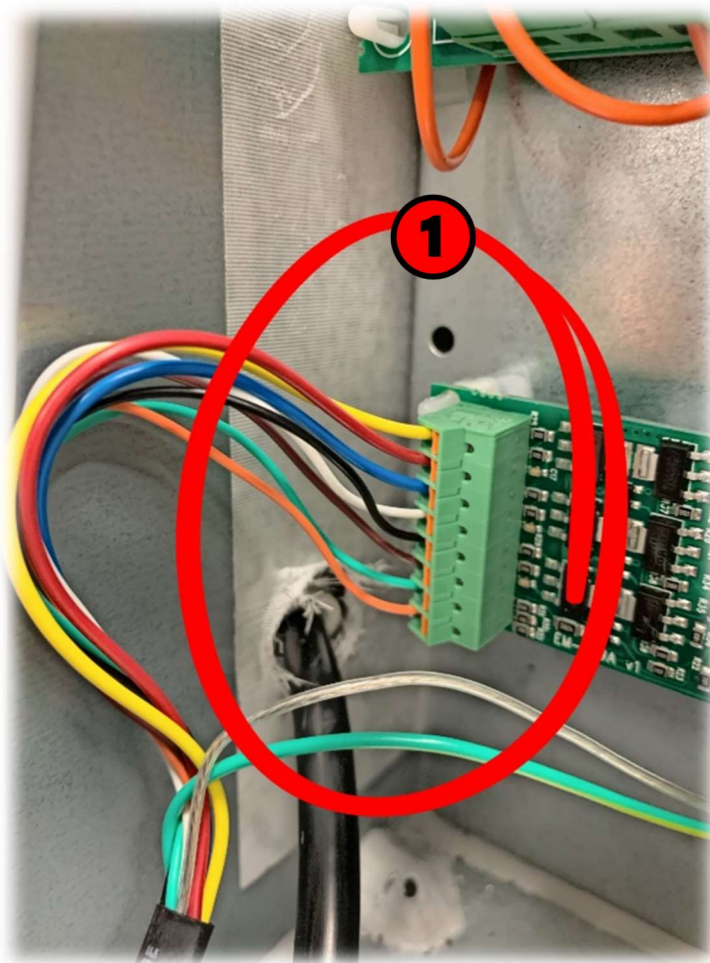


If AC HRW:

Connect **the wires from the HRW cable to the HRW control board (2).**

3: Brown / (1)



4: Gray / (2)

5: Black / (3)

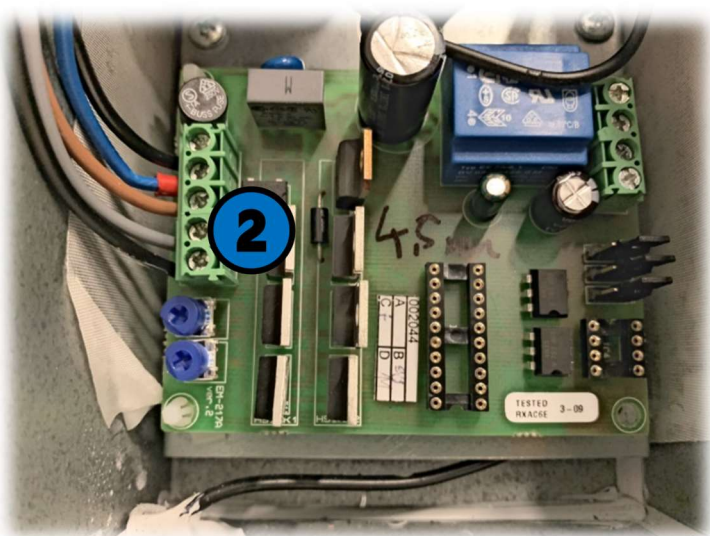

If DC HRW:

Release **the screw (1)** from the automation base and attach **the ground wire** from the HRW cable to the screw, along with **a washer** (40031537).

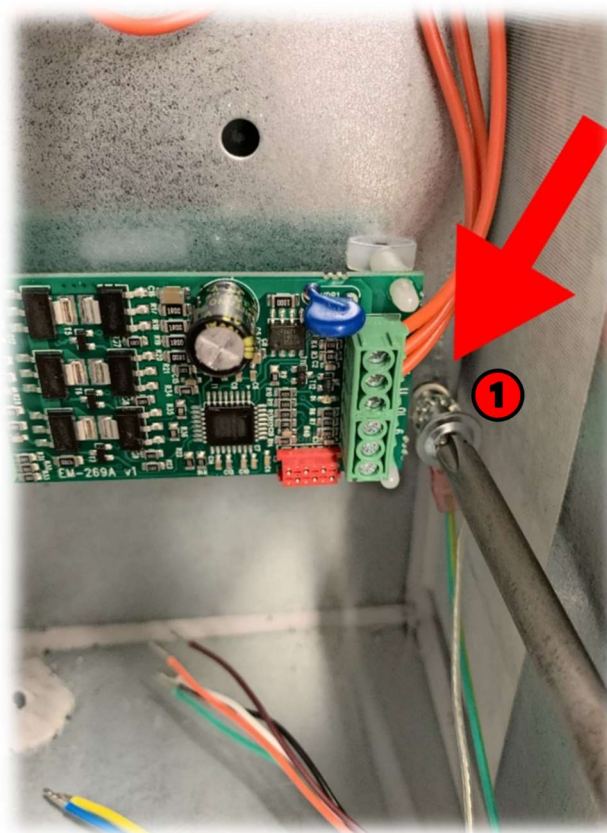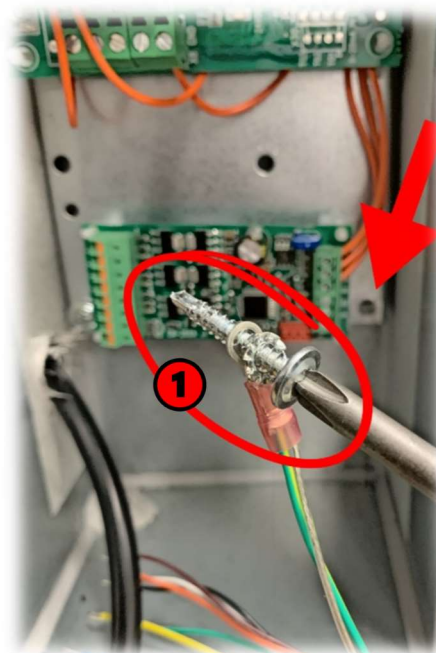

Reattach **the screw (1)** to the automation base.

Install **the new fan rails and the fans (1)**

(10023145 (EBM 520W))

(10025051 (EBM 545W))

(10023144 (Z 500W))

NOTE! The new supply air fan rail must be installed 15mm more to the left compared to the old supply air fan rail.


New holes for the pop-rivets must be drilled.
(Otherwise the new supply air fan won't fit!)

Connect **the fan cables (2)** and attach them together with cable ties (40030997).

Install **the filters (3)**.

Connect **the display cable (4)** to the main board.

Install **the HRW (5)**.

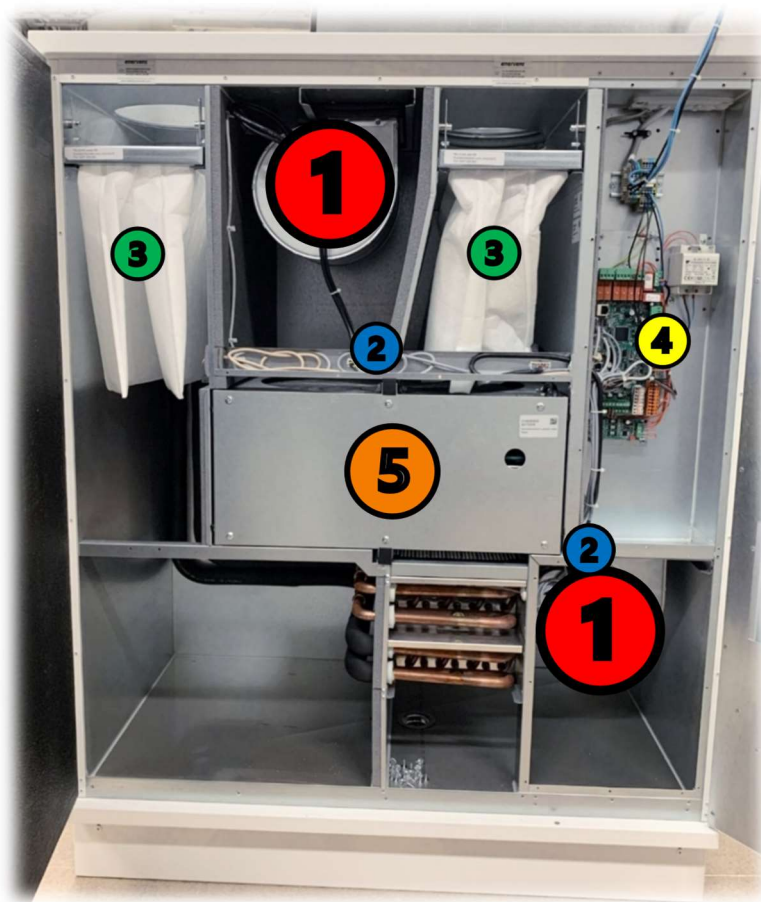

Disconnect and remove the old display.
Install **the new display (6)** (40031115) in a desired place.




Install **the WiFi module (7)** (40034288).



If electrical after heater installed:

Turn on **the main switch (1)** and perform insulation and ground continuity test according to regulations.

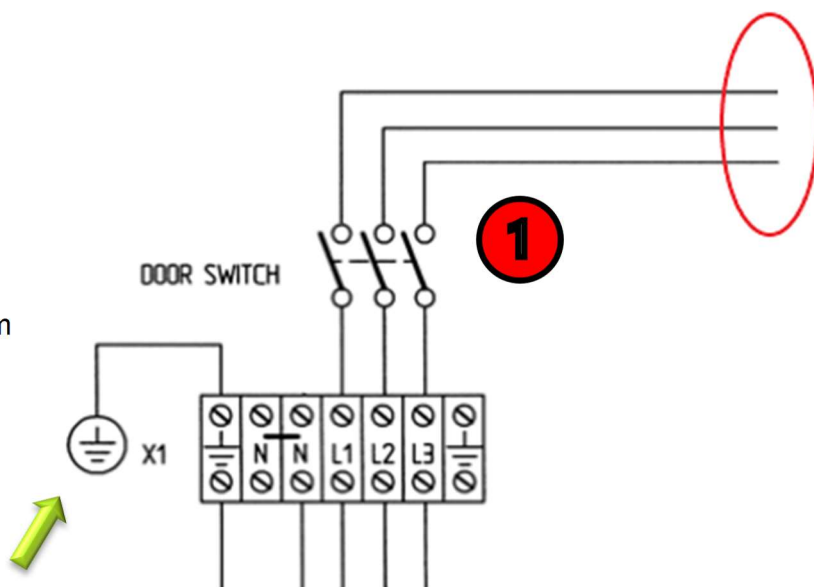

If water coil after heater installed:

Turn on **the main switch (1)** and perform insulation and ground continuity test according to regulations.




Attach the cover to **the electrical box (2)**.


Attach **the cover to the cable rail (3)** with the new **POP rivets** (40031559).

Install **the new type plate sticker (4)**.

Close the service door.




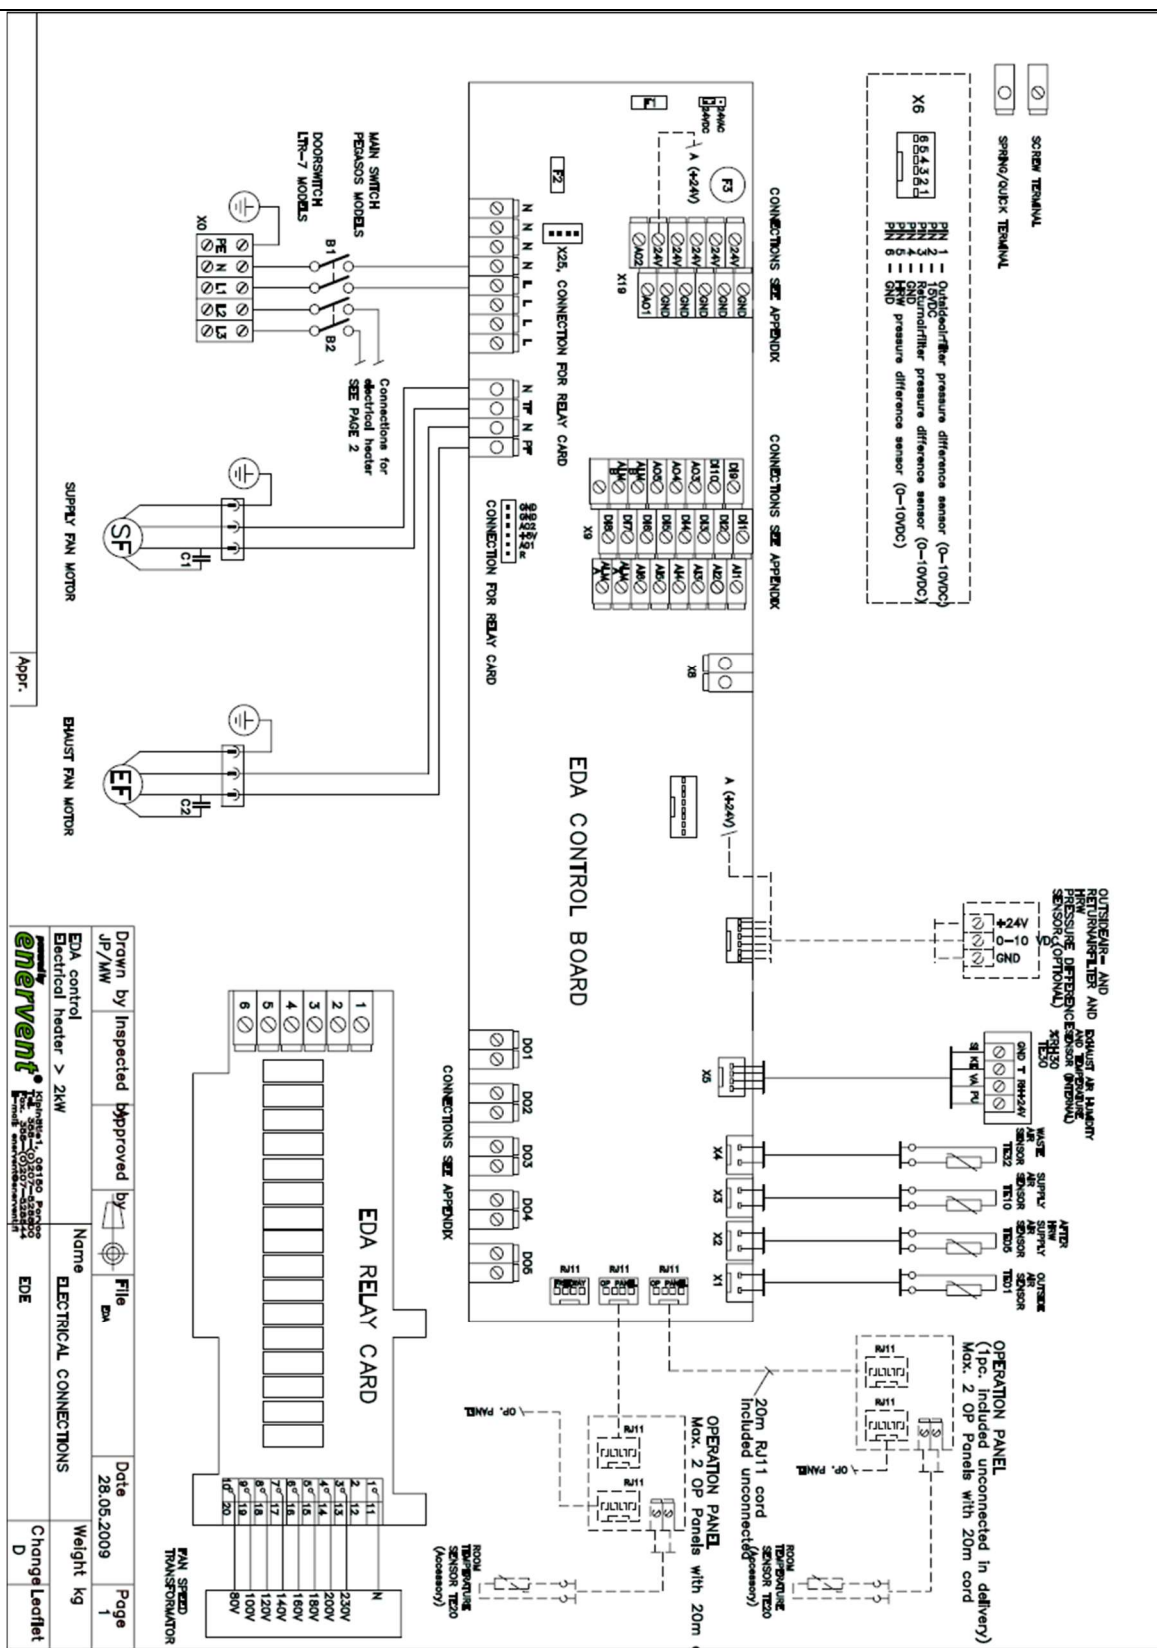


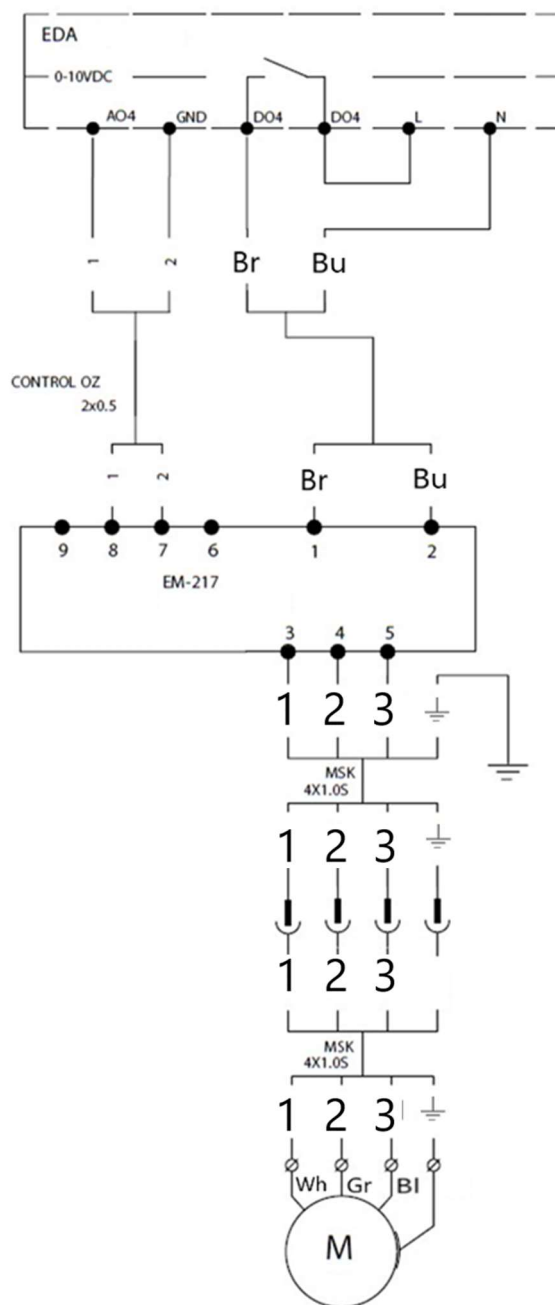



Bl: Black
Bu: Blue
Br: Brown
Wh: White
Gr: Gray



HRW MOTOR

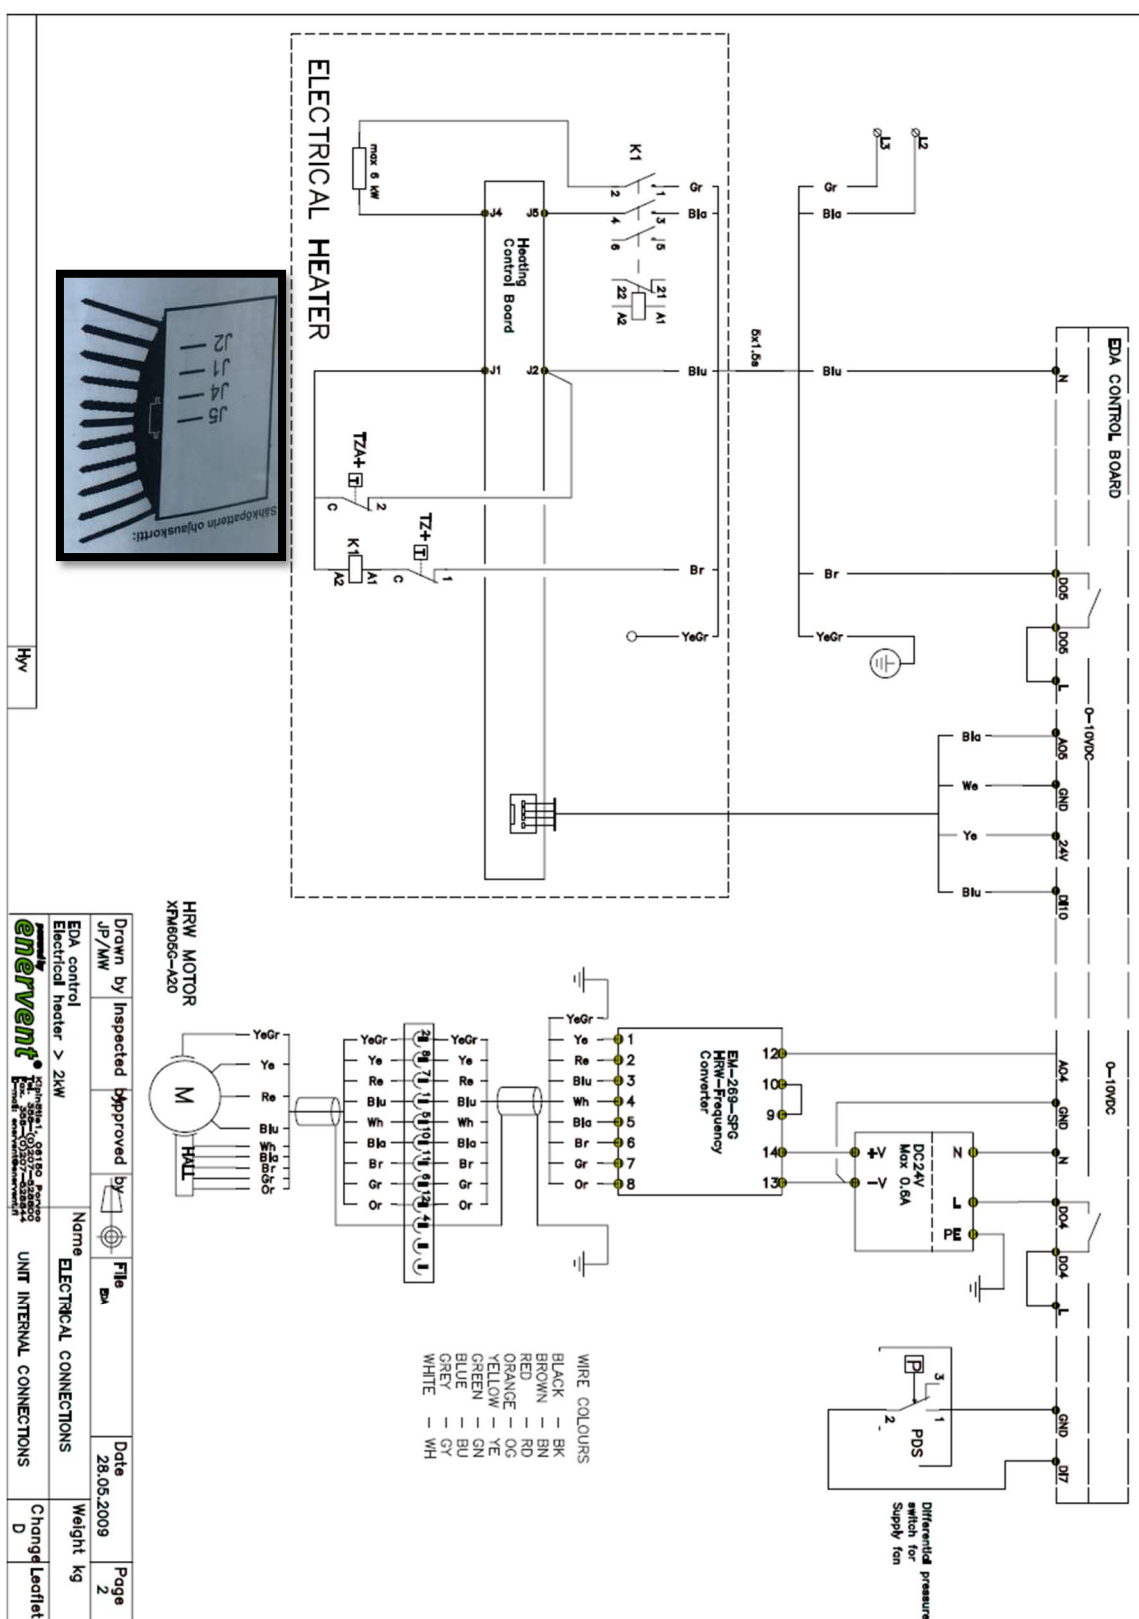

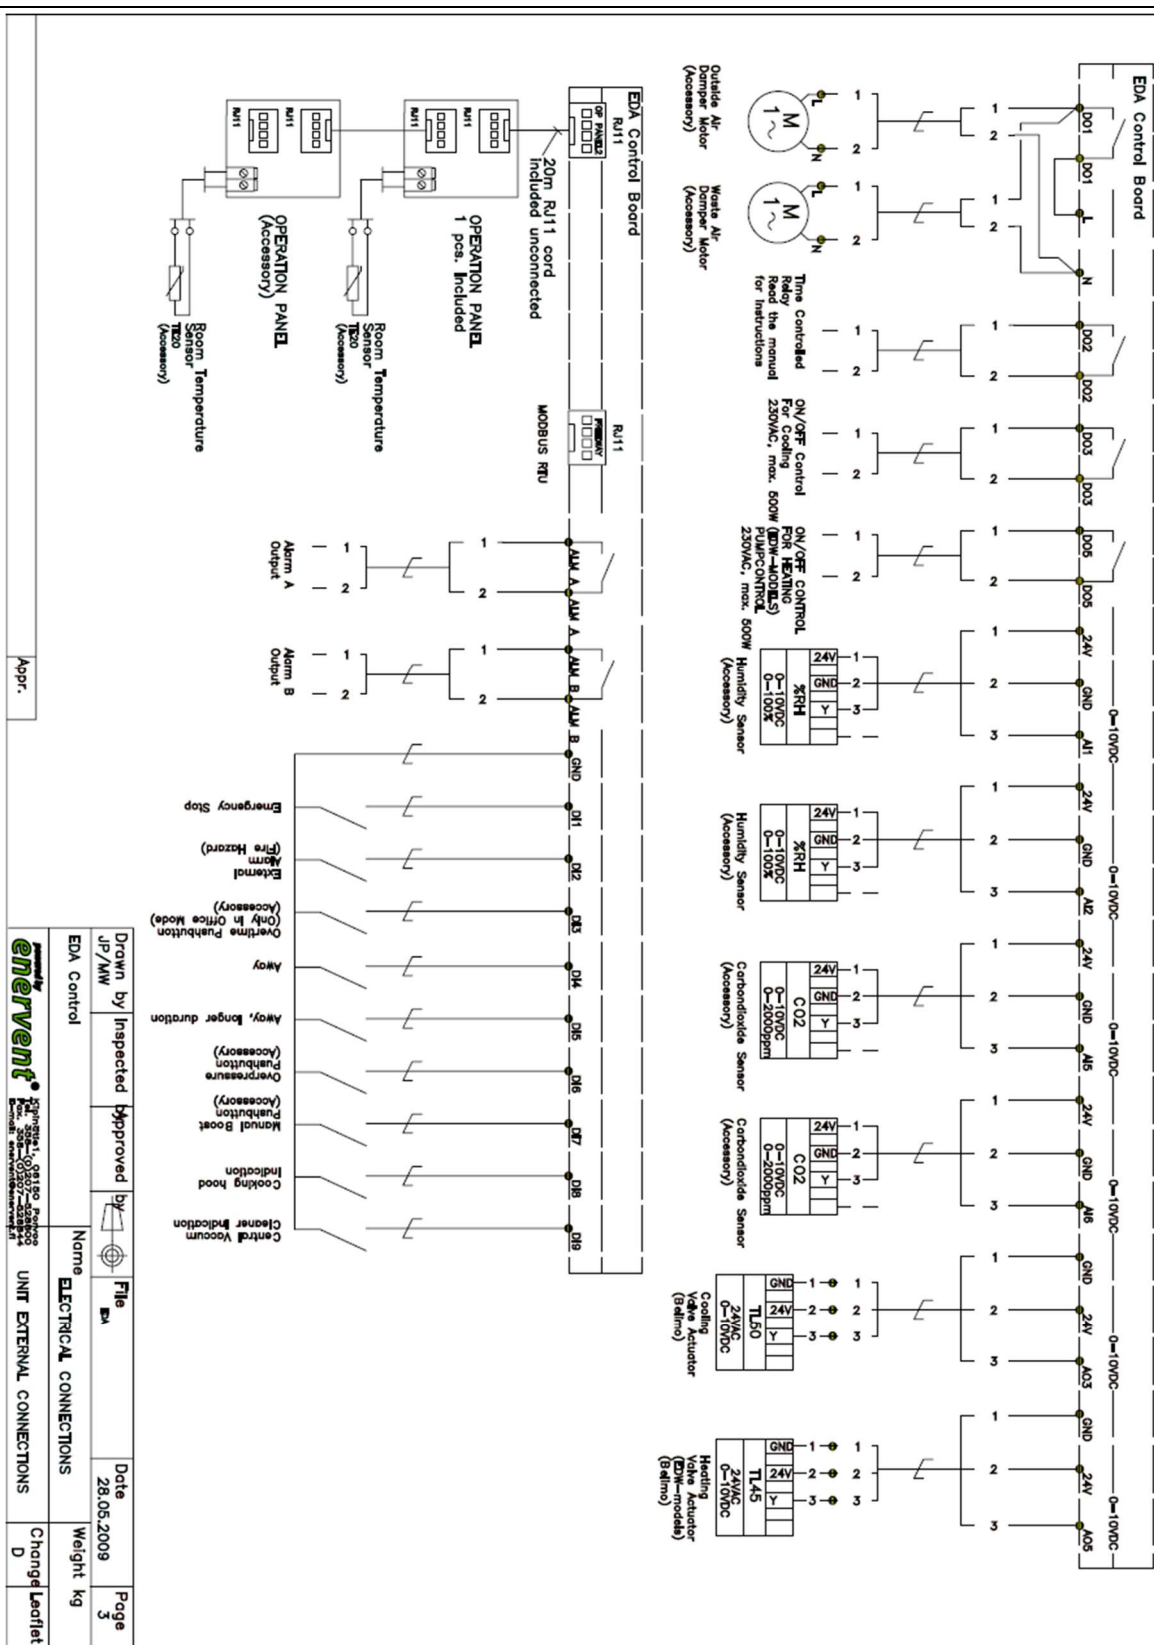

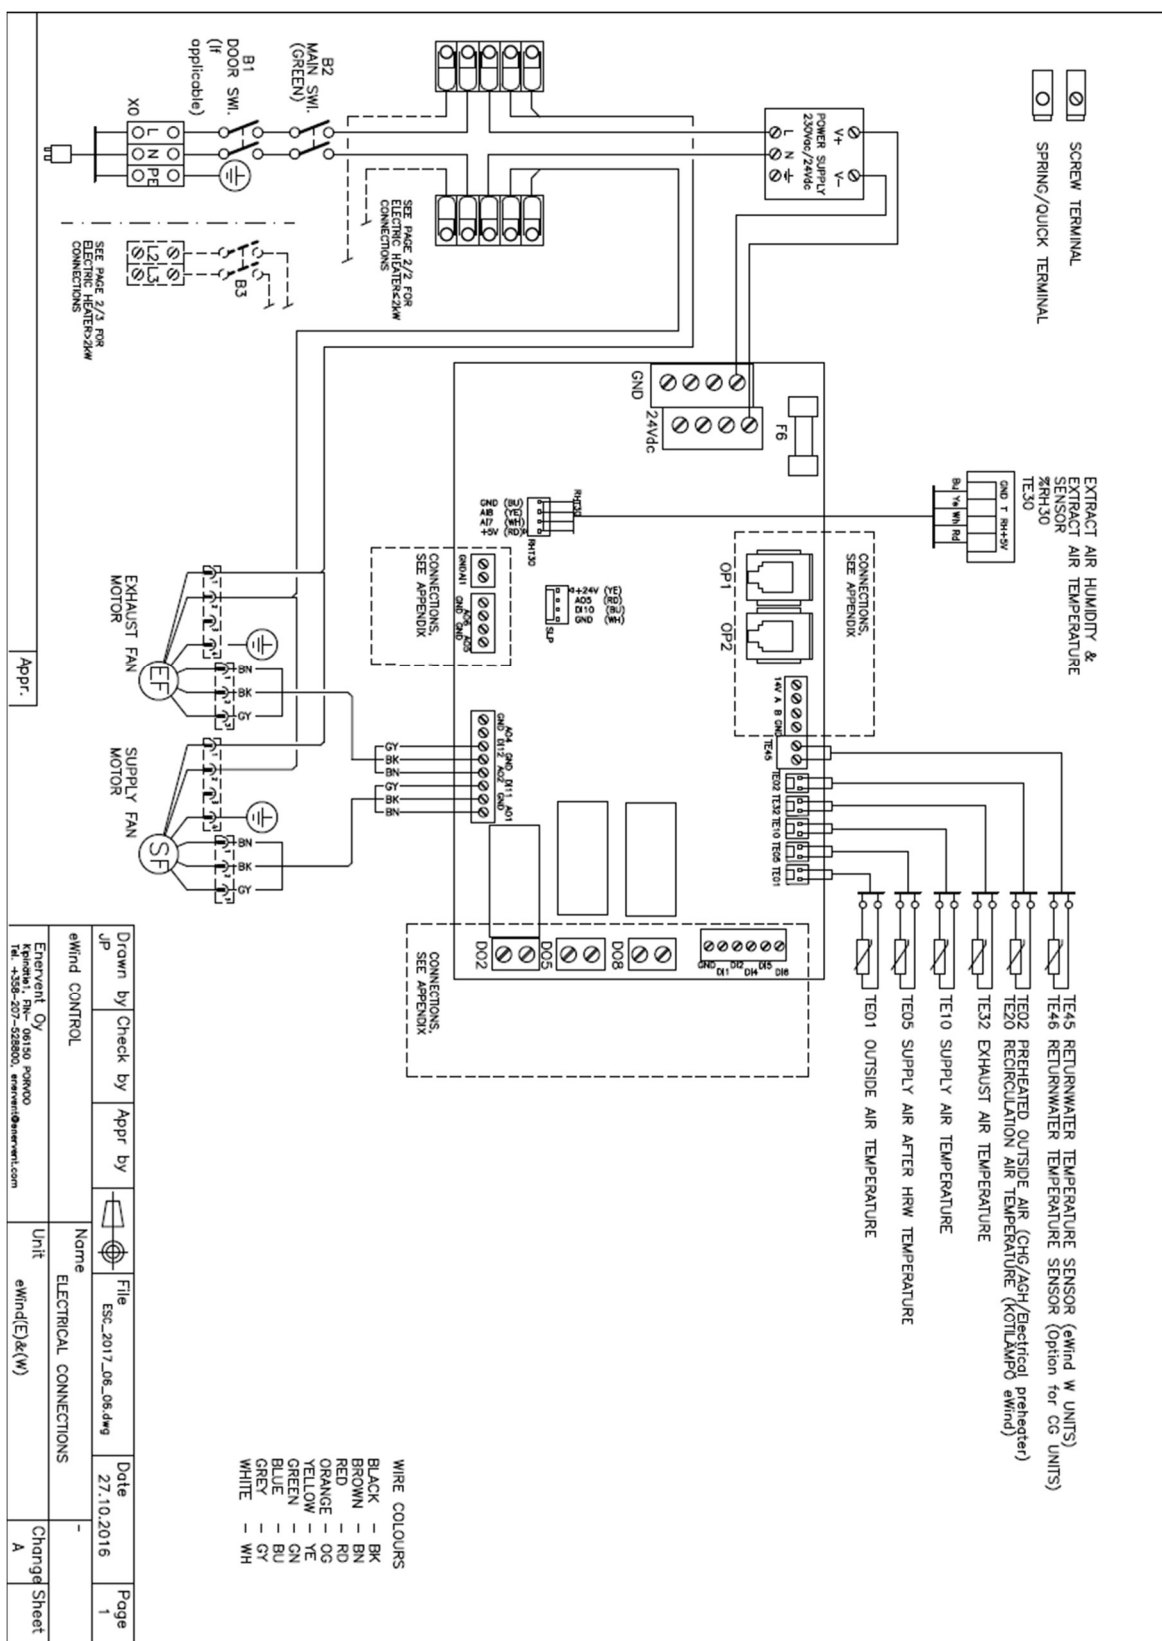


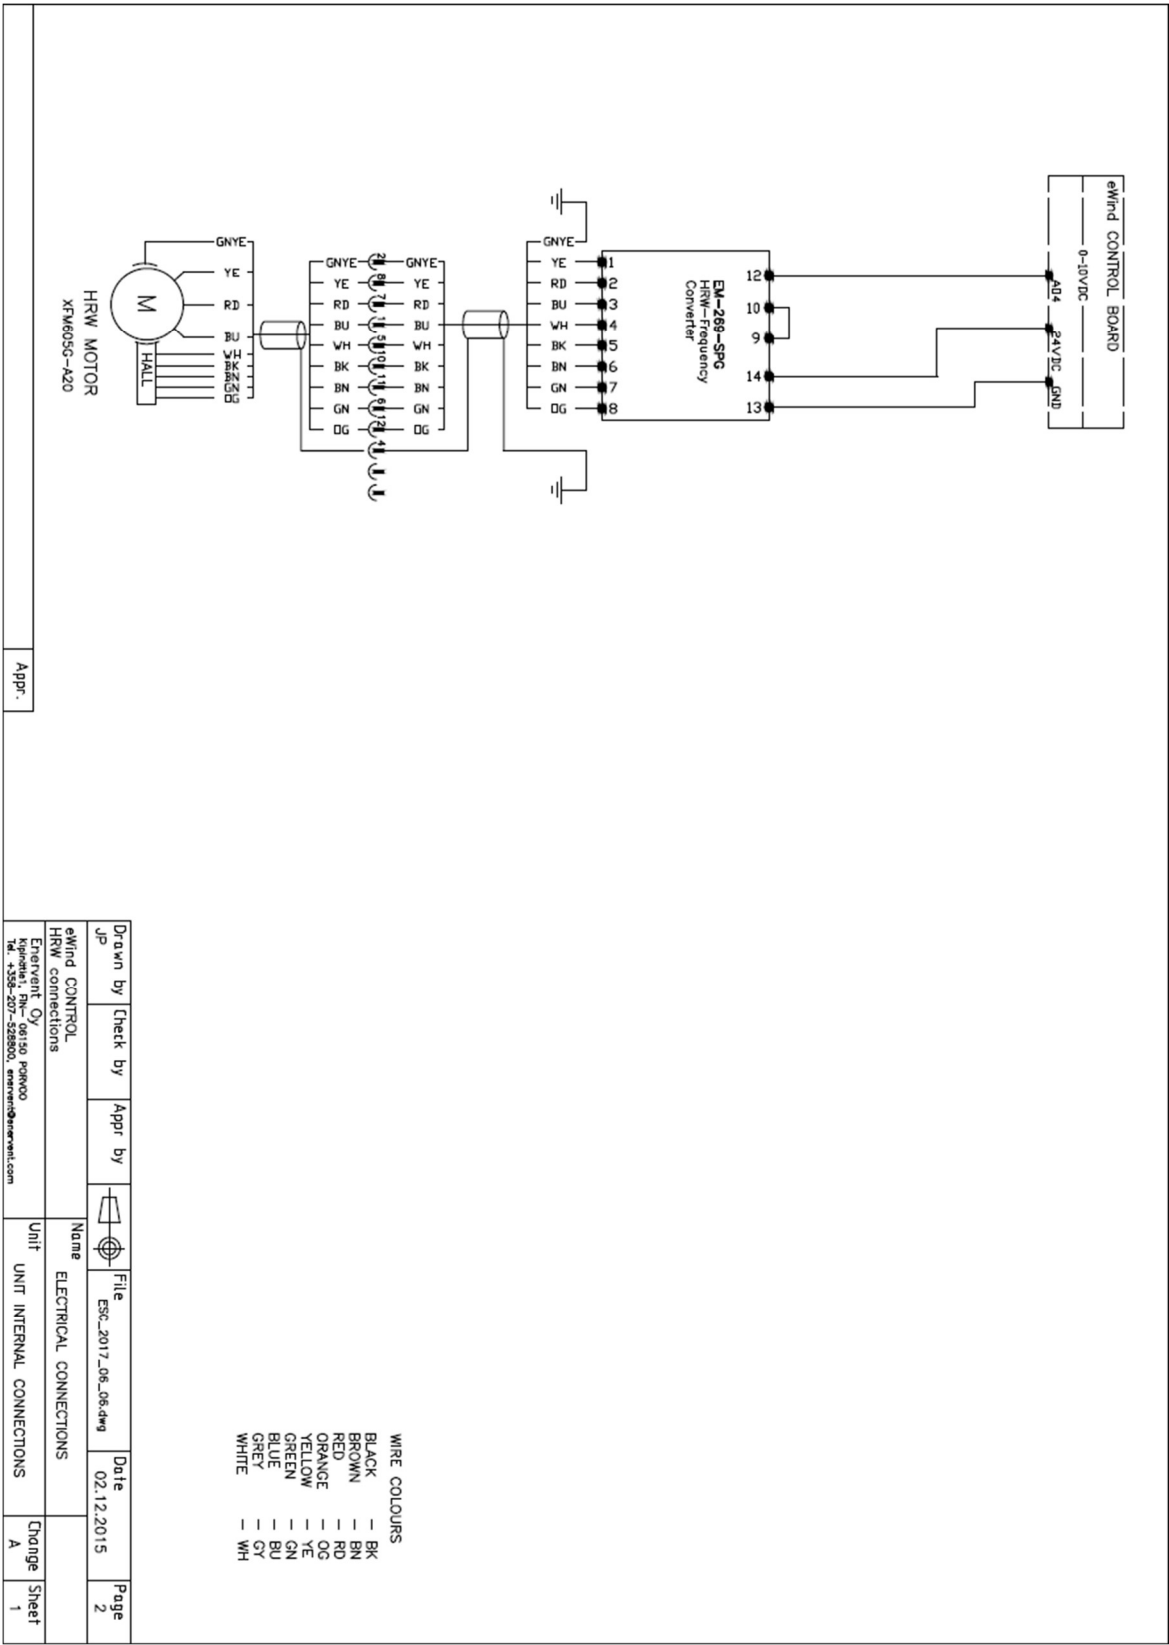

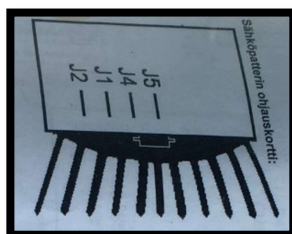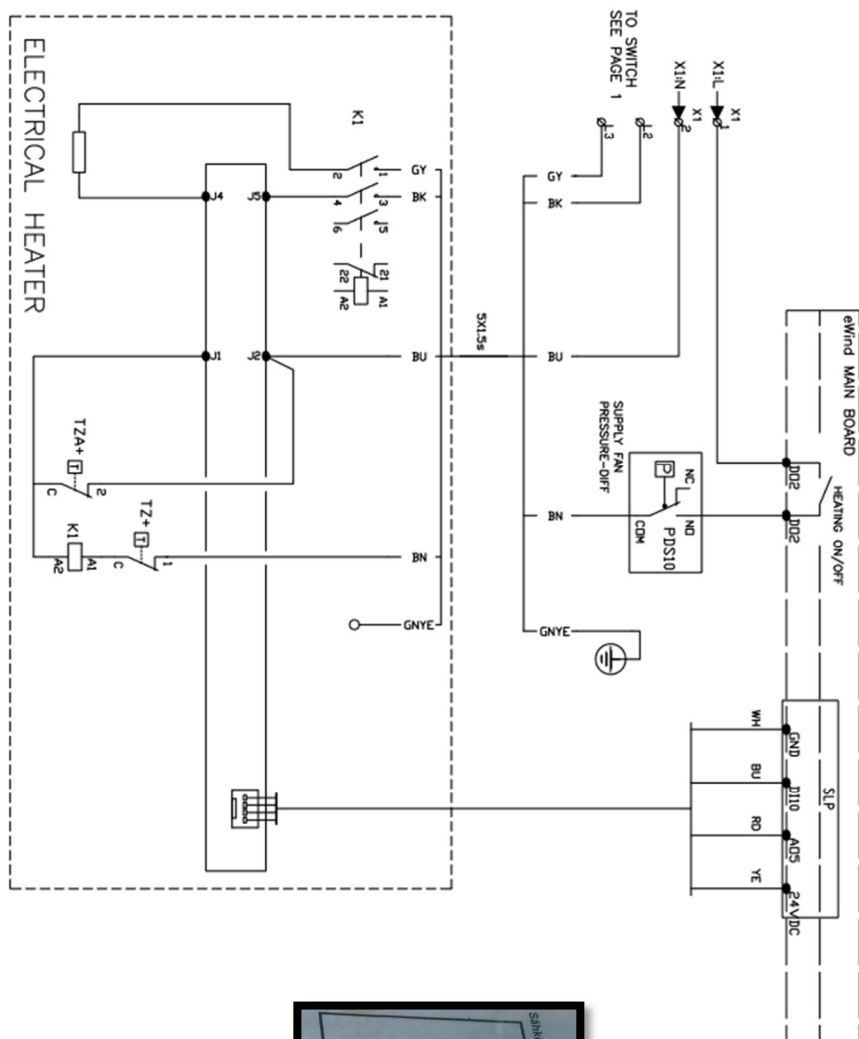

WIRE COLOURS
 - BK BLACK
 - BN BROWN
 - RD RED
 - OG ORANGE
 - YE YELLOW
 - GN GREEN
 - BU BLUE
 - GY GREY
 - WH WHITE

Drawn by	Check by	Appr by	File	Date	Page
JP			ESC_2017_06_06.dwg	19.09.2016	3
Name					
eWind CONTROL					
Electrical heater > 2kW					
Enervent Oy					
Kipinätie, FIN-06150 PORVOO					
Tel. +358-207-528800, enervent@enervent.com					
Unit					
INTERNAL CONNECTIONS					
Change Sheet					
2					

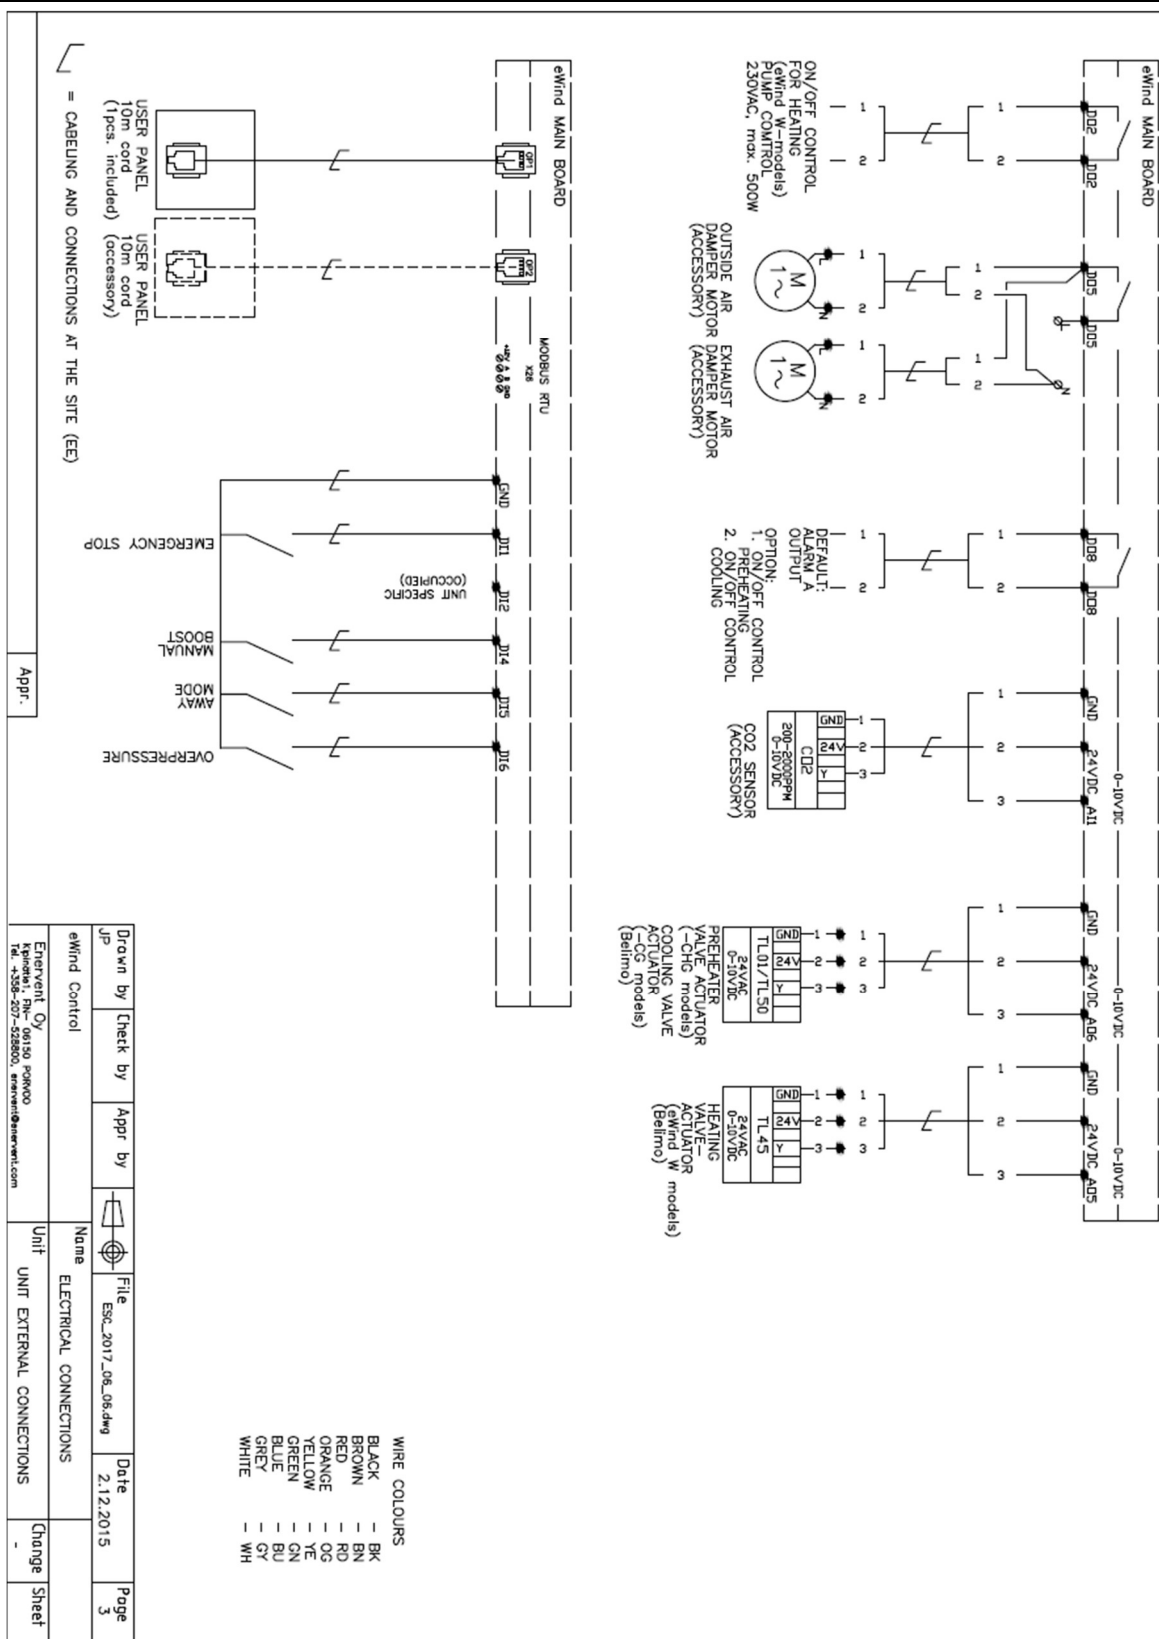

MANDATORY PARTS

10024001	CONTROL UPDATE KIT PEGASOS ED → EWIND	1
10025828	FAN RAIL PACKAGE PEGASOS	1
10023145	FAN PACKAGE PEGASOS EBM 520W	2
	or	
10025051	FAN PACKAGE PEGASOS XL EBM 545W	2
	or	
10023144	FAN PACKAGE PEGASOS Z 500W	2

OPTIONAL PARTS

10023897	ELECTRICAL HEATER 4kW	1
----------	-----------------------	---

Code	Description	Pcs.
10024001	CONTROL UPDATE KIT PEGASOS ED → EWIND	

Automation

40030936	PCB support KGLS-6S	4
40030937	PCB support LCBSM-6-01	4
40031695	Screw DIN 7981 ZN 3,9x9,5	4
40031631	Screw DIN 7985 ZN M4x20	1
40031537	Washer 6798-A ZN M4x8	3
40031489	Nut DIN 934/8 ZN M4	1
40028772	Wire 65mm orange 0,75mm ²	1
40028773	Wire 340mm orange 0,75mm ²	5
40028774	Wire 255mm 1mm ² black	1
40028779	Wire 255mm 1mm ² blue	1
40031094	eWind main board	1
40029195	Power supply Tufvassons PSLR24	1
40028788	Ground wire 100mm	1
40029647	Automation base	1
40029344	Terminal package	1

Components

40030936	PCB support KGLS-6S	5
40030100	Cable sealing VET 5-7	6
40030101	Cable sealing VET 7-10	6
40028782	Fan power cable supply air	1
40028783	Fan power cable extract air	1
40028784	Fan control cable supply air	1
40028785	Fan control cable extract air	1
40029225	Humidity/temperature sensor Amphenol 1800mm	1
40029982	WaGo 221-415	2
40031530	Screw ZN 4,2x25	5
40028774	Wire 255mm 1mm ² black	3
40028780	Wire 600mm 1mm ² black	2
40028779	Wire 255mm 1mm ² blue	2
40031537	Washer 6798-A ZN M4x8	1
40031489	Nut DIN 934/8 ZN M4	1
40030997	Cable tie 2,5x200mm	10
40031559	POP-rivet Multigrip 3,2x9	12
40031115	eWind panel package	1
40030313	Triac cable 1000mm 4-pole	1
40034288	WiFi module package	1

Manuals etc. (depends on model)

eWind installation manual	1
eWind user manual	1
eWind electrical diagrams	1

MANDATORY PARTS

10024001	CONTROL UPDATE KIT PEGASOS ED → EWIND	1
10025828	FAN RAIL PACKAGE PEGASOS	1
10023145	FAN PACKAGE PEGASOS EBM 520W	2
	or	
10025051	FAN PACKAGE PEGASOS XL EBM 545W	2
	or	
10023144	FAN PACKAGE PEGASOS Z 500W	2

<u>Code</u>	<u>Description</u>	<u>Pcs.</u>
10024001	CONTROL UPDATE KIT PEGASOS ED → EWIND	
	Automation	
40030936	PCB support KGLS-6S	4
40030937	PCB support LCBSM-6-01	4
40031695	Screw DIN 7981 ZN 3,9x9,5	4
40031631	Screw DIN 7985 ZN M4x20	1
40031537	Washer 6798-A ZN M4x8	3
40031489	Nut DIN 934/8 ZN M4	1
40028772	Wire 65mm orange 0,75mm ²	1
40028773	Wire 340mm orange 0,75mm ²	5
40028774	Wire 255mm 1mm ² black	1
40028779	Wire 255mm 1mm ² blue	1
40031094	eWind main board	1
40029195	Power supply Tufvassons PSLR24	1
40028788	Ground wire 100mm	1
40029647	Automation base	1
40029344	Terminal package	1
	Components	
40030936	PCB support KGLS-6S	5
40030100	Cable sealing VET 5-7	6
40030101	Cable sealing VET 7-10	6
40028782	Fan power cable supply air	1
40028783	Fan power cable extract air	1
40028784	Fan control cable supply air	1
40028785	Fan control cable extract air	1
40029225	Humidity/temperature sensor Amphenol 1800mm	1
40029982	WaGo 221-415	2
40031530	Screw ZN 4,2x25	5
40028774	Wire 255mm 1mm ² black	3
40028780	Wire 600mm 1mm ² black	2
40028779	Wire 255mm 1mm ² blue	2
40031537	Washer 6798-A ZN M4x8	1
40031489	Nut DIN 934/8 ZN M4	1
40030997	Cable tie 2,5x200mm	10
40031559	POP-rivet Multigrip 3,2x9	12
40031115	eWind panel package	1
40030313	Triac cable 1000mm 4-pole	1
40034288	WiFi module package	1
	Manuals etc. (depends on model)	
	eWind installation manual	1
	eWind user manual	1
	eWind electrical diagrams	1

Notes: