

Automation upgrade

Pingvin AC -> eWind

NOTE!

F7 filters after heat recovery in the supply air chamber can't be used anymore after upgrade.

Warning!

According to regulations, an ordinary electricity consumer is only allowed to perform some minor service tasks.

**According to Finnish regulations,
a list of the allowed tasks can be found at the Tukes home page (www.tukes.fi).**

Always make sure that the power supply is turned off before opening the service door.

Wait two minutes before beginning the maintenance work. The fans rotate for some time by themselves, and the heating element may be hot even if the power supply of the ventilation unit is switched off. Electrical housing may be opened only by a trained electrician.

Electrical installations must comply with local regulations.

**Continuously check and compare the electrical diagrams at the end
of this instruction as the upgrade progresses!**

Table of contents

Upgrade.....3

Electrical diagrams AC.....36

Electrical diagrams eWind40

Parts list eWind E44

Parts list eWind W.....45

Notes46

Open **the small door (1)** by pressing on it.




Disconnect **the power cord (1)** (and other power supplies if available).



Open the service door by turning **the two locks (1)** counterclockwise. If there is a remote panel installed in the small door, cut the cord and remove the remote panel or leave it in place. Either way, the panel can't be used anymore.




Remove **the doors (1)** by lifting and pulling. The doors will detach from **the pins (2)**.

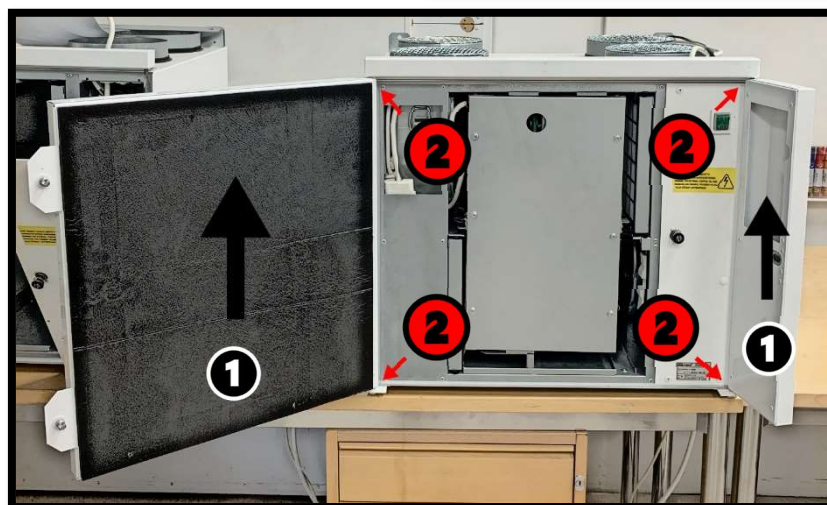

Remove **the filters (1)** by pulling.




Disconnect **the power cord (1)** from the heat exchanger.

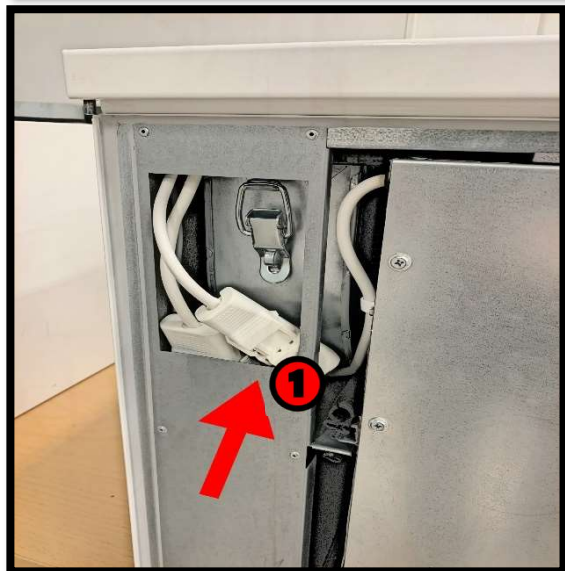


Remove **the heat exchanger (1)** by pulling.




Disconnect **the power cord (1)**, release **the pin (2)** and remove the extract air fan.

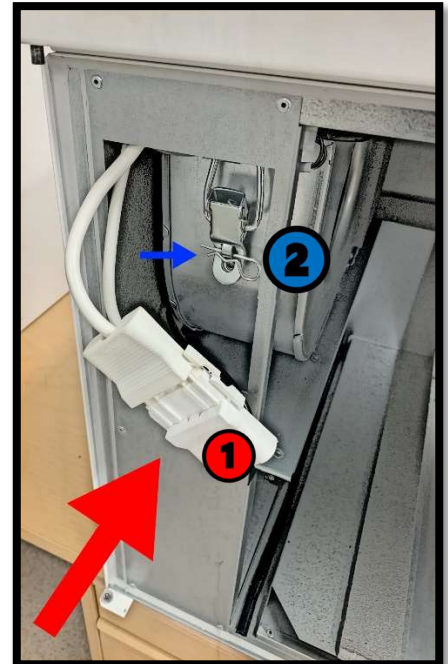

Remove **the screw (1)** from the filter rail.

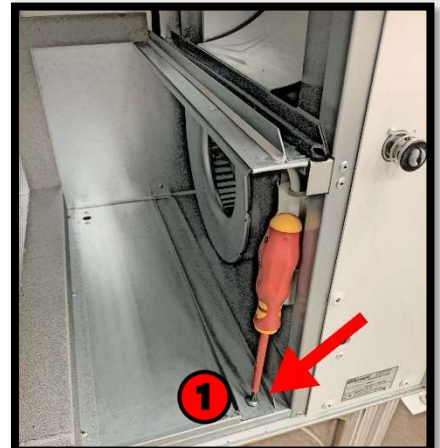

Disconnect **the power cord (1)**, release **the pin (2)** and remove the supply air fan.

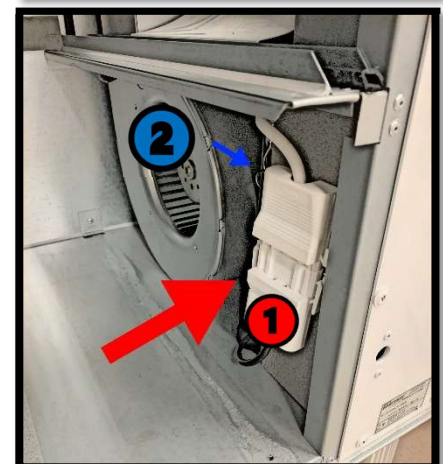


Open the electrical box by removing **the screws (1)**.




NOTE! Ensure that no voltage is occurring in the electrical box before proceeding!

Disconnect **all wires from the main switch and the ground wire (1)** from the cover.

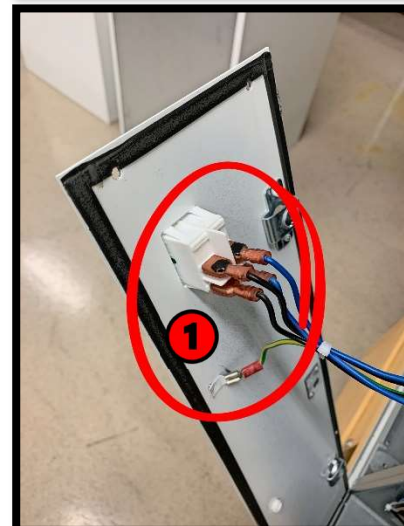

Remove **the wires (1)** by pressing the orange button next to the wire.
Remove **the wires (1)** from the main board marked **red (1)** and **blue (2)**.

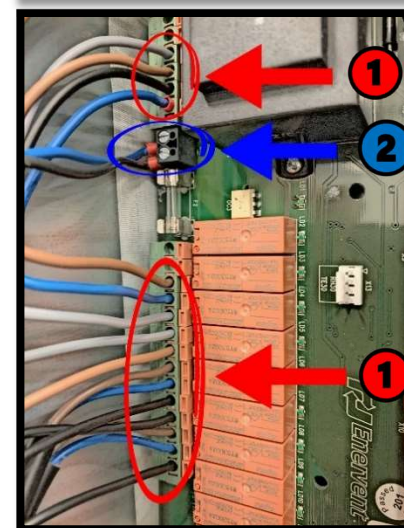

Disconnect **the ground wire (1)** from the main board and remove it.

Disconnect **all ground wires (1)** from the automation base ground point.

If there is a water coil installed (ACW), the actuator is connected **here (2)**. Disconnect and remove the wires. The actuator can't be used anymore. Install the new actuator afterwards according to the electrical diagram (**page 43**).

If there are wires connected **here (3)**, mark them according to the reading on the mainboard and disconnect.


Disconnect **the cable and remove the extract air sensor and reattach the two screws (4)**.

Disconnect **the sensors (5)**.

Disconnect **the wires (6)**. Don't remove this cable, if the remote panel is installed outside the unit. The cable might be needed later.


If there is a water coil installed (ACW), the return water sensor is connected **here (7)**.

Disconnect and remove the wires. The sensor can't be used anymore.

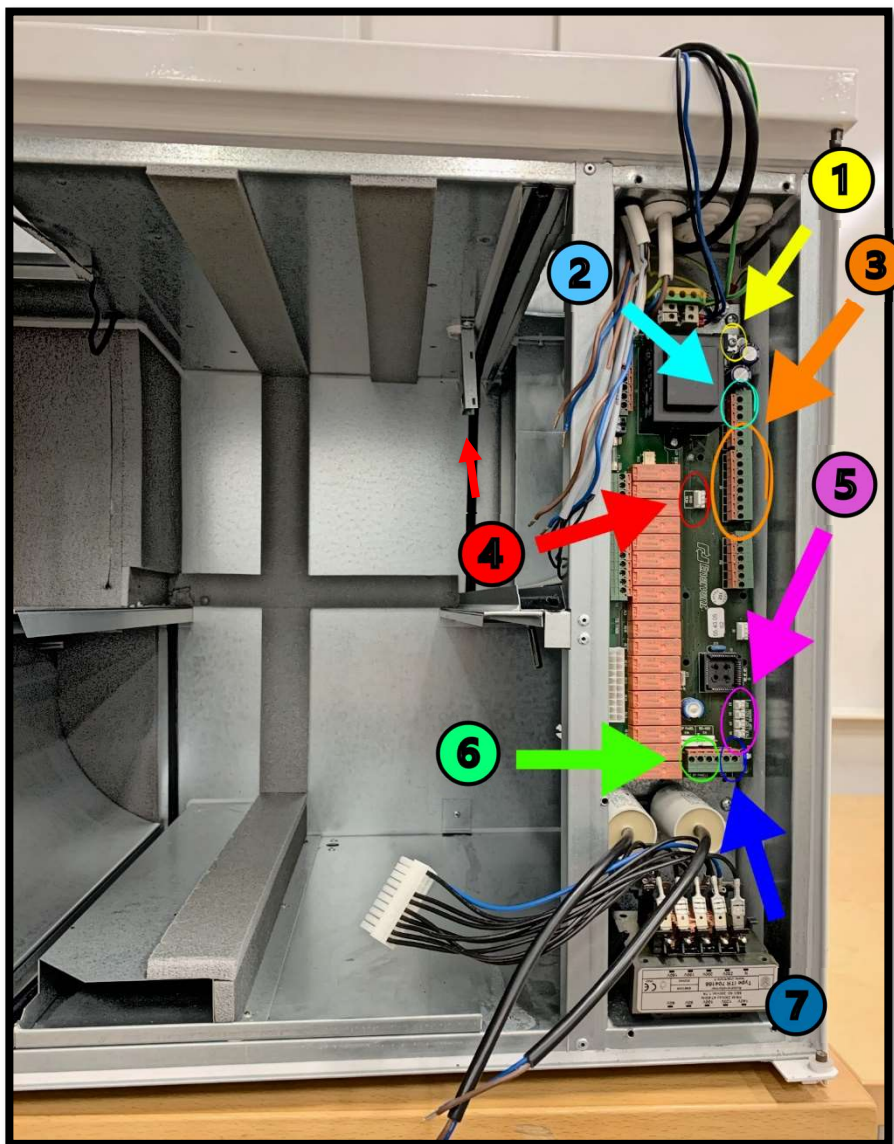

Disconnect **the wires (1)** from the terminals.


Remove **the screws (2)** and remove the automation base incl. terminal blocks, main board, capacitors and transformer.

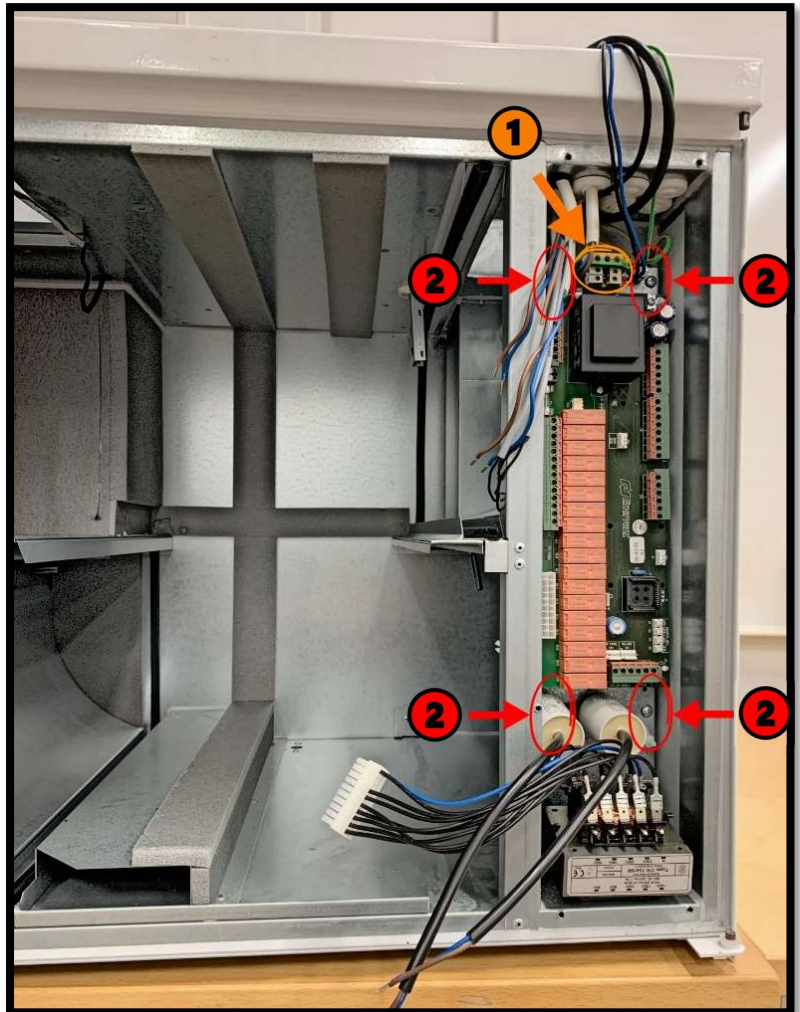

Cut and remove **the sensors completely (1)** (4 pcs.).


Cut and remove **the extract air sensor cable (2)**.



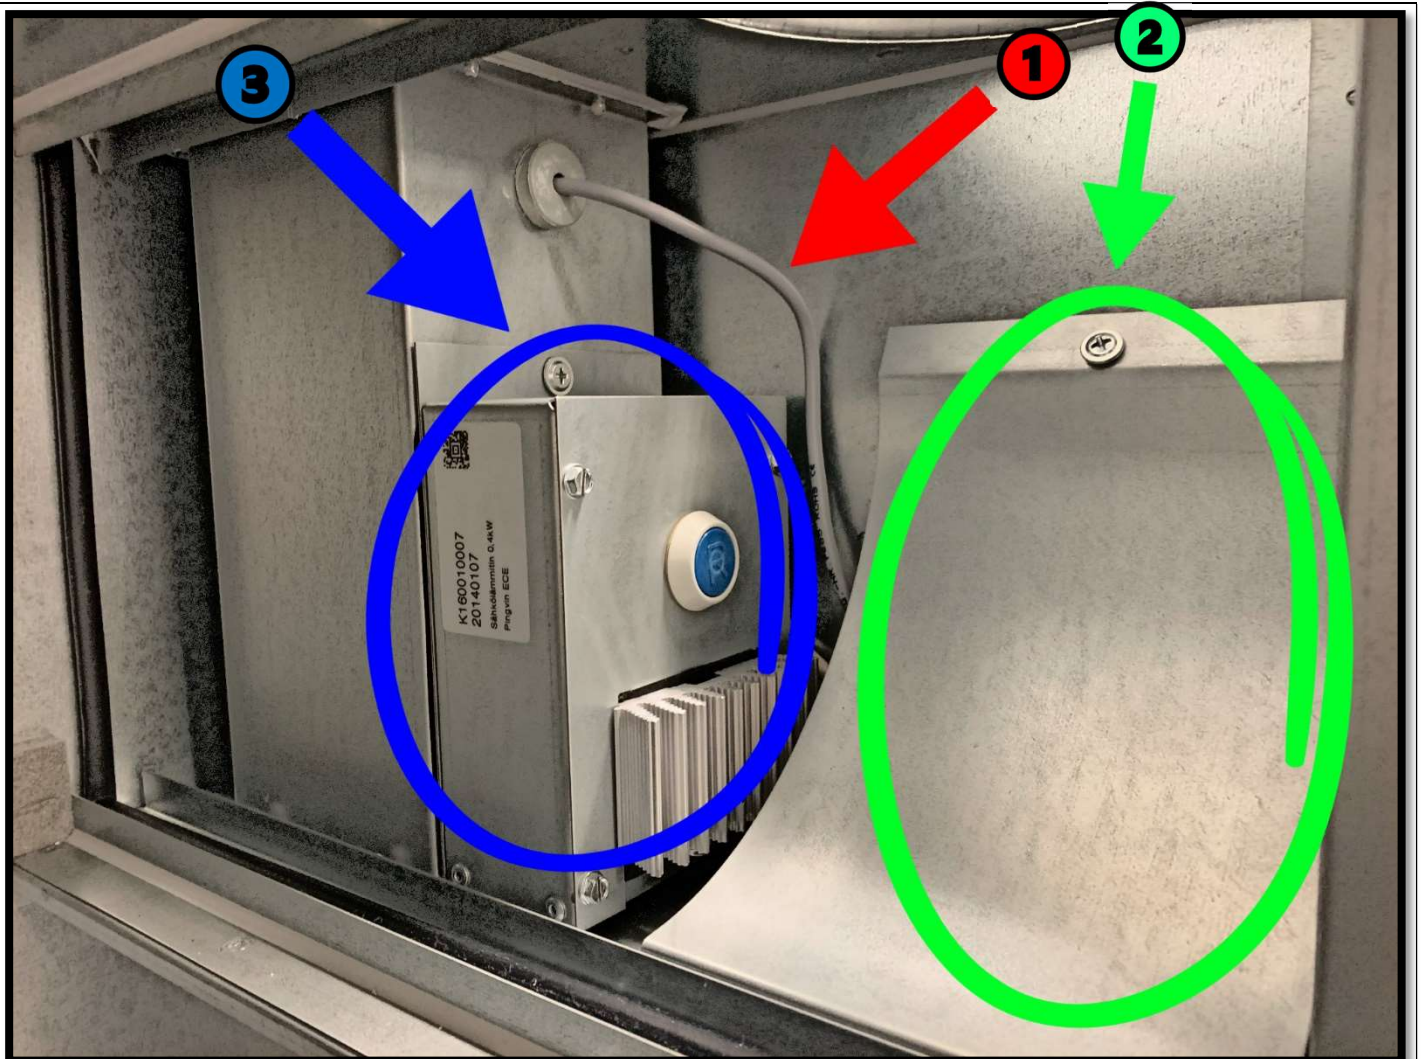


Remove **the sensor (1)**. *Ignore if the unit has a water coil after heater or cooling coil (CG) installed.*
 Remove **the flow helper (2)** (one screw). Reattach the screw.
 Remove **the after heater (3)** (one screw). *Ignore if the unit has a water coil after heater installed.*

Disconnect and remove **the connectors (1)** from the cables.

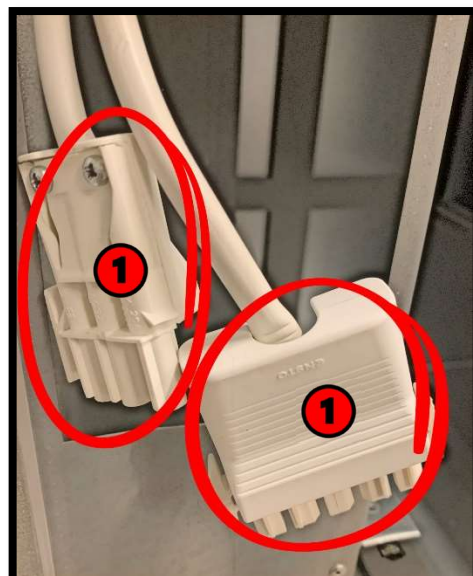

Cut and remove **the ground wire (green/yellow) (1)** from the cable with **FOUR WIRES (2)**.
Cut and remove in the other end also (in the electrical box).

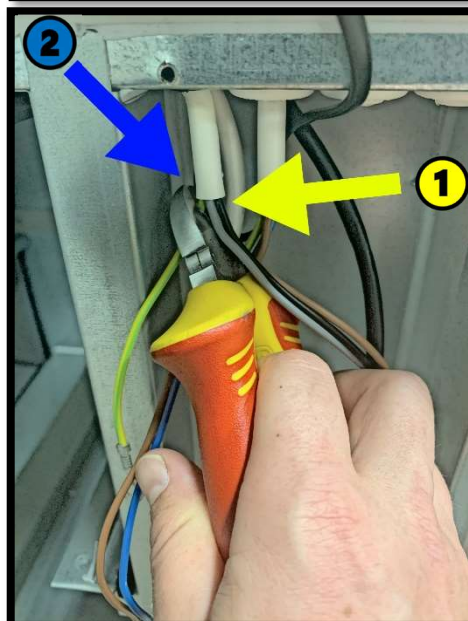

Connect **the removed 3-pin connector to the cable.**

1: Brown (1)
GND: Black (2)
N: Gray (3)




Connect **the delivered 3-pin connector (40029346)** to the other cable.

1: Brown (1)

GND: Green/yellow (2)

N: Blue (3)

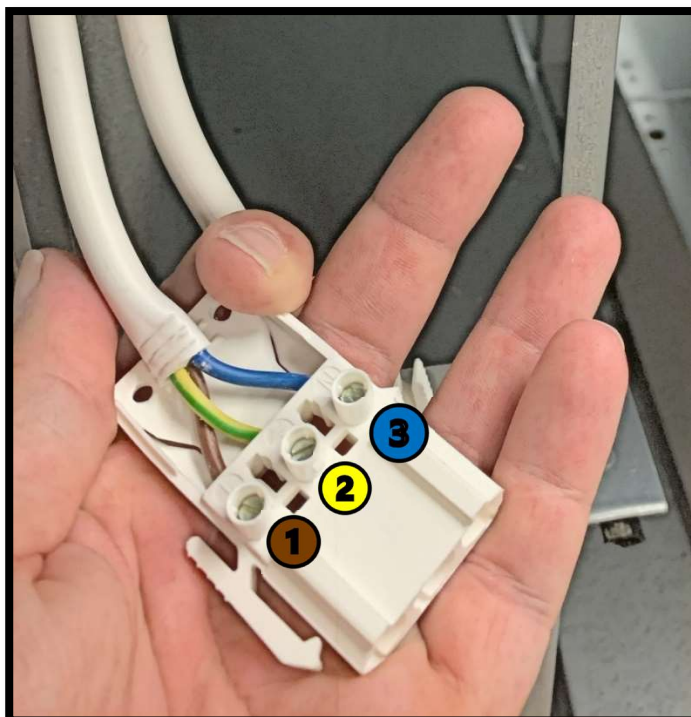


If there is a pre-heater installed inside the unit, connect it to this connector also.

1: Brown (1)

GND: Green/yellow (2)

N: Blue (3)

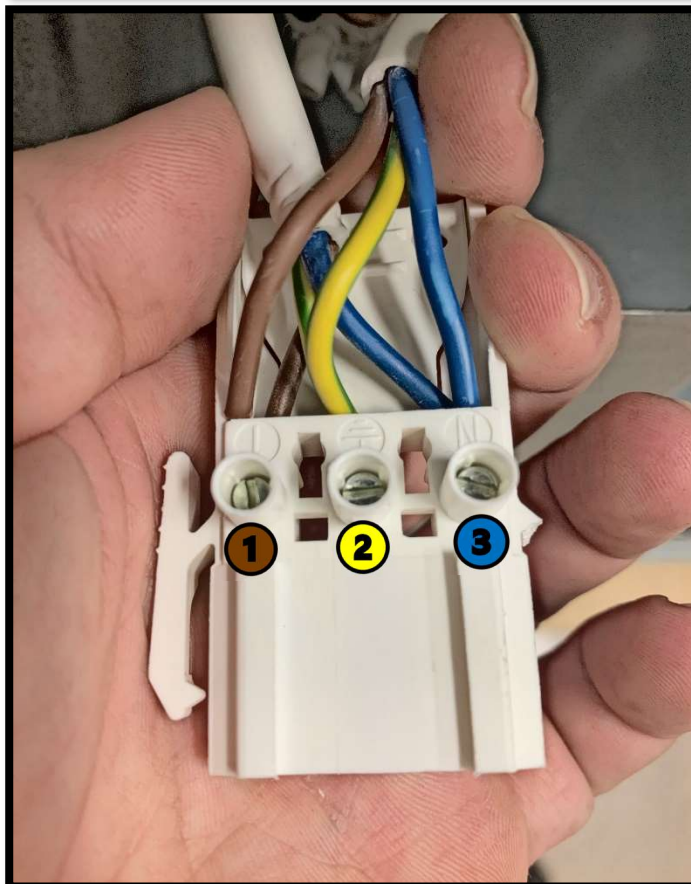


Close **the connectors** with their caps (two screws).




Attach **the adapters (1)** (40028768) (40029530).

- **Make sure that the supply power cable (brown, green/yellow, blue) (230VAC) is connected to the adapter with the 4-pin Molex connector!**
- **Make sure that the signal cable (gray, black, brown) (0-10VDC) is connected to the adapter with the 3-pin Molex connector!**

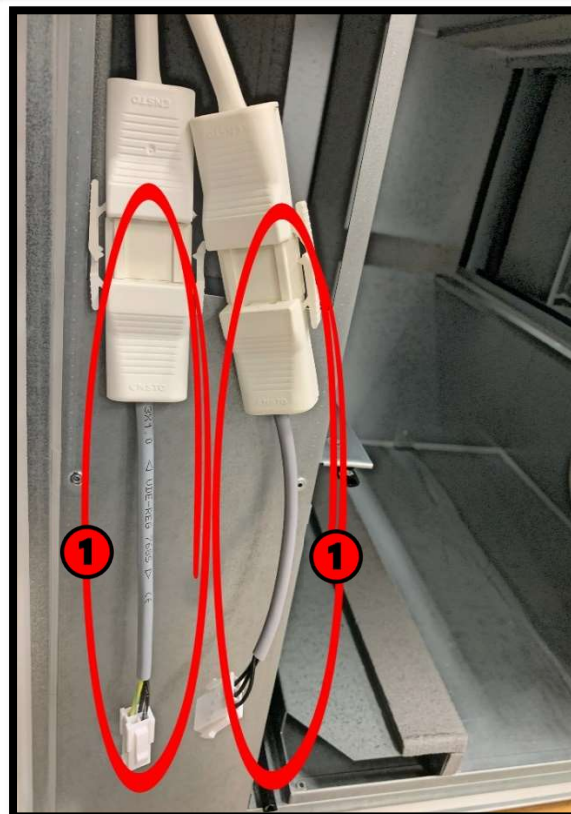


Remove **the supply air fan cable (1)**.

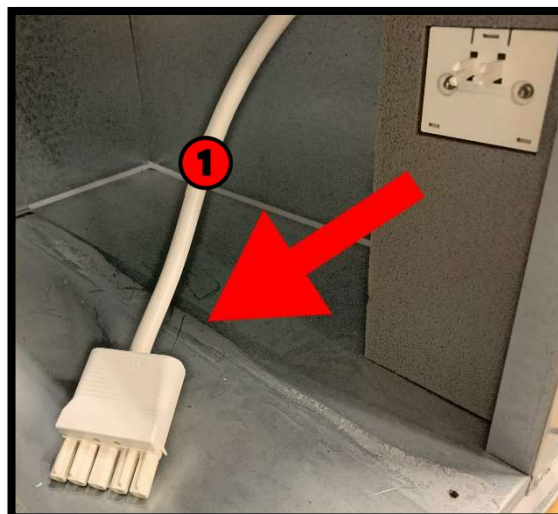


Cut and remove **the extract air sensor cable (1)**.
Replace the used cable sealings with a new one.




Replace **the used cable sealings (1)**
with new ones (40030101).

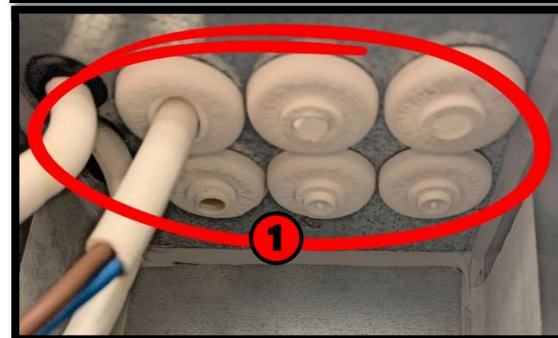

Install **the new supply air fan cables (1)**
(40028783) (40028785)
(through a cable sealing in the electrical box).

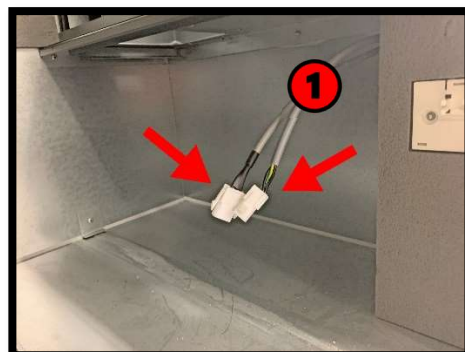

Install **the new sensors (1)**
(40029165) (40029166) (40029167)
(through a cable sealing in the electrical box).
4 pcs. if there is an electrical after heater installed inside the unit.
3 pcs. if there is a water coil after heater installed outside the unit.
3 pcs. if there is a cooling coil (CG) installed outside the unit.

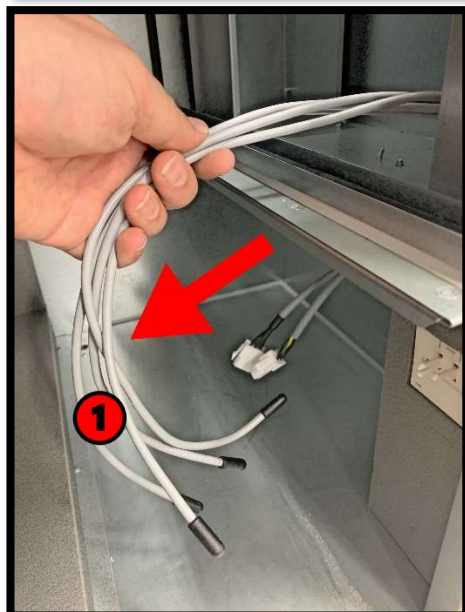


New cables installed in the electrical box.




Install **the HRW supply air sensor (850mm) (1)** (40029165).



Mark it "TE05" on **the connector (1)** in the other end.

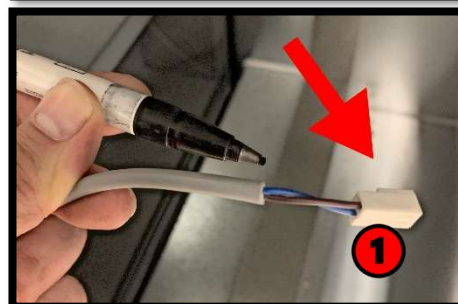

Attach **the sensor(s)** to the cable sealing with a **cable tie (1)**.

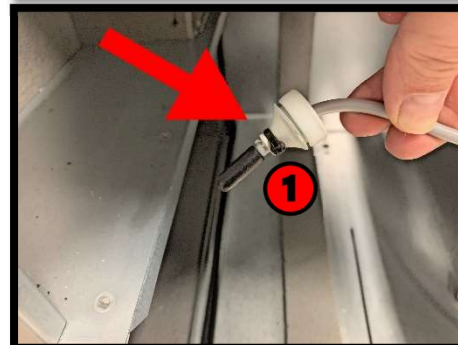

HRW supply air sensor installed (1).






Install **the supply air sensor (1100mm) (1)** (40029166) and mark it **"TE10"** on the connector in the other end.
Ignore if the unit has a water coil after heater installed.
Ignore if the unit has a cooling coil installed (CG).

Cut **a 10mm gap** in **the black rubber sealing (1)**.

Cut a small gap, all the way, in **the gray rubber sealing (1)**, from right to left.


Cut a small gap in **the gray rubber sealing (1)**, as marked in the picture.

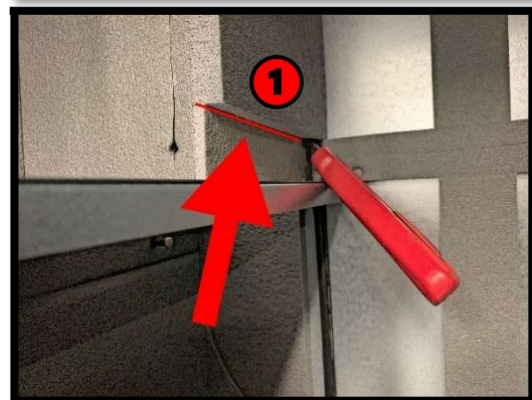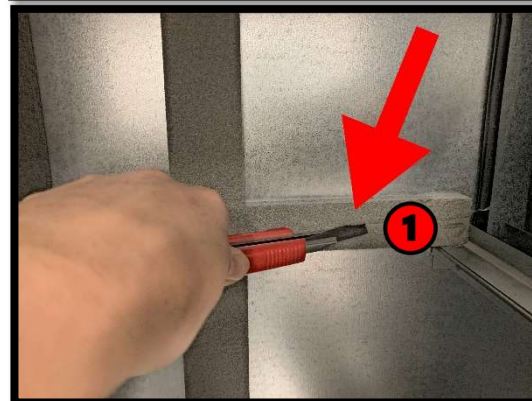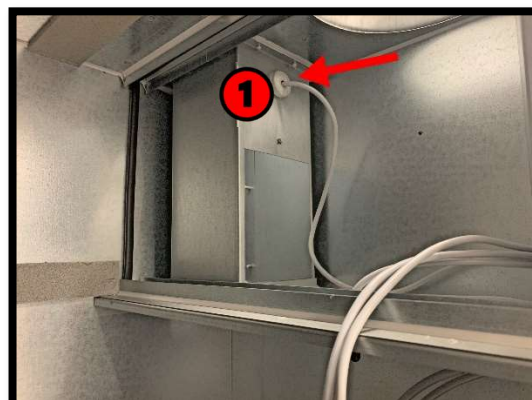


Drill a **16mm hole (1)** as marked in the picture.



Install **the outside air sensor (1700mm)** (40029167) in the gaps of the rubber sealings and in its **final place (1)**. Mark it **"TE01"** on the connector in the other end.

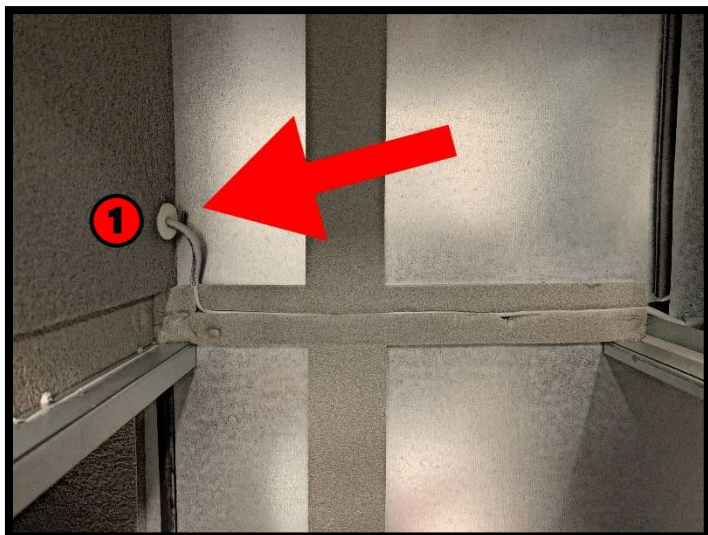



Cut another small gap, all the way, in **the gray rubber sealing (1)**, from right to left.

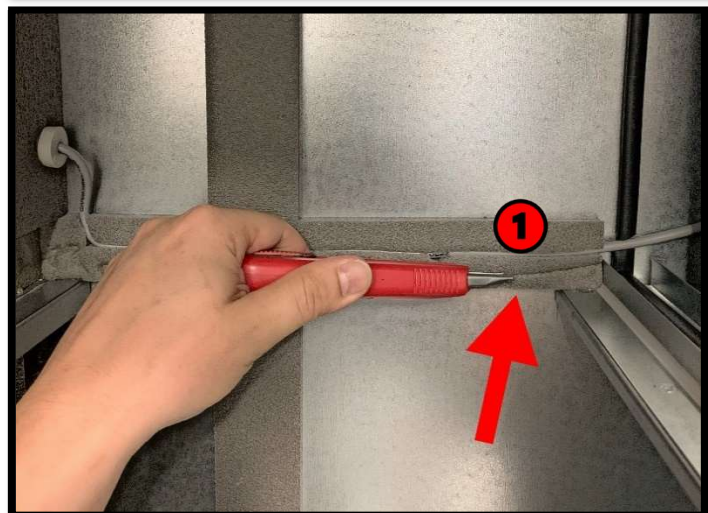


Install **the waste air sensor (1700mm)** (40029167) in the gaps of the rubber sealings and in its **final place (1)**. Mark it **"TE32"** on the connector in the other end.

Put **sealant (1)** in the gap.
ex. *Würth silicone sealant.*


Install **a new cable sealing (1)** (40030101).
Install **the old screws (2)**.
Install **the new after heater (3)** (10023244).
Ignore if the unit has a water coil after heater installed.
Leave **the flow helper (4)** uninstalled and attach the cables together with cable ties.
Install if the unit has a water coil after heater installed.

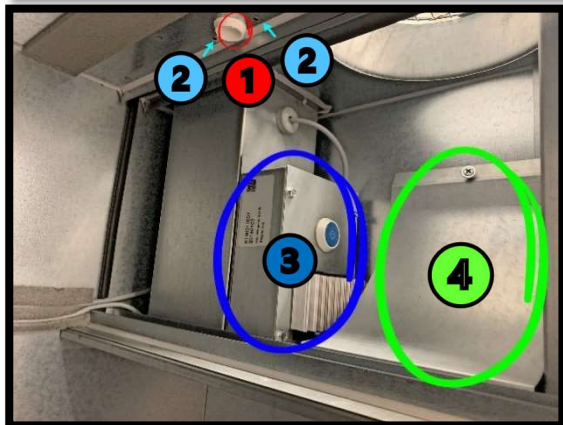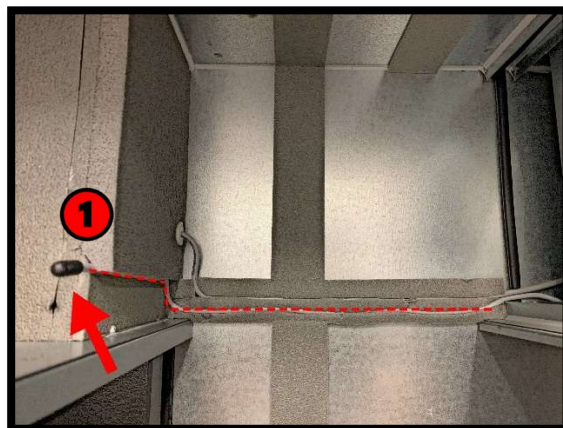

Install **the after heater cables (1)**
(through a cable sealing in the electrical box).
*Ignore if the unit doesn't have an electrical
after heater installed.*

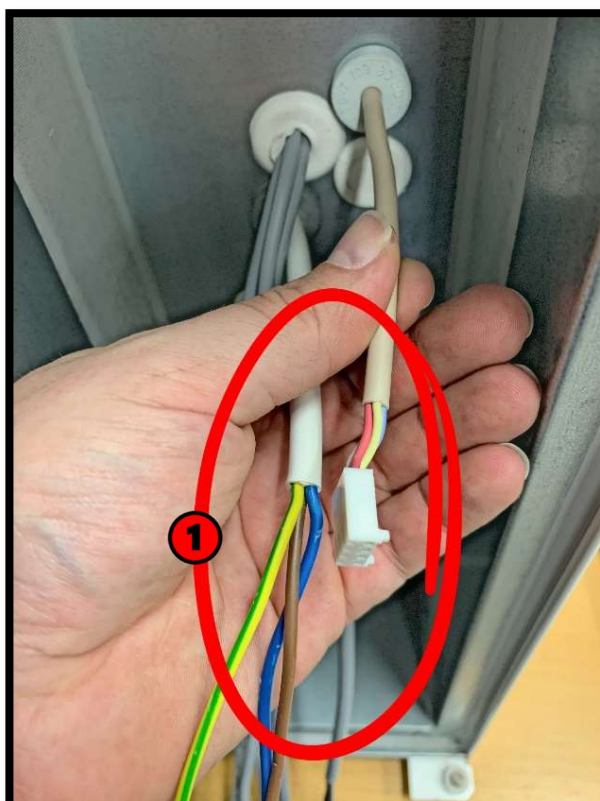

Drill **a 18mm hole (1)** as marked in the picture.

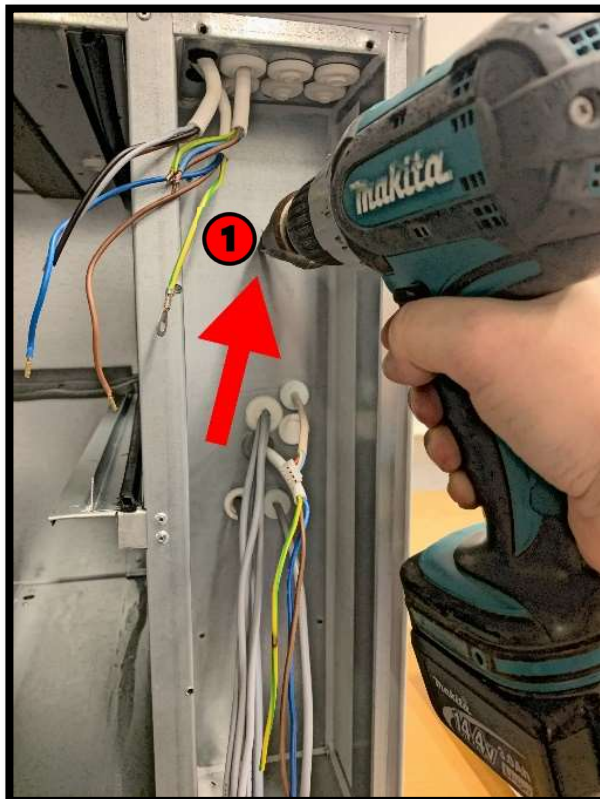


Drill **a 18mm hole (1)** as marked in the picture.



Install **the HRW cable (1)** (40028737) (through a cable sealing in the electrical box).




Install **the extract air sensor with a cable sealing (1)** (40029224), through the drilled hole in the electrical box.

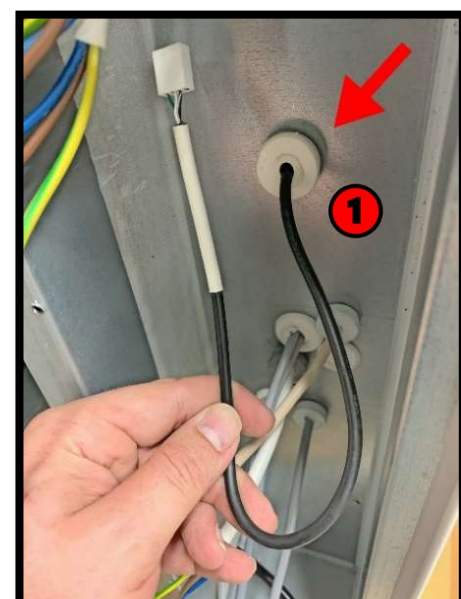


Install **the new automation** in the electrical box.



Make sure no installed **cable / sensor (1)** get stuck behind the automation base and that they are available in front of the main board.

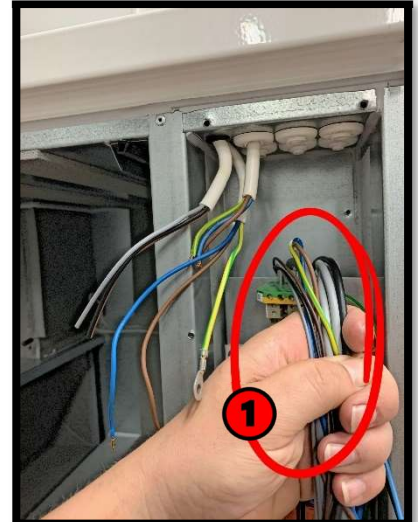

Attach **the automation base** (40029647) to the electrical box with **four self tapping screws (1)** (40031530).

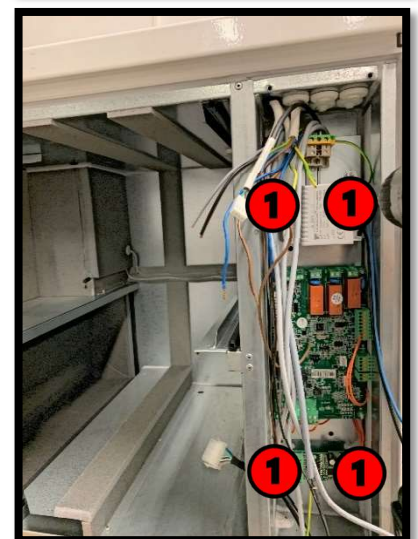


Connect **the power cord to the terminals (1)**.


L: Brown

GND: Green/yellow


N: Blue

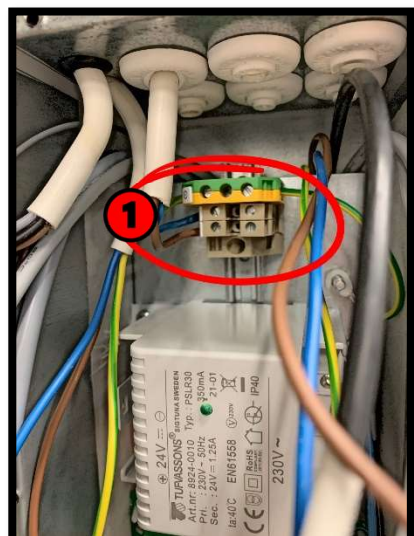


Install **the connection terminals (1)** (40029982).
One for "L" and one for "N".

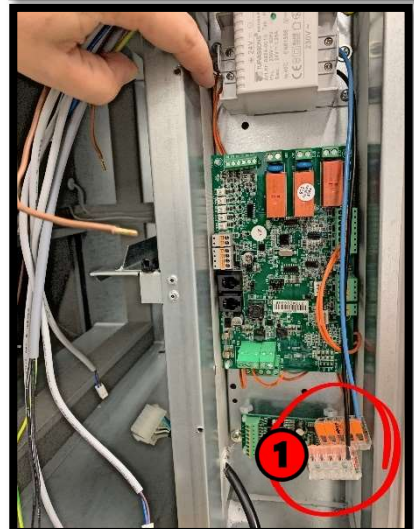


Connect one pair of **the wires with flat connectors** (40028776, 40028777) **to the connection terminals (1)** (40029982).

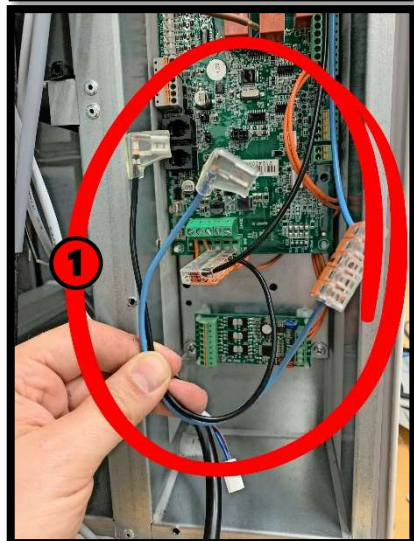


Connect **all ground wires** to **the automation base ground point (1)**.
Ground terminal, supply air fan, extract air fan, after heater.
Totally four wires. **Three wires if no electrical after heater installed.**
Connect the cover ground wire to the ground terminal (PE).
Tighten with **the nut (40031489)**.

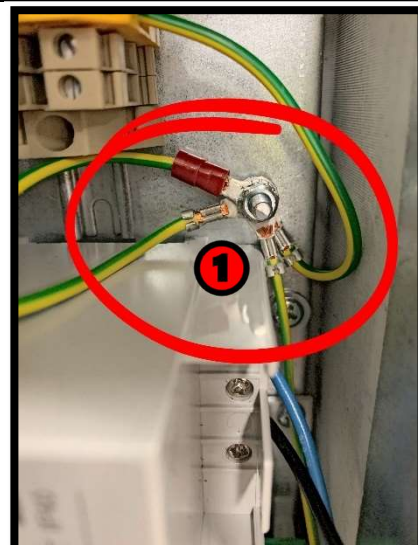


Connect **the blue wire** from the electrical after heater to **the blue connection terminal (2)**.
Ignore if no electrical after heater installed.

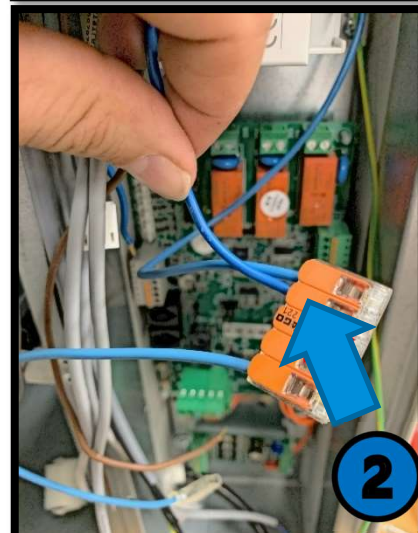

Connect **the black wire (40028774)** to **the black connection terminal (1)**.

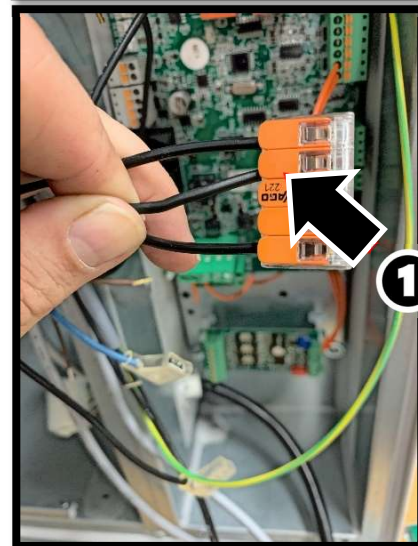


Connect **the black wire** (40028774) to **"DO2" (2)** on the main board.

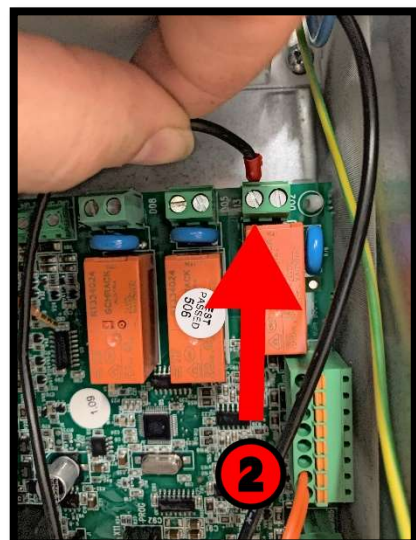


Connect **the brown wire** from the electrical after heater to **"DO2" (2)**.
If there is a water coil after heater installed, the circulation pump power wire (L) would be connected here.




Connect **the blue wire** from the extract air fan power cable to the **blue connection terminal (2)**.

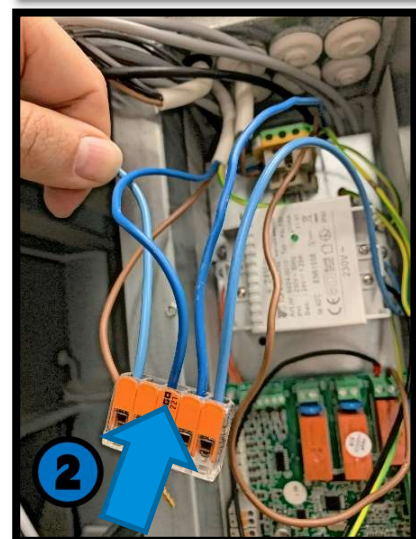


Connect **the brown wire** from the extract air fan power cable to the **black connection terminal (1)**.

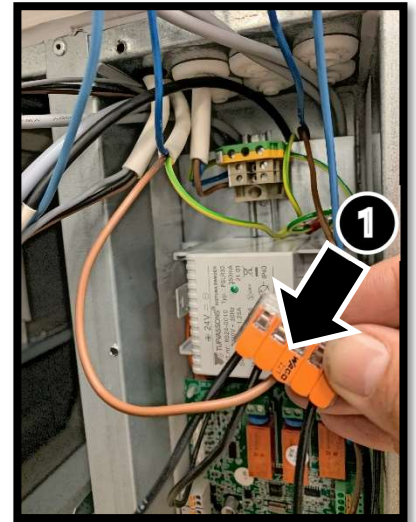


Connect **the wire marked "1"** in the supply air fan power cable to the **black connection terminal (1)**.

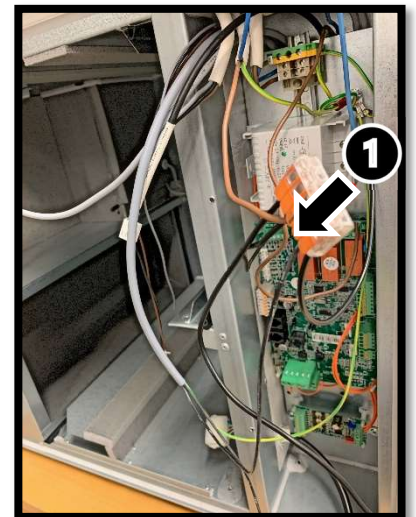


Connect **the wire marked "2"** from the supply air fan power cable to the **blue connection terminal (1)**.

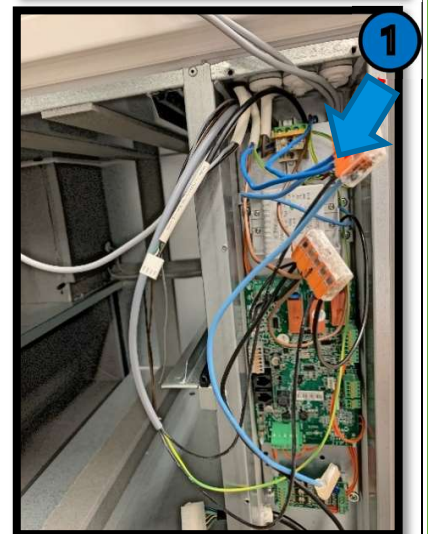

Power wires connected (1).

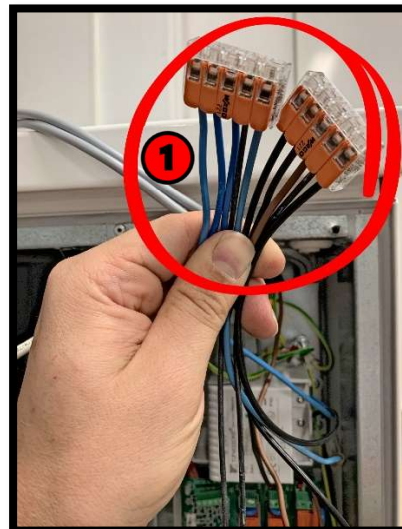

Connect **the extract air sensor (1)** (40029224) to the main board (X29).

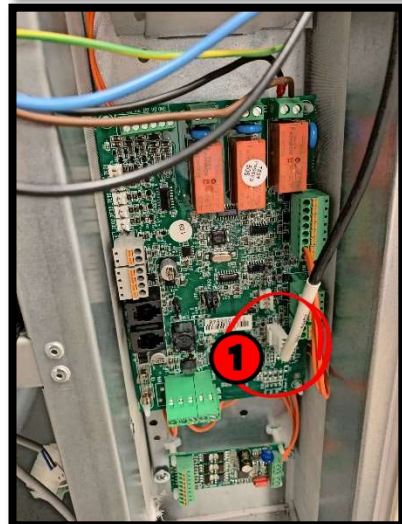

Connect **the sensors (1)** to the main board according to the markings.

TE01: Outside air

TE05: HRW supply air

TE10: Supply air


(to be installed in the supply air duct as the last measuring point)

- after the water coil (ACW)
- after the cooling coil (ACW-CG)
- after the cooling coil (ACE-CG)

TE32: Waste air

X12, TE45: Return water sensor (2),

if the unit has a water coil after heater installed.

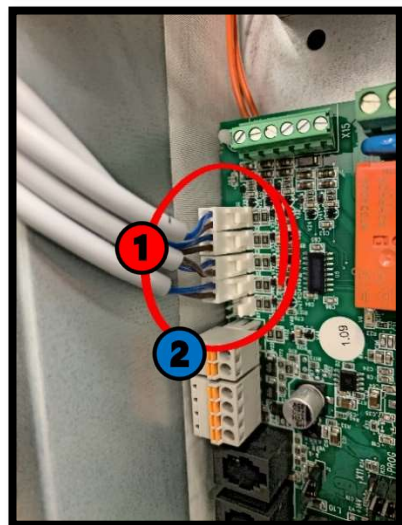


Connect **the wires from the supply air fan control cable (1)** (40028785) to the main board.

AO1: Brown

GND: Black

DI11: Gray

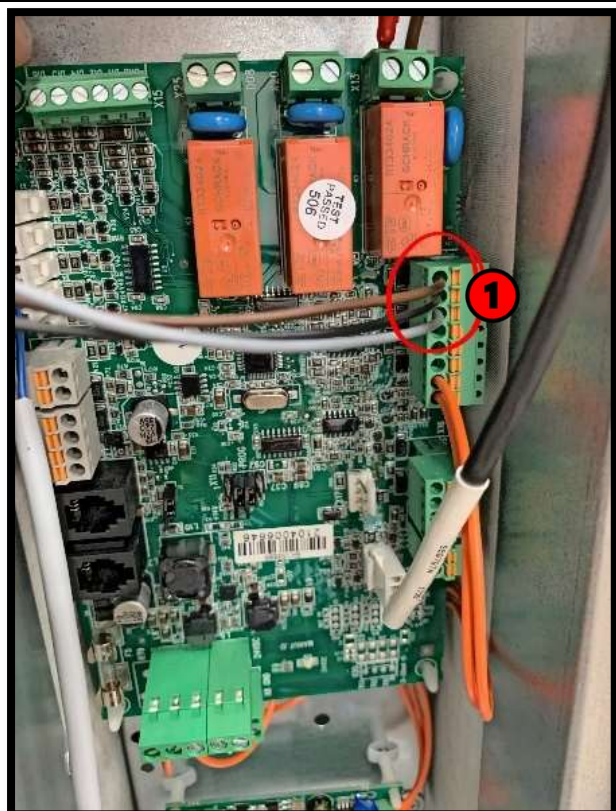


Connect **the wires from the extract air fan control cable (1)** to the main board.


AO2: Brown

GND: Black


DI12: Gray

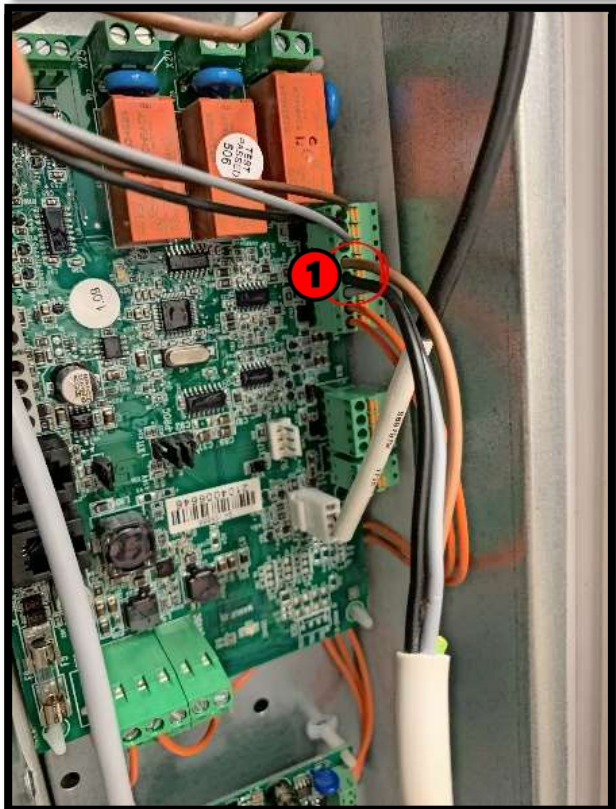

Release **the screw (1)** and attach **the ground wire (2)** from the HRW cable to the screw, along with **a washer (40031537)**.

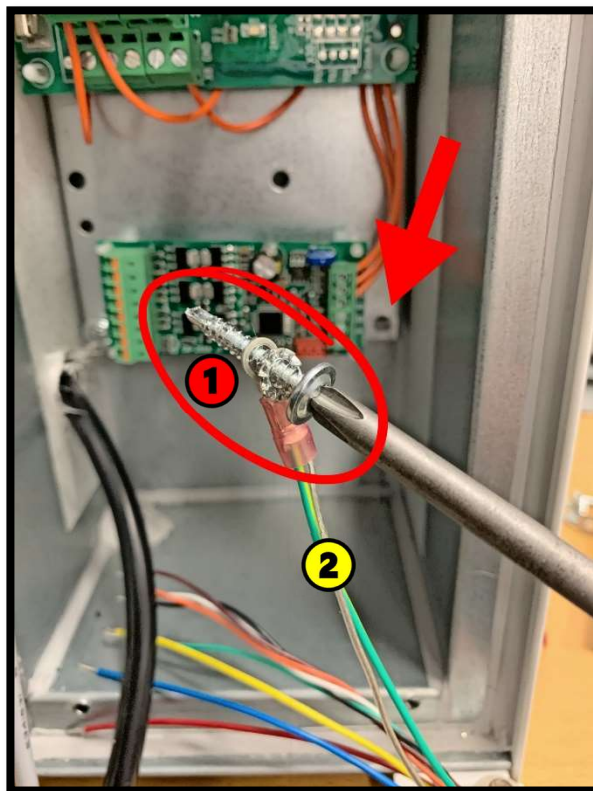

Reattach **the screw (1)** to the automation base.

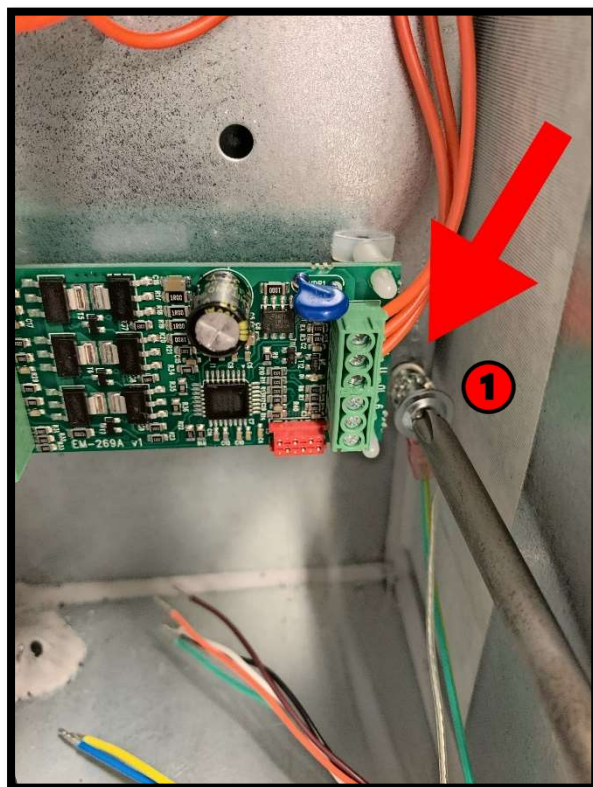

Connect **the wires from the HRW cable** (40033952) **to the HRW control board (1).**

1: Yellow

2: Red

3: Blue


4: White

5: Black

6: Brown

7: Green


8: Orange

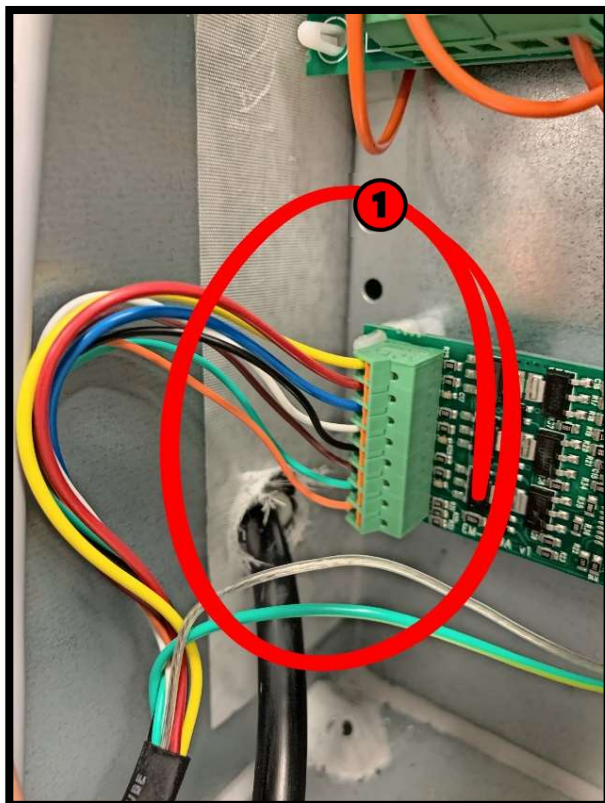

Connect **the after heater control cable (1)** to the main board (X17).

Ignore if no electrical after heater installed.

Connect other components (for example return water sensor or actuator for water coil or cooling coil) according to the electrical diagrams (pages 40-43).


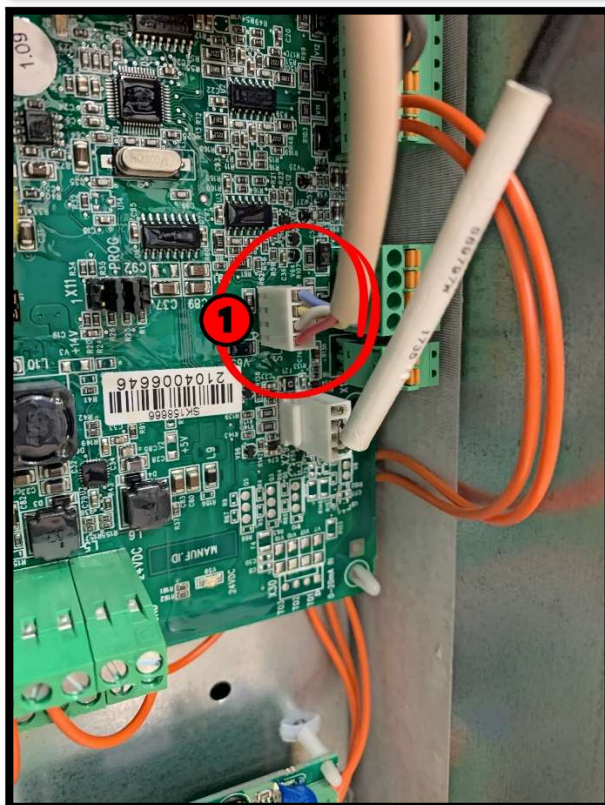


Connect **the pair of wires with flat connectors (1)** (40028776, 40028777) to the main switch and **the ground wire (2)** to the cover.

Connect **the other pair of wires with flat connectors (3)** (40028776, 40028777) to the main switch, and to **the terminals (4)**.

L: Black

N: Blue

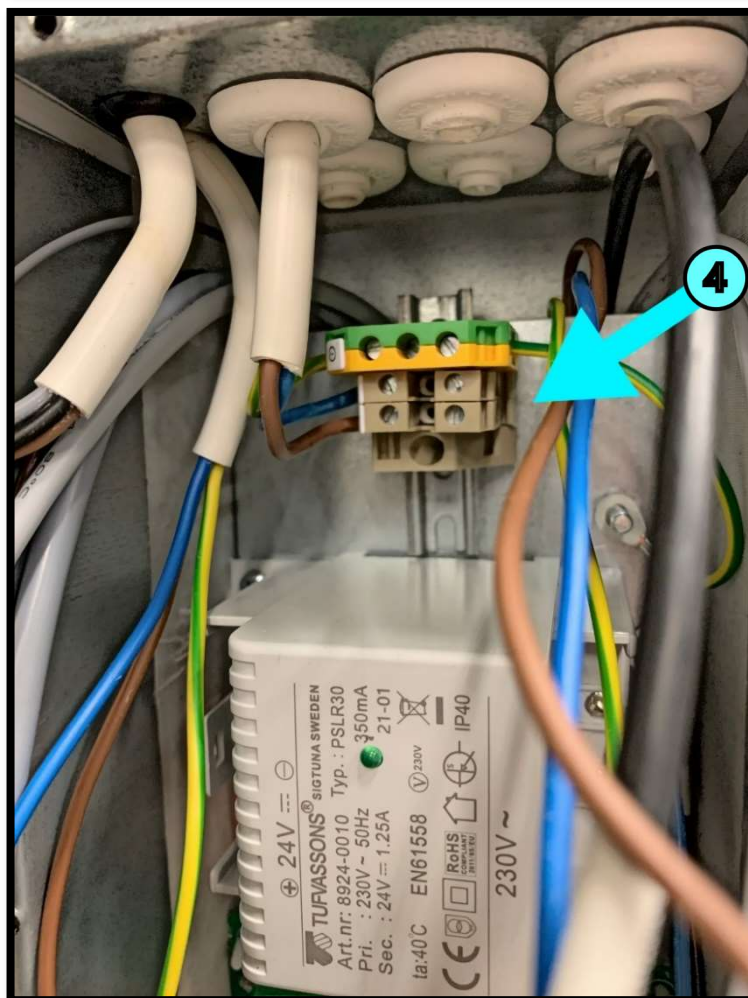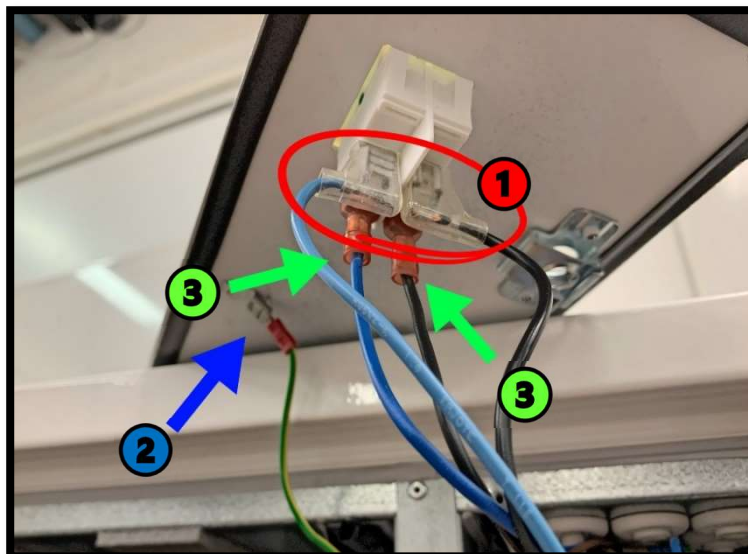

Install **the new extract air fan (1)** (10023126).

Attach **the pin (2)**.

Connect the cables to the adapters (3).

- Make sure that the supply power cable (**brown**, **green/yellow**, **blue**) (230VAC) is connected to the adapter with the 4-pin Molex connector! **DO1 / N at the main board!**
- Make sure that the signal cable (**white**, **blue**, **yellow**) (0-10VDC) is connected to the adapter with the 3-pin Molex connector! **AO2 / GND / DI12 at the main board!**




Attach the cables together with a cable tie (1).

Install **the new supply air fan (1)** (10023125).


Attach **the pin (2)**.

Connect the cables to the connectors (3).

Attach the cables together with a cable tie.

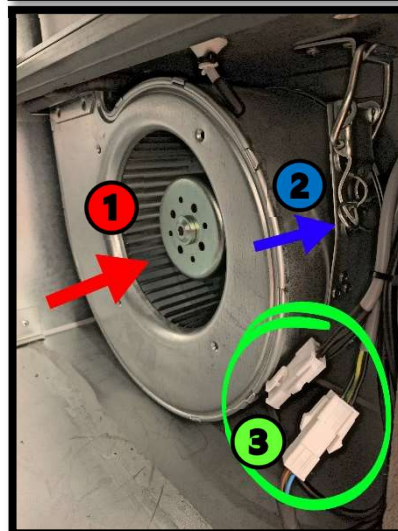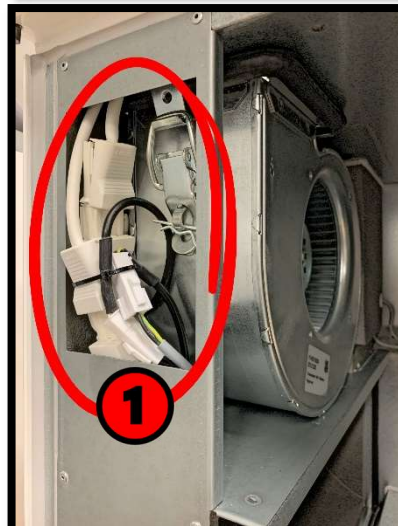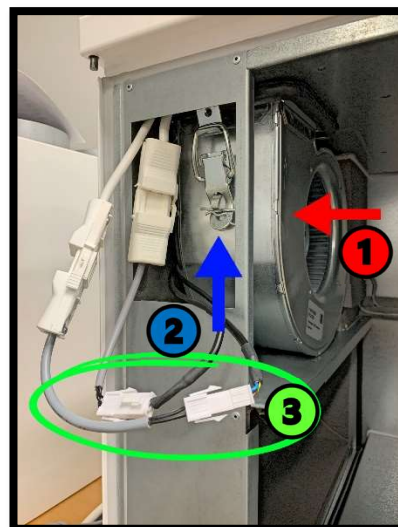


Install **the filter rail (1)** and attach **the screw (2)**.
A filter can't be used here anymore because of the HRW cable.

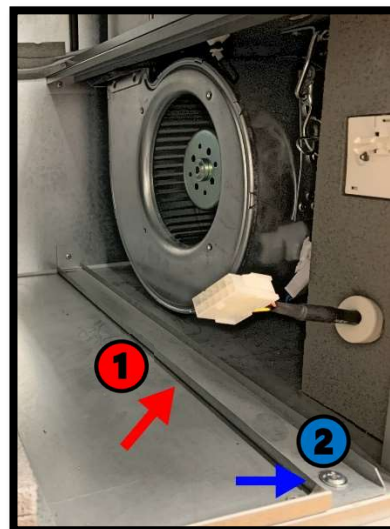

Remove **the screws (1)** from the HRW cover.






Remove **the belt (1)** from the wheel.
Remove **the screws (2)** from the motor package.
Remove **the ground wire (3)**.

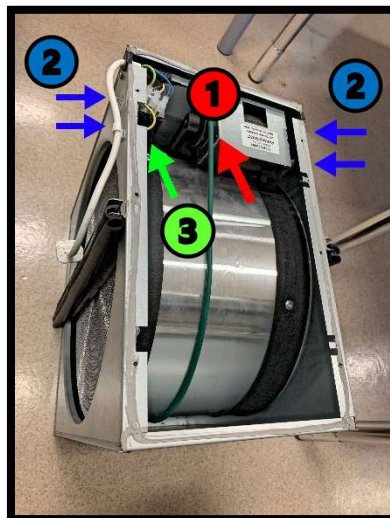

Remove **the motor package**.
Cut a gap for the new motor cable.
 Remove **the rubber sealings (1)**,
 carefully so the brush clips underneath won't come off.

Install **the new motor package (2)** (40028737).
 Install **the rubber sealings (1)** on the opposite side of the brush rail.
 Attach the cover with the screws.


Install **the HRW (1)** and **the filters (2)**.

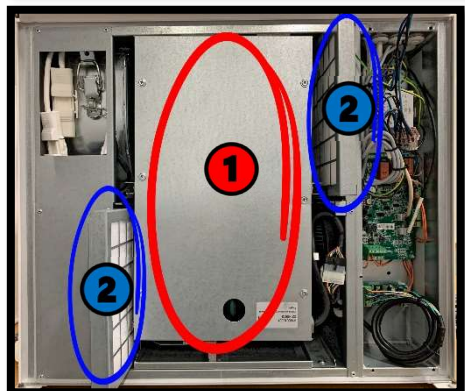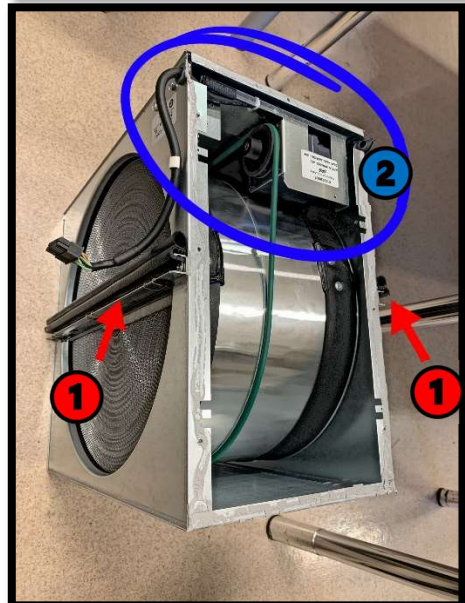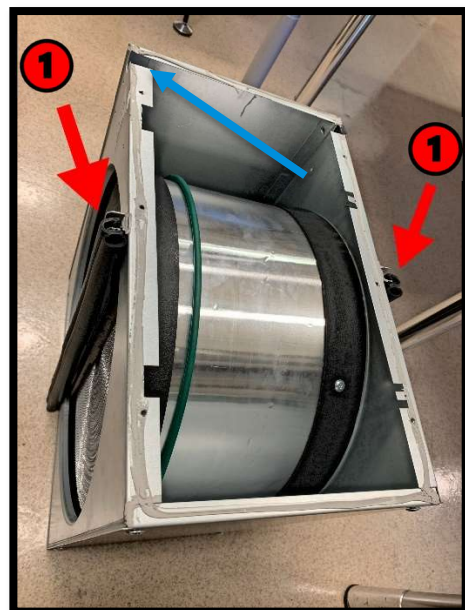


Connect **the display cable (1)** to the main board.



The display cable can be installed either through the cable sealings in the electrical box, or through **the hole in the cover (1)**. The old display cable may also be used, but the joints has to be done carefully and in a proper way. Close the cover of the electrical box.

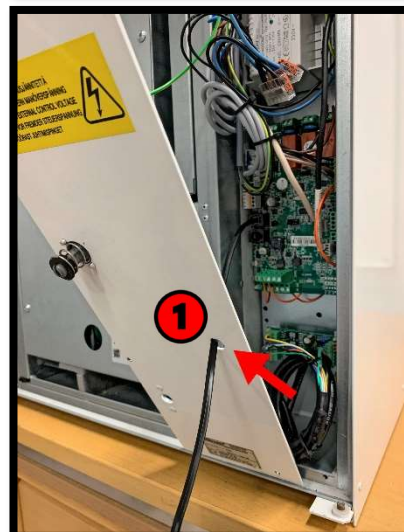


Install **the new display (2)** (40031115) in a desired place.

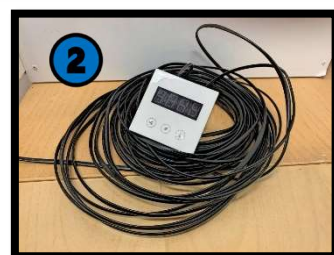

Install **the WiFi module (3)** (40034288).




Turn on **the main switch (1)** and perform insulation and ground continuity test according to regulations.

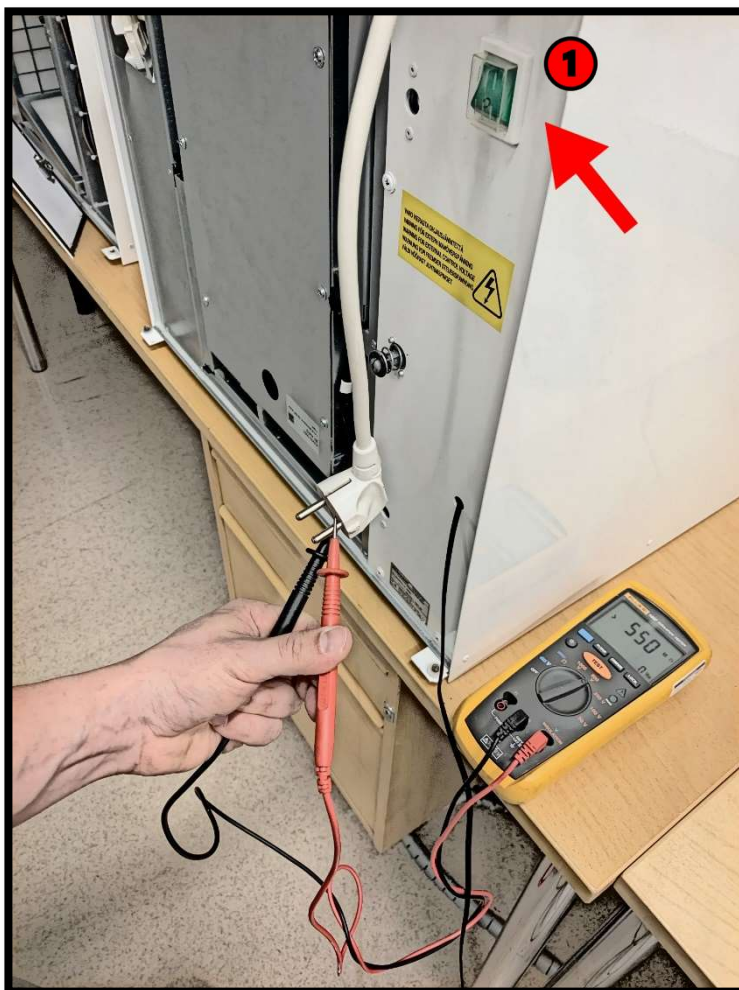



Install the doors by lifting **(upper part first) (1)** so that the lower edge rises above **the pins (2)** and gets into place.

Install **the new type plate sticker (3)**.


Close the doors.

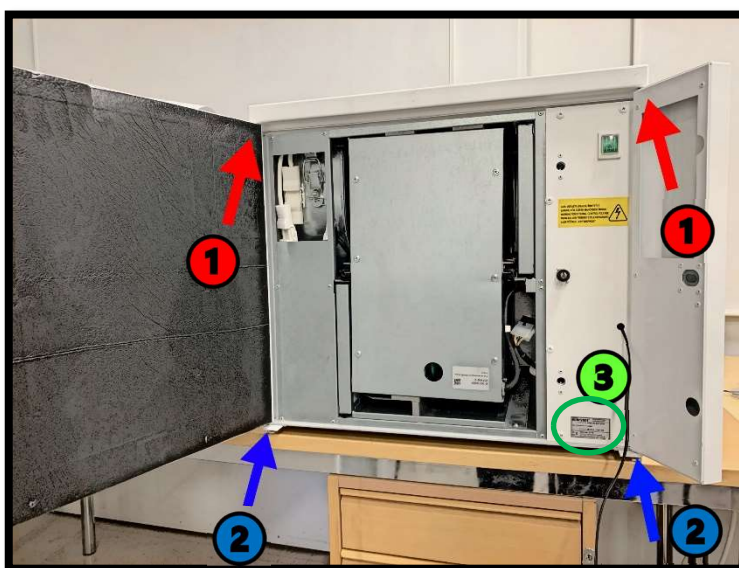

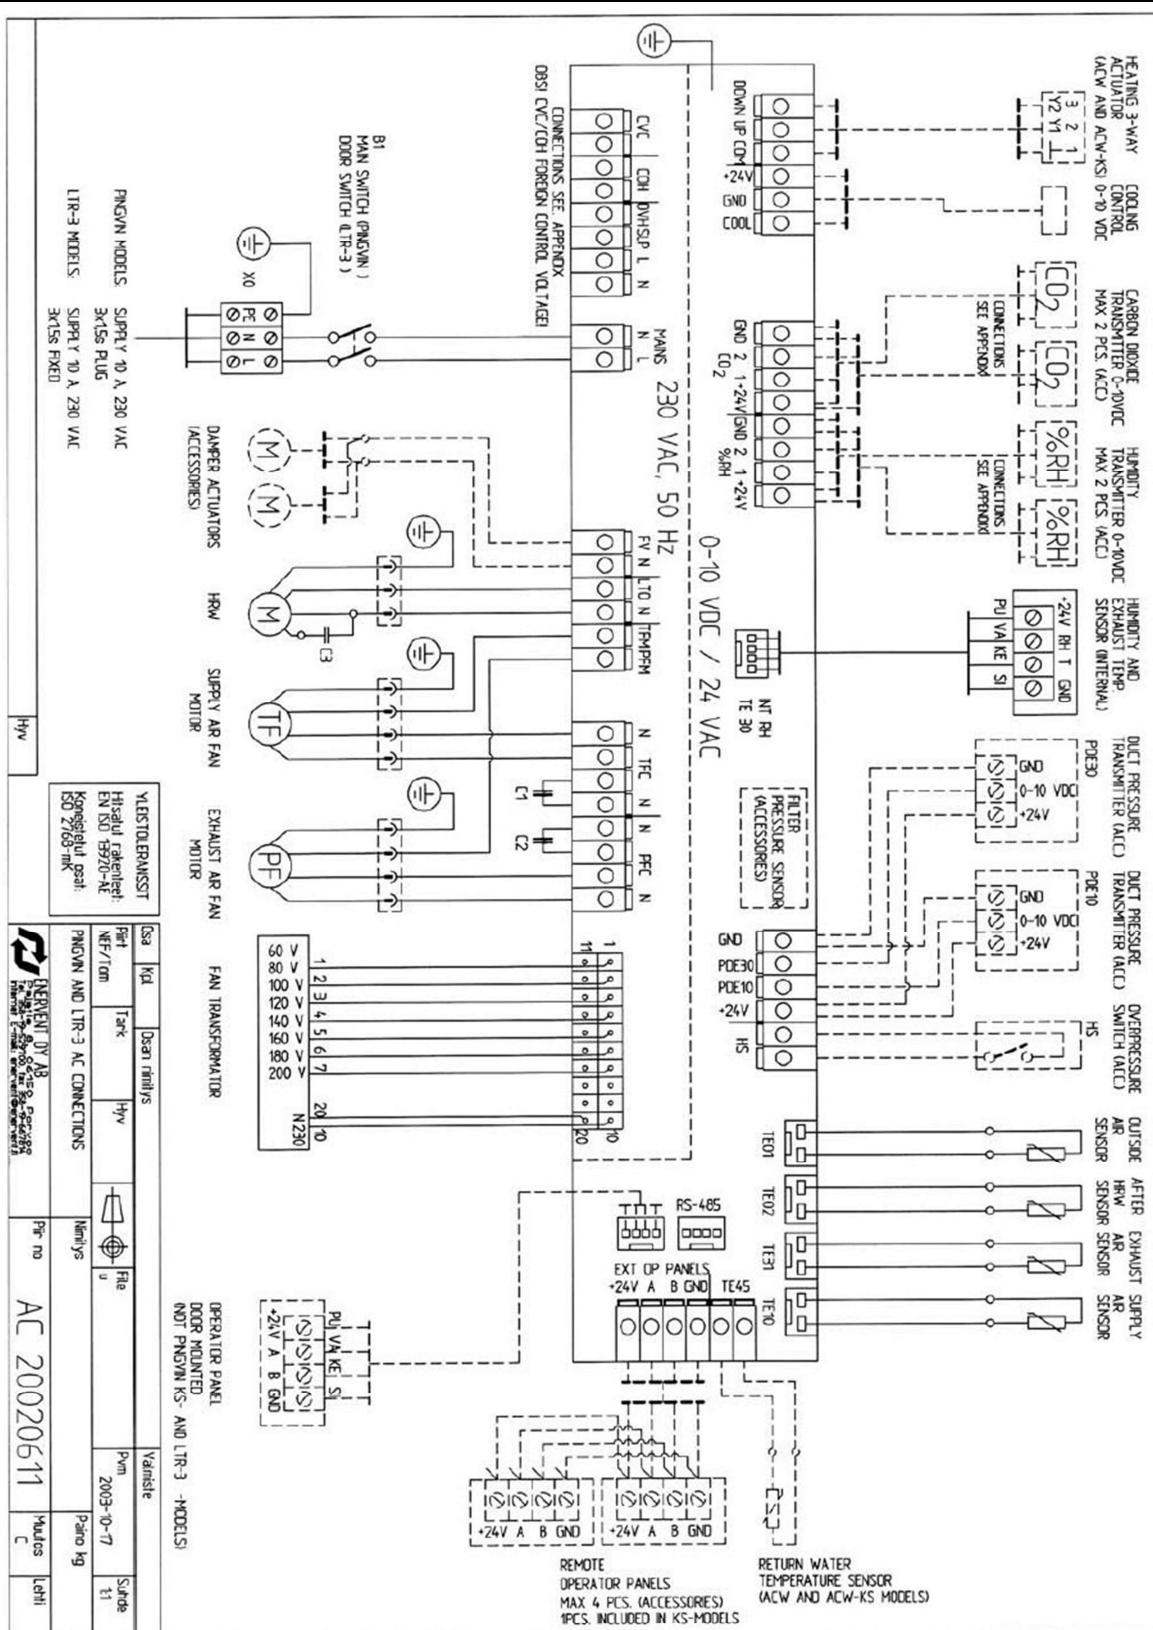

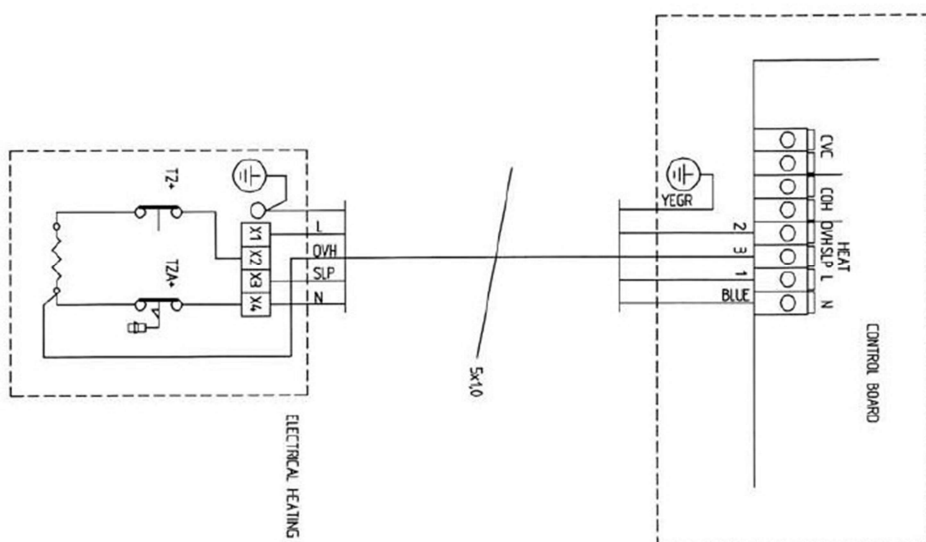



YLESTILTRANSIST Mitsubisi rakennep EN ISO 15920-AE Koneistilid isost ISO 2768-mK			
Osas Kpl Part NEF-TDM TDM	Ocean minlyst Tark TDM	Hyv TDM	Valmist Pvm 2005-10-17 Suhte 1:1
ACE AND DCE -MODELS 		Minlyst ELECTRICAL HEATING CONNECTION CHART	Pairo kg
NENENT OF AB 1-2005-10-17 1-2005-10-17 1-2005-10-17		Piro no ACDC 20020612	Muutos 8 (enil)
Hyv			

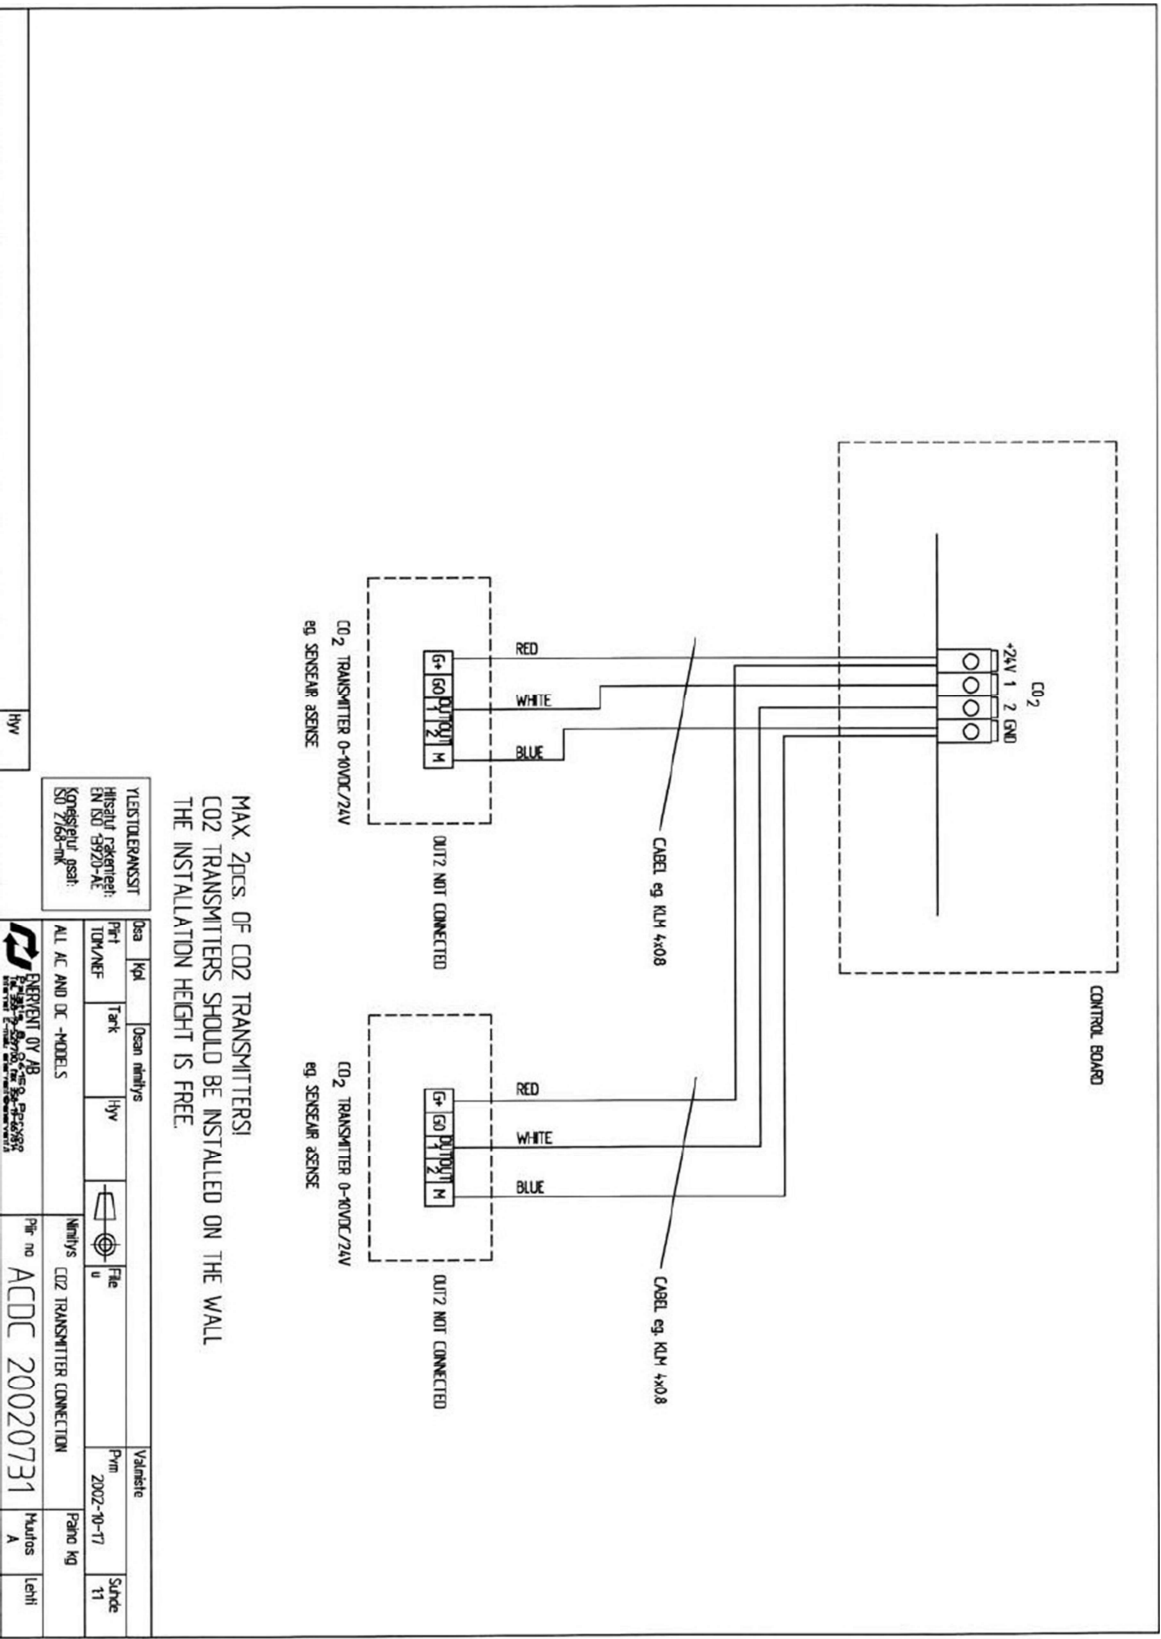






YLESTOLERANSIT
Hissatuf rakerleef
EN SO 1B920-AE
Komeleleuf osat:
SO 2/68-mk

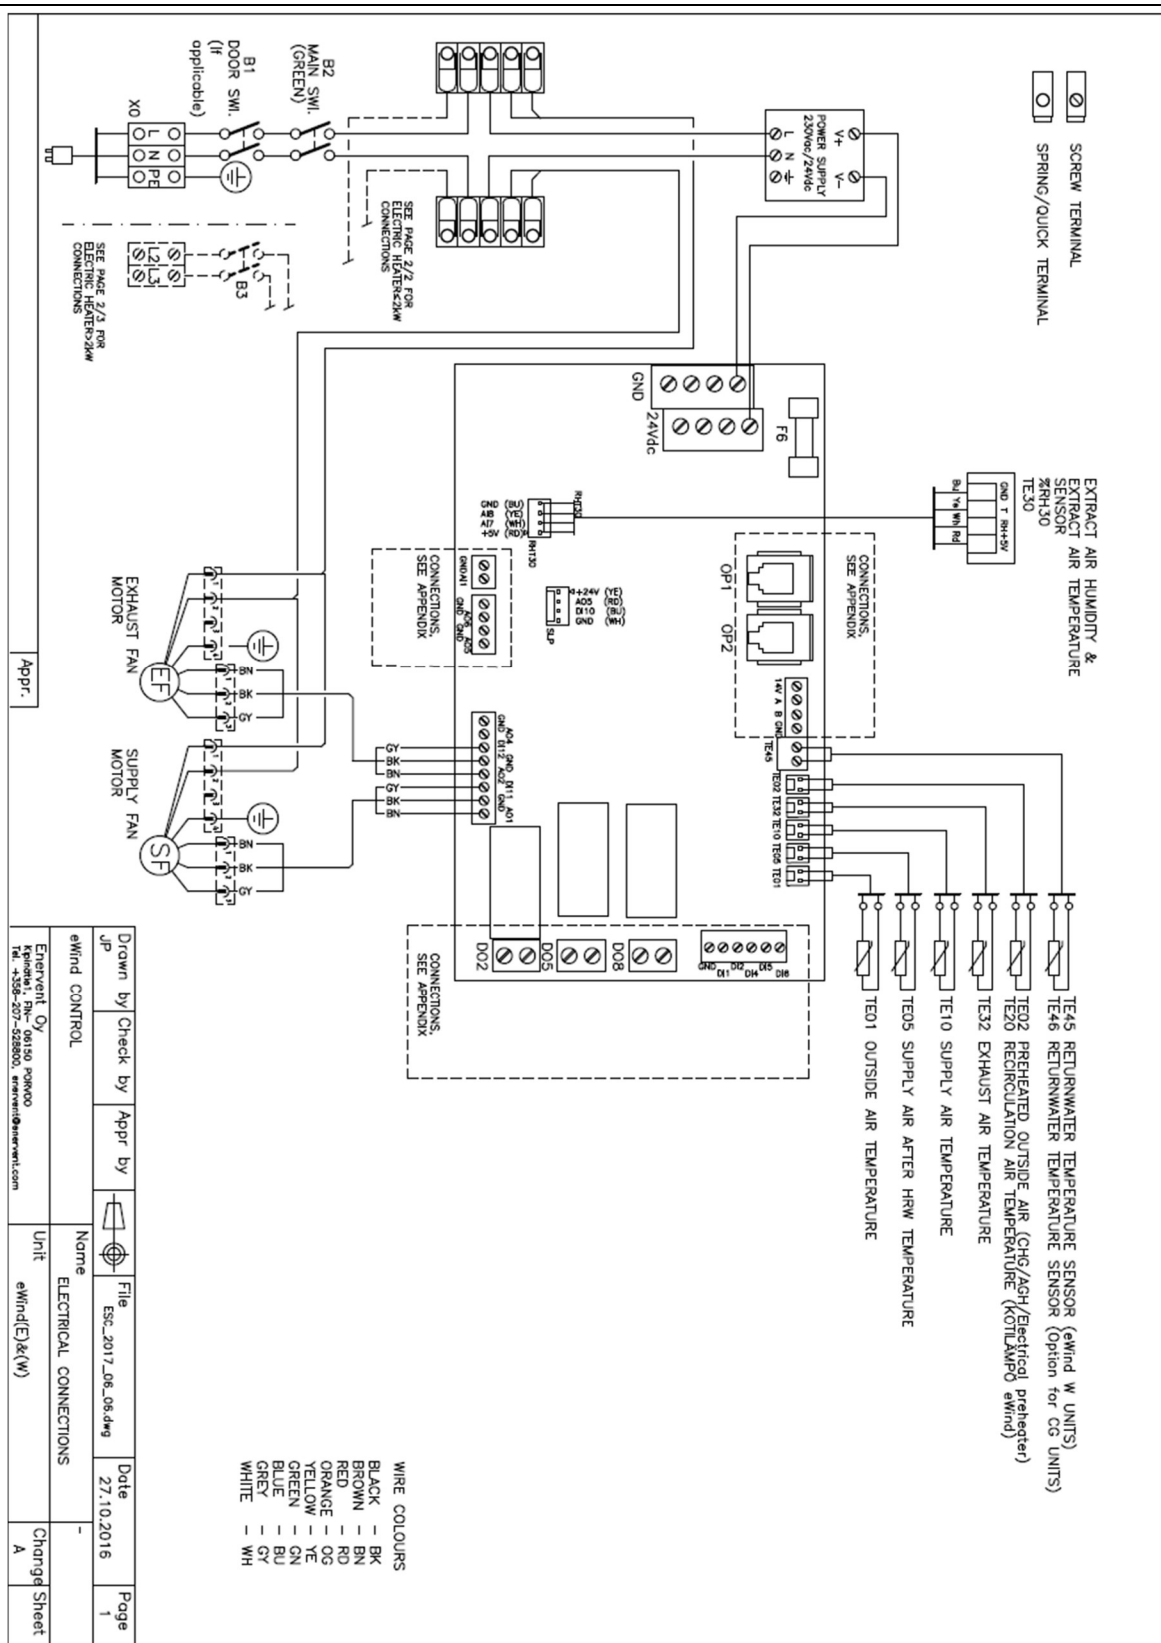

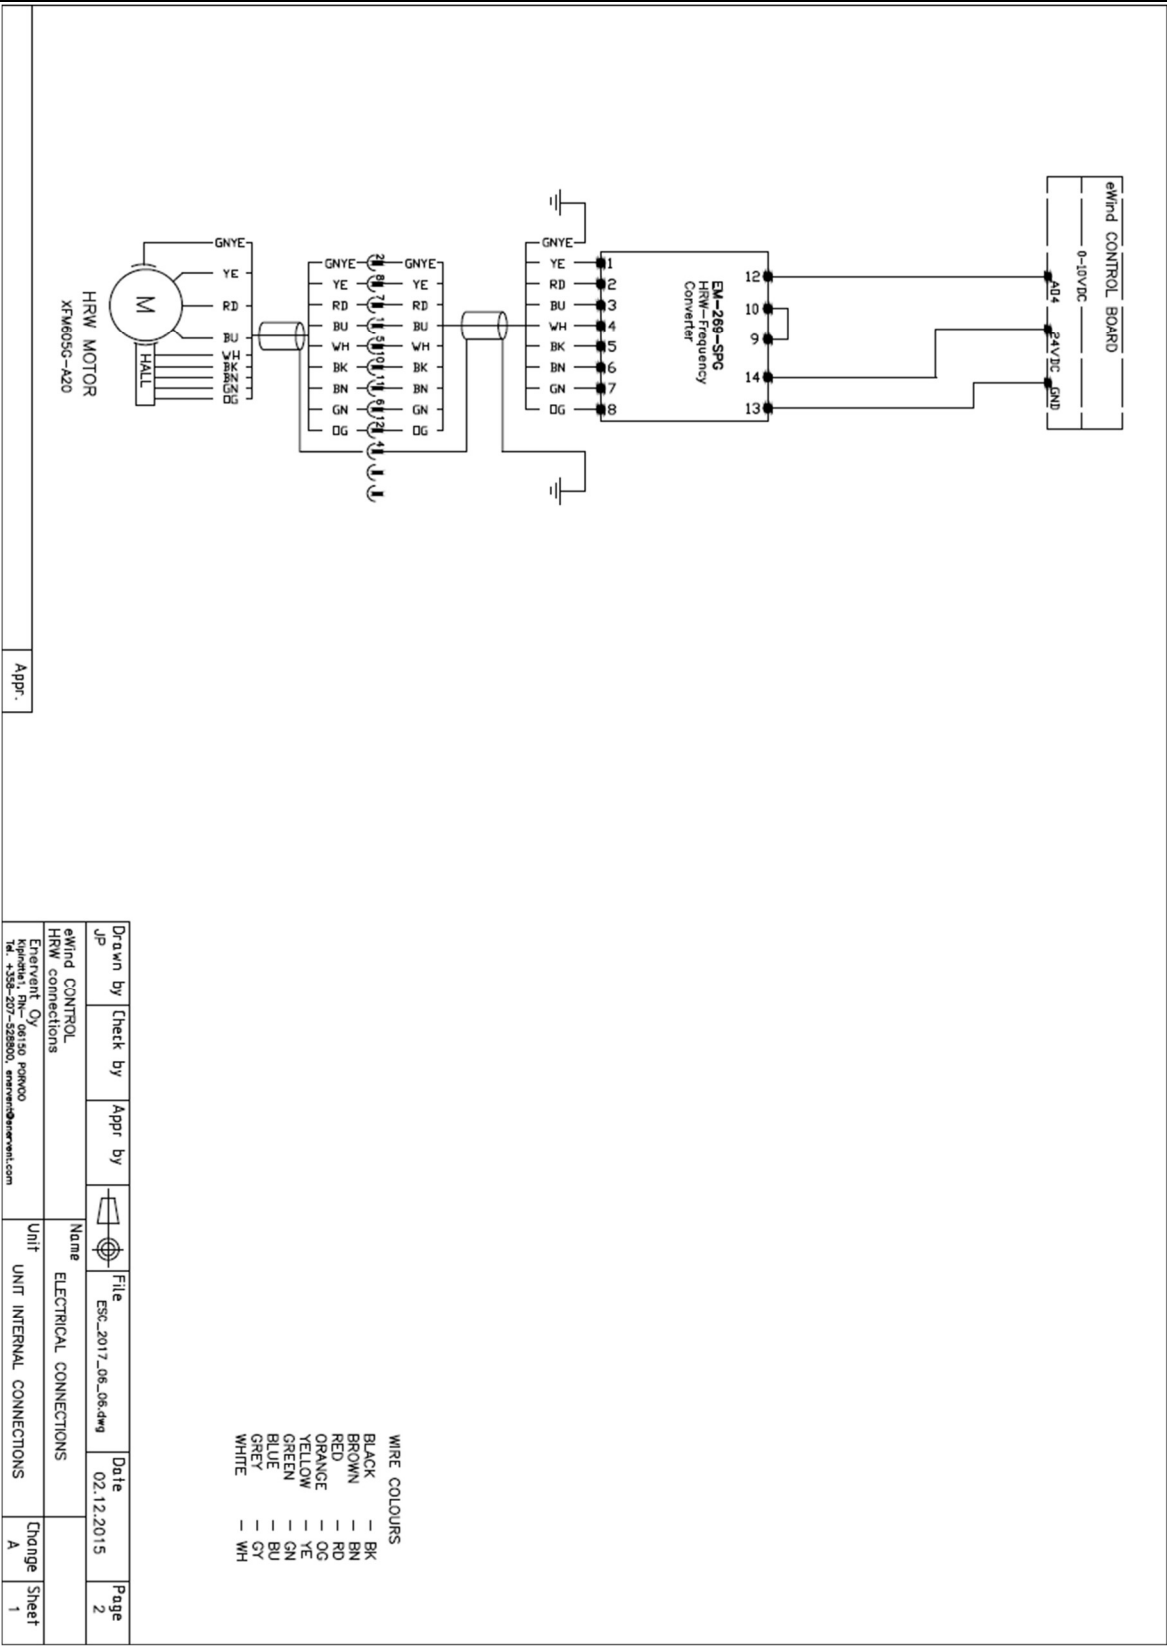

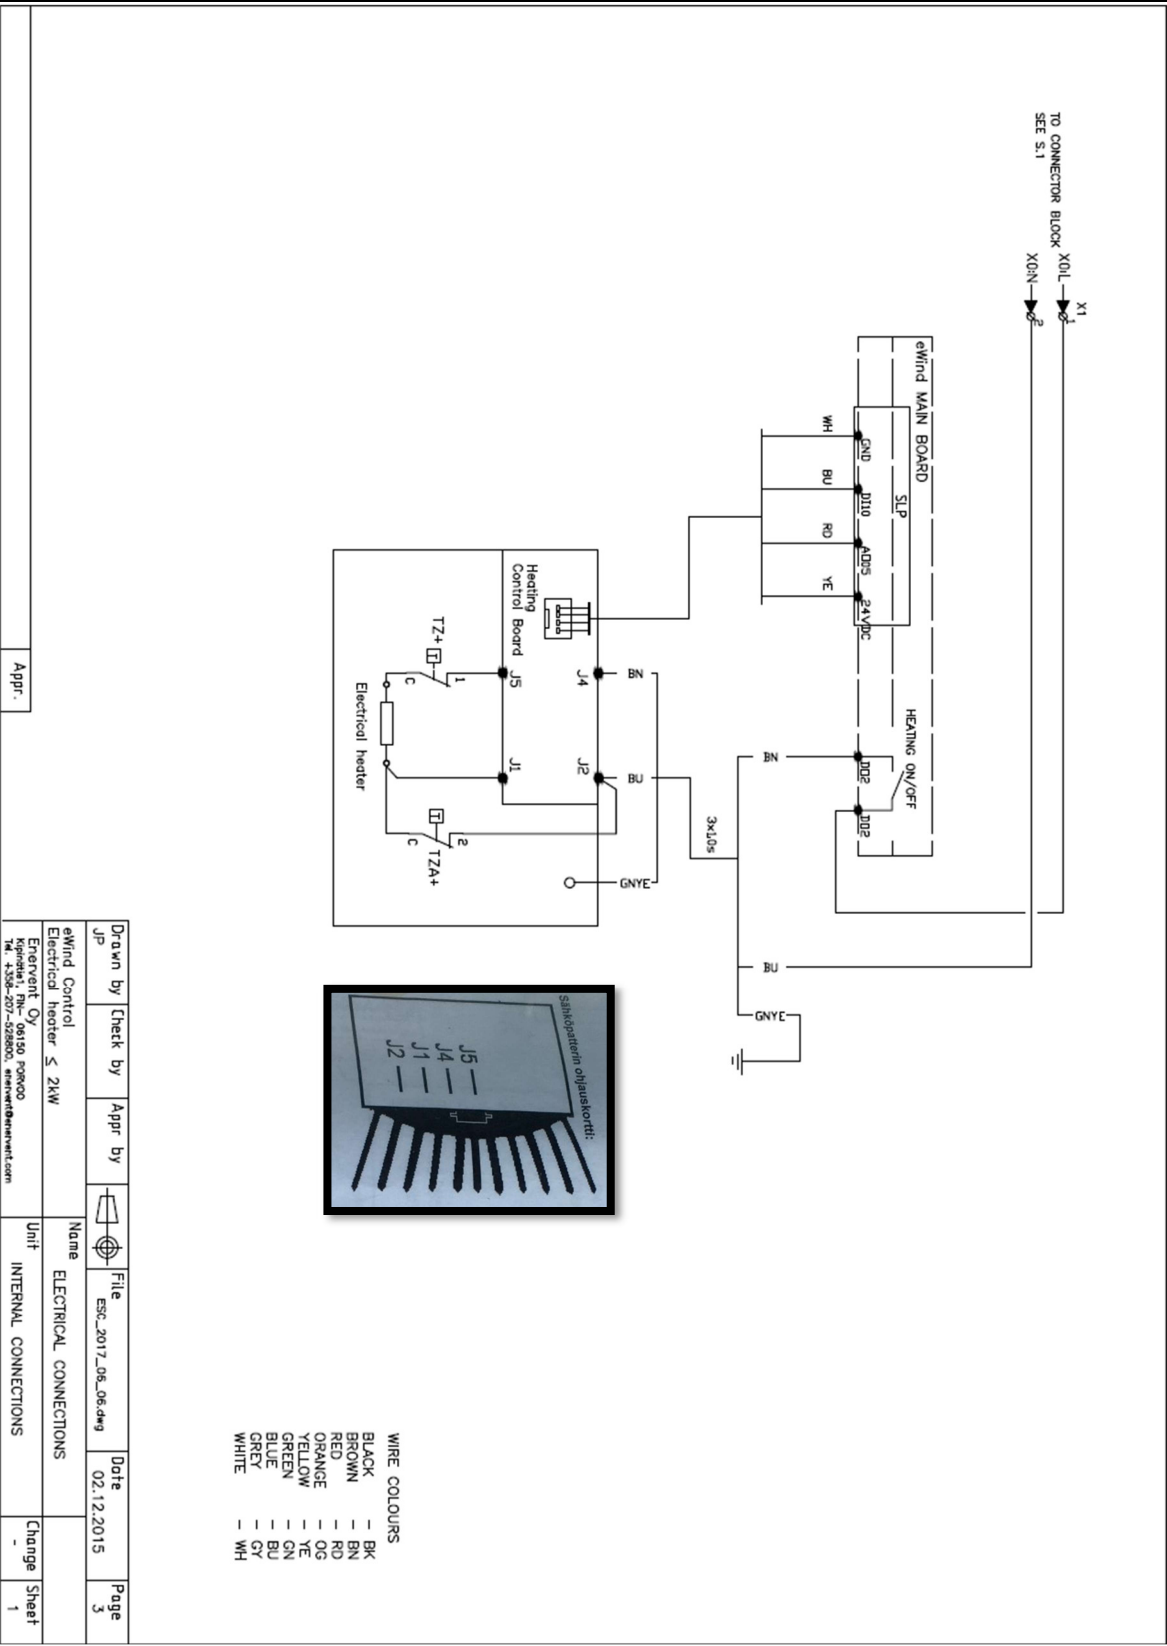

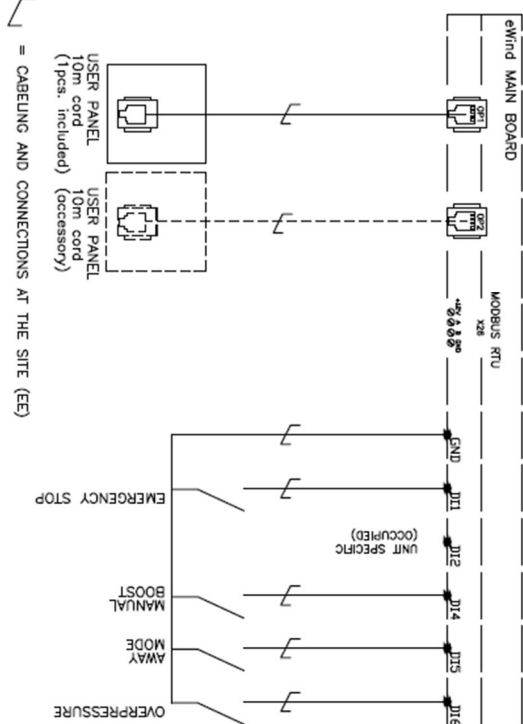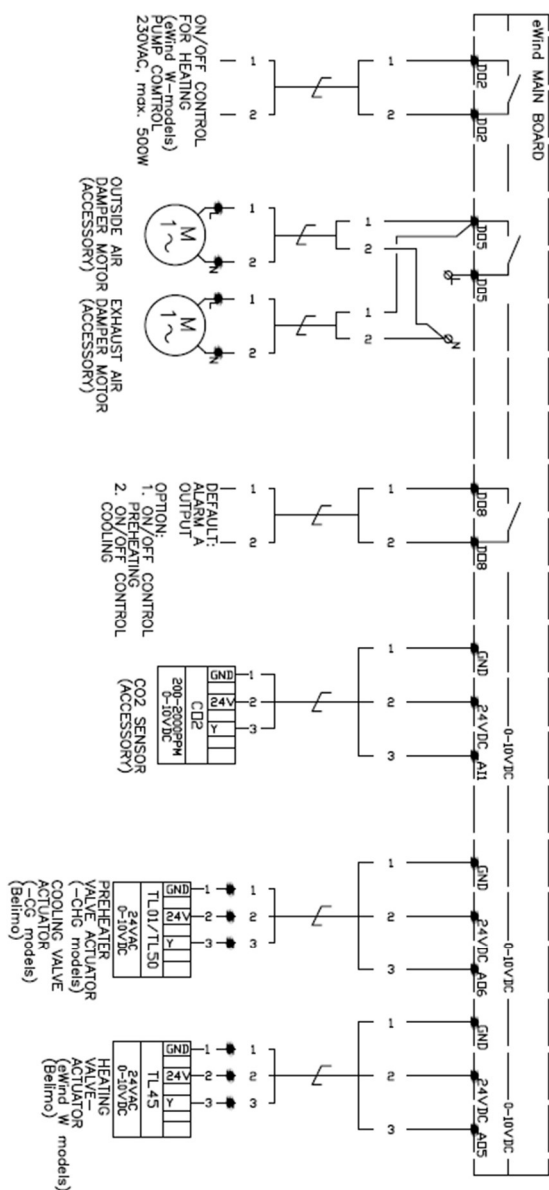

WIRE COLOURS	
BLACK	BK
BROWN	BN
RED	RD
ORANGE	OG
YELLOW	YE
GREEN	GN
BLUE	BU
GREY	GY
WHITE	WH

Drawn by	Check by	Appr by		File	Date	Page
J.P.				Esc_2017_06_06.dwg	2.12.2015	3
eWind Control			Name			
			ELECTRICAL CONNECTIONS			
Enervent Oy Kärsämäki, FIN-00150, PORHOO Tel: +358-207-525800, info@enervent.com			Unit		Change	Sheet
			UNIT EXTERNAL CONNECTIONS		-	

MANDATORY PARTS

10023861	CONTROL UPDATE KIT PING E/ACE/ECE → EWIND E	1
10023125	FAN PACKAGE 118W PINGVIN SUPPLY AIR RIGHT	1
10023126	FAN PACKAGE 118W PINGVIN EXTRACT AIR RIGHT	1
	or	
10023171	FAN PACKAGE 118W PINGVIN SUPPLY AIR LEFT	1
10023170	FAN PACKAGE 118W PINGVIN EXTRACT AIR LEFT	1
10023244	ELECTRICAL HEATER 0,4kW RIGHT	1
	or	
10023243	ELECTRICAL HEATER 0,4kW LEFT	1

Code	Description	Pcs.
10023861	CONTROL UPDATE KIT PING E/ACE/ECE → EWIND E	
	Automation	
40029189	Control board EM-240-M	1
40030936	PCB support KGLS-6S	4
40030937	PCB support LCBSM-6-01	4
40031695	Screw DIN 7981 ZN 3,9x9,5	4
40031631	Screw DIN 7985 ZN M4x20	1
40031537	Washer 6798-A ZN M4x8	3
40031489	Nut DIN 934/8 ZN M4	1
40028772	Wire 65mm orange 0,75mm ²	1
40028773	Wire 340mm orange 0,75mm ²	5
40028774	Wire 255mm 1mm ² black	1
40028779	Wire 255mm 1mm ² blue	1
40031094	eWind main board	1
40029195	Power supply Tufvassons PSLR24	1
40028788	Ground wire 100mm	1
40029341	Terminal SL 4/15	1
40029343	Terminal ES 15 PA	1
40029340	Terminal SRK 2,5/15 PA	2
40029330	PMC SB 5/50 So ERDE	1
40029329	PMC SB 5/50 So L	1
40029327	PMC SB 5/50 FW N	1
40029647	Automation base	1
	Components	
40029346	Connector NAC 31S.W	1
40028768	Adapter	1
40029530	Adapter	1
40030100	Cable sealing VET 5-7	5
40030101	Cable sealing VET 7-10	7
40028783	Fan power cable	1
40028785	Fan signal cable	1
40029167	EDA temperature sensor 1700mm	2
40029166	EDA temperature sensor 1100mm	1
40029165	EDA temperature sensor 850mm	1
40029224	Humidity/temperature sensor Amphenol 600mm	1
40029982	WaGo 221-415	2
40031530	Screw ZN 4,2x25	5
40028776	Wire 250mm black (main switch)	2
40028777	Wire 250mm blue (main switch)	2
40028774	Wire 255mm 1mm ² black	1
40031537	Washer 6798-A ZN M4x8	1
40031489	Nut DIN 934/8 ZN M4	1
40030997	Cable tie 2,5x200mm	10
40028737	HRW motor package stepless DC	1
40033952	Rotor cable DC 105cm	1
40031115	eWind panel package	1
40034288	WiFi module package	1
	eWind installation manual	1
	eWind user manual	1
	Electrical diagrams	1

MANDATORY PARTS

10023858	CONTROL UPDATE KIT PING W/ACW/ECW → EWIND W	1
10023125	FAN PACKAGE 118W PINGVIN SUPPLY AIR RIGHT	1
10023126	FAN PACKAGE 118W PINGVIN EXTRACT AIR RIGHT	1
	or	
10023171	FAN PACKAGE 118W PINGVIN SUPPLY AIR LEFT	1
10023170	FAN PACKAGE 118W PINGVIN EXTRACT AIR LEFT	1

Code	Description	Pcs.
10023858	CONTROL UPDATE KIT PING W/ACW/ECW → EWIND W	

Automation

40029189	Control board EM-240-M	1
40030936	PCB support KGLS-6S	4
40030937	PCB support LCBSM-6-01	4
40031695	Screw DIN 7981 ZN 3,9x9,5	4
40031631	Screw DIN 7985 ZN M4x20	1
40031537	Washer 6798-AZN M4x8	3
40031489	Nut DIN 934/8 ZN M4	1
40028772	Wire 65mm orange 0,75mm ²	1
40028773	Wire 340mm orange 0,75mm ²	5
40028774	Wire 255mm 1mm ² black	1
40028779	Wire 255mm 1mm ² blue	1
40031094	eWind main board	1
40029195	Power supply Tufvassons PSLR24	1
40028788	Ground wire 100mm	1
40029341	Terminal SL 4/15	1
40029343	Terminal ES 15 PA	1
40029340	Terminal SRK 2,5/15 PA	2
40029330	PMC SB 5/50 So ERDE	1
40029329	PMC SB 5/50 So L	1
40029327	PMC SB 5/50 FW N	1
40029647	Automation base	1

Components

40029346	Connector NAC 315.W	1
40028768	Adapter	1
40029530	Adapter	1
40030100	Cable sealing VET 5-7	5
40030101	Cable sealing VET 7-10	7
40028783	Fan power cable	1
40028785	Fan signal cable	1
40029168	EDA temperature sensor 3000mm	1
40029167	EDA temperature sensor 1700mm	1
40029166	EDA temperature sensor 1100mm	1
40029165	EDA temperature sensor 850mm	1
40029228	Return water sensor, surface	1
40029224	Humidity/temperature sensor Amphenol 600mm	1
40029982	WaGo 221-415	4
40031530	Screw ZN 4,2x25	2
40028776	Wire 250mm black (main switch)	2
40028777	Wire 250mm blue (main switch)	2
40028774	Wire 255mm 1mm ² black	1
40031537	Washer 6798-AZN M4x8	1
40031489	Nut DIN 934/8 ZN M4	1
40030997	Cable tie 2,5x200mm	10
40028737	HRW motor package stepless DC	1
40033952	Rotor cable DC 105cm	1
40031115	eWind panel package	1
40034288	WiFi module package	1
40034505	Valve actuator TR24-SR	1

Manuals etc. (depends on model)

eWind installation manual	1
eWind user manual	1
Electrical diagrams	1

Notes: